



POSIZIONI COMMUTATORE

	17	111	119	222	222	212	21	214	27	27	221	216	31	35	39	315	318	42	46	422	422	
⊙ RIPOSO	•			•				○				○							○	○	○	
⊕ RIADVOLG.			•			○	•	•	•	•	•	•		•	•				○	○	•	•
⊕ RIPRODUZ.			•				•	•	•	•	•	•		•	•				•	•	•	•
⊕ REGISTRAZ.	•		•				•	•	•	•	•	•		•	•				•	•	•	•

COMM. MOTORE

	42	43	44	45	46
1	•	•	•	•	•
2	•	•	•	•	•
3	•	•	•	•	•
4	•	•	•	•	•
5	•	•	•	•	•
6	•	•	•	•	•

