



NOTES

INPUT AND FUNCTION SELECTORS SHOWN IN FULL CCW POSITION VIEWED FROM FRONT PANEL.

ALL CAPACITORS IN μ FD UNLESS OTHERWISE SPECIFIED.

ALL RESISTORS 1/2 WATT UNLESS OTHERWISE SPECIFIED.

→ INDICATES CLOCKWISE TRAVEL

VOLTAGES TAKEN WITH HEATHKIT VTVM, 117 V AC LINE SOURCE.

VOLTAGES MAY VARY $\pm 10\%$ DUE TO TOLERANCE OF COMPONENTS.

INPUT SELECTOR IN AUX POSITION; VOLUME FULL CCW; BASS AND TREBLE 1/2 TOTATION.

FUNCTION SELECTOR IN STEREO POSITION; WORK VOLTAGE READINGS.

OUTPUTS LOADED WITH 16 Ω 20 W RESISTORS.

○ INDICATES VOLTAGE READING.

ALL READINGS FROM TEST POINT TO COMMON GROUND.

**HEATHKIT
STEREO AMPLIFIER
MODEL 5A-2**

*A' CHANNEL TO SPEAKER

*B' CHANNEL TO SPEAKER

CONNECT TO PROPER "2" TAP

"B" CHANNEL SPEAKER NOR PHASE REVERSAL

POWER TRANSFORMER #34-93

AC SWITCH LOCATED ON REAR OF TREBLE CONTROL

