



- NOTES:**
1. ALL RESISTORS ARE 1/2 WATT AND IN OHMS; MICA CAPACITORS ARE 500V AND IN μmfd ; PAPER CAPACITORS ARE 500V, UNLESS OTHERWISE SPECIFIED.
 2. BAND SWITCH SR30 SHOWN IN COUNTER-CLOCKWISE (FM) POSITION.
 3. TONE SWITCH SR27 SHOWN IN COUNTER-CLOCKWISE (RADIO BASS) POSITION.
 4. I.F. FREQUENCY IS 455KC ON AM AND 10.7MC ON FM.
 5. S-1 IS MOUNTED ON RP11-105A.
 6. C6-A AND C6-C ARE FM SECTIONS OF VARIABLE CAPACITOR CV15-2.
 7. C6-B AND C6-D ARE AM SECTIONS OF VARIABLE CAPACITOR CV15-2.
 8. SR27 TONE CONTROL POSITIONS:

1. BASS	} RADIO
2. MUSIC	
3. TREBLE	
4. BASS	} PHONO
5. MUSIC	