



**LOCATION OF TUBES**

- NOTES:**
1. ALL RESISTORS ARE IN OHMS AND ARE 1/2 WATT; MICA CAPACITORS ARE 500V. AND IN PAPER CAPACITORS ARE 500V, UNLESS OTHERWISE SPECIFIED.
  2. BANDSWITCH SR24 SHOWN IN COUNTER-CLOCKWISE (BC) POSITION.
  3. TONESWITCH SR30 SHOWN IN COUNTER-CLOCKWISE (RADIO BASS) POSITION.
  4. I. F. FREQUENCY IS 455KC.
  5. S-1 IS MOUNTED ON RP11-105A.
  6. SR27 TONE CONTROL POSITIONS.
    - 1. BASS
    - 2. MUSIC
    - 3. TREBLE
    - 4. BASS
    - 5. MUSIC
- } RADIO  
} PHONO