


*Wien*

FLIGHT 3

VHF / FM / AM

10 TRANSISTOR RADIO

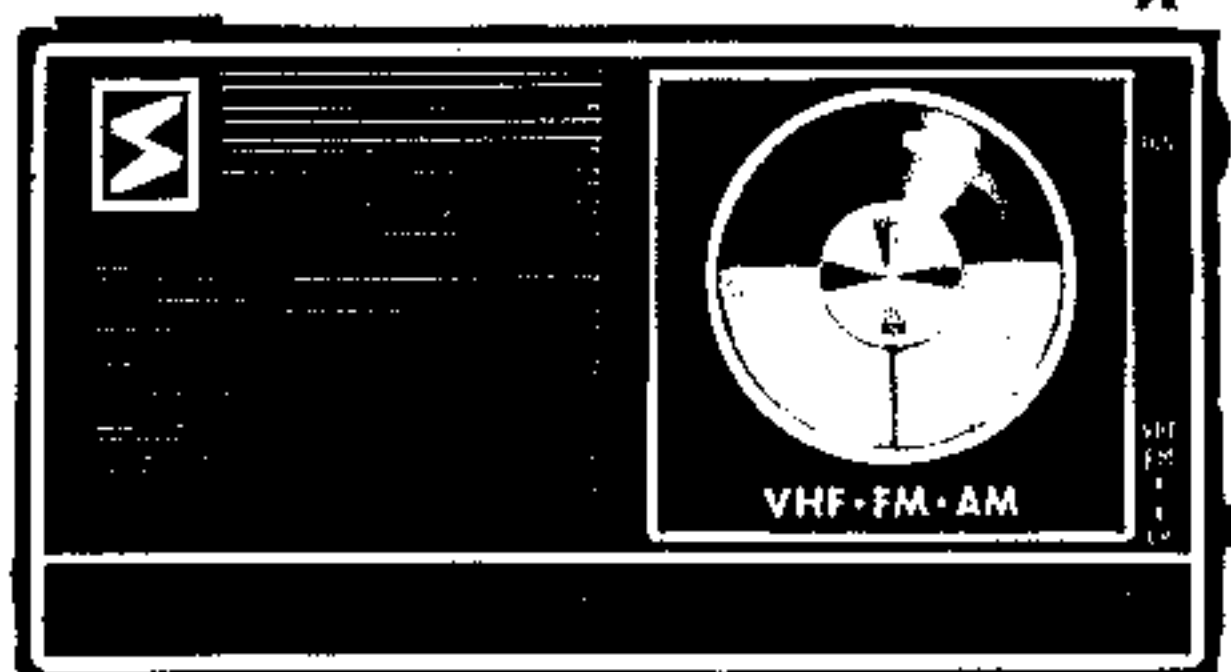

Instruction Booklet

The fine reception qualities of your FLIGHT 3 will become more readily apparent by following the instructions below.

(Refer to the pictures on next page)

Open back cover of the case, insert the 9 Volt battery supplied.

(1) Band switch:

Select the combined VHF-FM band by placing the switch in the upper position. The AM band is selected in the lower position.

(2) On-Off switch and volume control:

Turn receiver on and adjust volume by rotating this knob clockwise.

(3) Tuning:

Rotate knob to select desired station.

(4) Antenna:

FLIGHT 3 utilizes an adjustable telescopic VHF-FM antenna. For best VHF-FM reception do not extend antenna fully except for long distance reception. An internal fixed loop antenna is provided for the AM band and no adjustment is required.

(5) Earphone jack:

In addition to speaker operation this radio can also be used with magnetic earphone. Plug the earphone into the earphone jack. This will automatically cut off the speaker.

(6) External power jack:

Caution: Do not connect AC power directly into the external power jack. An AC adapter must be used and is an optional accessory. When the 9 volt AC adapter plug is inserted, the receiver can be used without battery.

