
TECHNICAL INFORMATION
AND SERVICE DATA

RADIOLA

Model 526-M

FIVE VALVE, THREE BAND, A.C. OR D.C. OPERATED SUPERHETERODYNE

ISSUED BY AMALGAMATED WIRELESS (A/SIA) LTD.

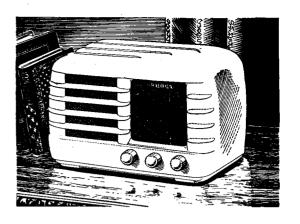

ELECTRICAL SPECIFICATIONS.

FREQUENCY RANGES:

INTERMEDIATE FREQUENCY: 455 Kc/s

Power Supply Rating: 210-250 volts A.C. or D.C. (See "Connection to Power Supply" for 105-125 volts operation)

Valve Complement.


- (I) X76M Converter
- (2) W76 I.F. Amplifier
- (3) DH76 Detector, A.F. Amplifier, A.V.C
- (4) KT71 Output
- (5) U76 Rectifier
 - 1.61 Barretter

Loudspeaker (Permanent Magnet)

5 inch—code number AC46 Transformer—XA21

V.C. Impedance—3 ohms at 400 C.P.S.

 CONTROLS 526 - M





MECHANICAL SPECIFICATIONS.

	leight	Width	Depth
Cabinet Dimensions (inches)	$7\frac{3}{4}$	12	63
Chassis Base Dimensions (ins.)	$2\frac{1}{2}$	13	5 <u>1</u>
Weight (nett lbs.)	16		
Cabinet Colours: Walnut, Ivory, I	Buraund	/	

General Description.

The Model 526-M is an A.C./D.C. operated mantel model, housed in a moulded plastic cabinet

Features of its design include:-

Tropic-proof construction, automatic volume control, magnetite cores in I.F. transformers and broadcast oscillator coil, air-dielectric trimming capacitors.

D.C. RESISTANCE OF WINDINGS

Winding	D.C. Resistance in ohms	
Aerial Coil (M.W.)		
Primary (L2)	16	
Secondary (L3)	5 .	
Aerial Coil (S.W.)	-	
Primary (L7)	3	
Secondary (L8)	*	
R.F. Coil (M.W.)		
Primary (L4)	35	
Secondary (L5)	4	
R.F. Coil (S.W.)		
Primary (L9)	*	
Secondary (L10)	*	
Oscillator Coil (M.W.) (L6)	5	
Oscillator Coil (S.W.) (L11)	*	
I.F. Filter (L1)	17.5†	
I.F. Transformer Windings	10	
R.F. Choke (L17, L19, L20)	*	
H.T. Filter Choke (L16)	200	
R.F. Choke (L18)	18	
Loudspeaker Input Transformer (T1)		
Primary	430 or 525	
Secondary	*	
Vibrator Transformer (T2)		
Primary	3	
Secondary	900	

The above readings were taken on a standard chassis, but substitution of materials during manufacture may cause variations, and it should not be assumed that a component is faulty if a slightly different reading is obtained.

SOCKET VOLTAGES

	VALVES	Cathode to Chassis Volts	Screen Grid to Chassis Volts	Plate to Chassis Volts	Plate Current mA	Heater Volts**
6BA6	R.F. Amp. M.W.	1.7	70	200	2.75	6.3
	S.W	1.8	70	200	2.85	6.3
6BE6	Converter M.W.	-	70	200	1.25	6.3
	S.W		70	200	1.25	6.3
6BA6	I.F. Amp	1.8	70	200	3.1	6.3
6AV6	Det., A.F. Amp. A.V.C	.05		70†	0.5	6.3
	Output	9.0	200	190	34	6.3

Total H.T. Current — 56 mA.

Measured with receiver connected to 32V D.C. Supply.

Total Input Current — 1.3 Amp.

^{*} Less than 1 ohm.


[†] In some receivers this reading may be as high as 60 ohms.

Volume Control Max. Power-Tone Switch "Speech" Anti-clockwise Position. No Signal input.

Voltmeter 1000 ohms per volt; measurements taken on highest scale giving accurate readable deflection.

[†] Cannot be measured with ordinary voltmeter.

^{**} These readings are nominal and will vary due to the Series Heater connections.

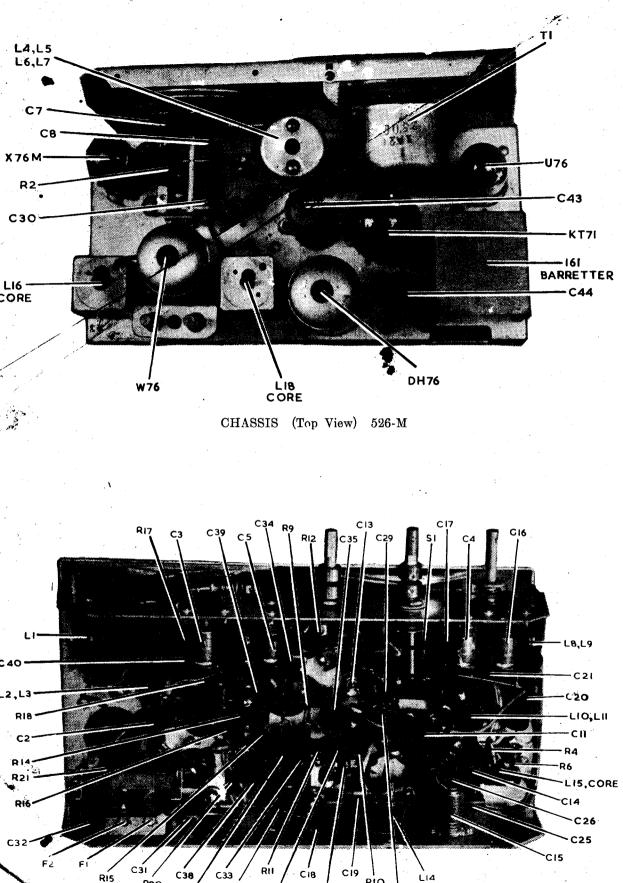

CHASSIS (Underneath View) 526-M

RIO

L12 L13


L'17 CORE

R2O

R7

RI3

C 12

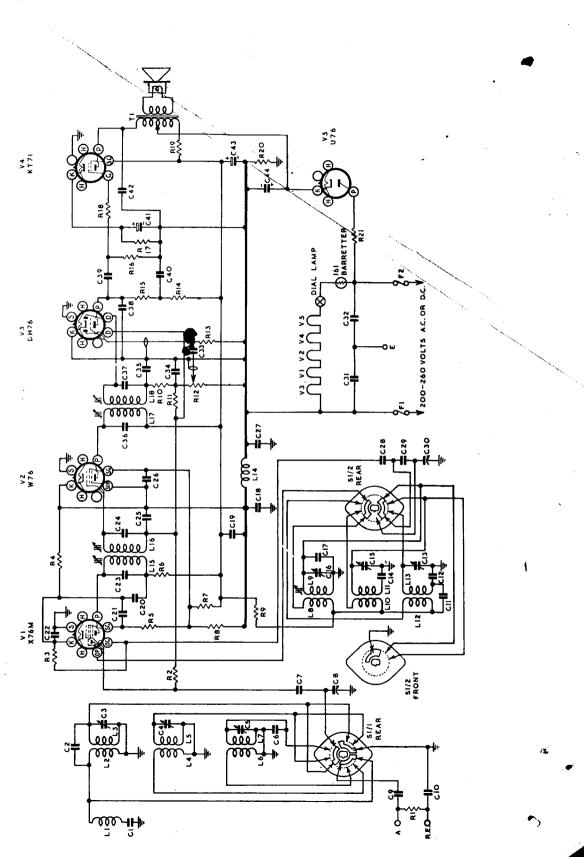

ALIGNMENT PROCEDURE.

Manufacturer's Setting of Adjustments.

The receiver is tested by the manufacturer with precision instruments and all adjusting screws are sealed. Re-alignment should be necessary only when components in tuned circuits are repaired or replaced or when it is found that the seals over the adjusting screws have been broken.

It is especially important that the adjustments should not be altered unless in association with the correct testing

instruments listed below.

Under no circumstances should the plates of the ganged tuning capacitor be bent, as the unit is accurately aligned during manufacture and cannot be re-adjusted unless by skilled operators using specialised equipment.

For I.F. alignment, connect the "low" side of the signal

generator to the receiver chassis, whilst for all other alignment operations to the terminal marked "R.E.," i.e., Radio Earth. Also, keep the generator output as low as possible to avoid A.V.C. action and the volume control in the maximum clockwise position.

Testing Instruments.

(1) A.W.A. Junior Signal Generator, type 2R3911, or

(2) A.W.A. Modulated Oscillator, type J6726. If the modulated oscillator is used, connect an 0.25 megohm non-inductive resistor across the output terminals, and, for short wave alignment, an additional 400 ohms non-inductive resistor in series with the "high" output lead of the instrument.

(3) A.W.A. Output Meter, type 2M8832.

ALIGNMENT TABLE.

Order	Connect "high" side of generator to:	Tune Generator to:	Tune Receiver Dial to:	Adjust for maximum peak output
2 3 4	X76M*	455 Kc/s	540 Kc/s	L18 Core
	X76M*	455 Kc/s	540 Kc/s	L17 Core
	X76M*	455 Kc/s	540 Kc/s	L16 Core
	X76M*	455 Kc/s	540 Kc/s	L15 Core
	Repeat the abov	ve adjustments until the mo	aximum output is obtain	ned.
5	Aerial Terminal	600 Kc/s	600 Kc/s	L.F. Osc. Core Adj. (L9)†
6	Aerial Terminal	1500 Kc/s	1500 Kc/s	H.F. Osc. Adj. (C16)
7	Aerial Terminal	1500 Kc/s	1500 Kc/s	H.F. Aer. Adj. (C3)
		Repeat adjustments 5, 6,	, and 7.	
8	Aerial Terminal	6.5 Mc/s	6.5 Mc/s	H.F. Osc. Adj. (C15)§
9	Aerial Terminal	6.5 Mc/s	6.5 Mc/s	H.F. Aer. Adj. (C4)§‡
10	Aerial Terminal	20 Mc/s	20 Mc/s	H.F. Osc. Adj. (C13)§
11	Aerial Terminal	20 Mc/s	20 Mc/s	H.F. Aer. Adj. (C5)§‡

*With grid clip connected. An 0.001 uF capacitor should be connected in series with the "high" side of the test instrument. Rock the tuning control back and forth through the signal.

§6.5 and 20 Mc/s setting on the dial corresponds with the 1500 Kc/s mark.

||Use minimum capacity peak if two can be obtained. Check to determine that the trimmer has been adjusted to correct peak by tuning the receiver to approximately 5.6 Mc/s or 19.1 Mc/s as the case may be, where a weaker signal should be received. *Use maximum capacity peak if two can be obtained.

Connection to Power Supply.

The design of the instrument is such that it may be connected to any supply, A.C. or D.C., for the following range:-

210-250 volts.

The receiver may, however, be operated from 115 volts mains after carrying out the circuit modifications shown in the accompanying diagram.

The following lists show the components to be deleted and CHATT those to be added :--

Delete: R5 — 800 ohms ½ watt

R7 — 25,000 ohms 2 watt

R8 — 20,000 ohms I watt

R9 - 20,000 ohms I watt

R17 — 200 ohms 3 watt

R21 - 200 ohms 20 watt

161 Barretter

Panel Lamp

I - 120 ohms 3 watt


2 - 1,000 ohms 1 watt

2 - 20,000 ohms I watt

Important.

Add:


When connected to D.C. mains, the receiver will operate only when the power cable is inserted in the power point with the correct polarity. Should the receiver fail to operate

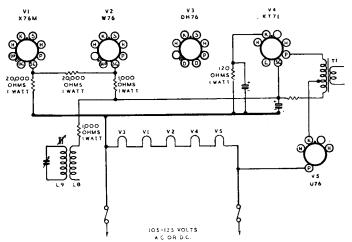



after the warm-up period of two minutes has elapsed, switch off the power point and reverse the plug in the socket.

MODEL 526-M—CIRCUIT CODE.

Code No.	Description	Part No.	Code No.	Description	Part No.
L1 L2, L3 L4, L5 L6, L7 L8, L9 L10, L11 L12, L13 L14 L15, L16 L17, L18	I.F. Filter (including C1) Aerial Coil 540-1600 Kc/s Aerial Coil 2.3-7 Mc/s Aerial Coil 7-22 Mc/s Oscillator Coil 540-1600 Kc/s Oscillator Coil 2.3-7 Mc/s Oscillator Coil 7-22 Mc/s R.F. Choke Ist I.F. Transformer	9382 15454 17562 17562 9206A 25115 9205A 25263 25116 22703	C10 C11 C12 C13 C14 C15 C16 C17 C18	500 X uuF Mica (2000V test) 0.05 uF Paper 400V working 4000 uuF Padder ± 2½% 2-20 uuF Air Trimmer 1700 uuF Padder ± 2½% 2-20 uuF Air Trimmer 2-20 uuF Air Trimmer 4 uuF Mica 0.01 uF Paper 600V working	
	RESISTORS		C19 C20	0.02 uF Paper 600V working 0.05 uF Paper 400V working	
R1 (R2 (R3 (R4 (R5	0.1 Megohm ½ watt 0.5 megohm ½ watt 30,000 ohms ½ watt 320 ohms ½ watt 5,000 ohms ½ watt 25,000 ohms ½ watt 20,000 ohms 1 watt 20,000 ohms 1 watt 20,000 ohms ½ watt 2 megohms ½ watt 0.5 megohm Volume	5707	C21 C22 C23 C24 C25 C26 C27 C28 C29 C30 C31 C32 C32 C33 C34 C35 C35 C36 C37 C38 C37 C38 C37 C38 C37 C31 C32 C31 C32 C31 C32 C31 C32 C31 C32 C31 C32 C31 C32 C31 C31 C32 C31 C31 C31 C31 C31 C31 C31 C31 C31 C31	0.05 uF Paper 400V working 0.01 uF Paper 600V working 70 uuF Silvered Mica 70 uuF Silvered Mica 0.05 uF Paper 200V working 0.05 uF Paper 400V working 0.05 uF Paper 600V working 0.035 uF Paper 600V working 0.05 uF Paper 400V working 0.01 uF Paper 600V working 100 uuF Mica 70 uuF Silvered Mica 70 uuF Silvered Mica 200 uuF Mica 0.01 uF Paper 600V working 0.1 uF Paper 600V working 0.1 uF Paper 600V working 0.1 uF Paper 600V working	1 18621 1
	200 ohms 20 watt (wire wound)	C42 C43	0.025 uF Paper 400V workin 30 uF 350 P.V. Electrolytic	19
	CAPACITORS		C44	30 uF 350 P.V. Electrolytic	
C2 C3 C4 C5 C6 C7 C8	2-20 uuF Air Trimmer 19 2-20 uuF Air Trimmer 19 4 uuF Mica 200 uuF Mica	9659 9659 9659	TI SI	TRANSFORMERS Loudspeaker Transformer LOUDSPEAKER 5 inch Permanent Magnet SWITCHES Range Switch	XA21 AC46 25260
	tosti		٥,		

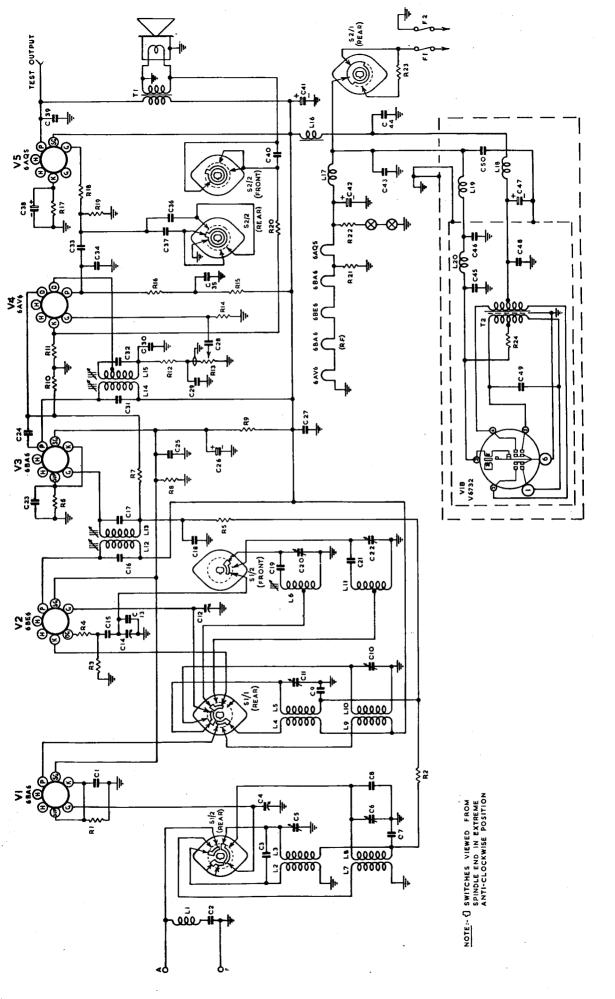

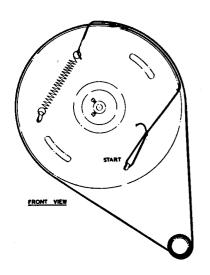

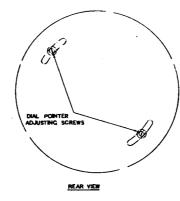

Chassis Removal.

First, remove the cabinet back, control knobs and felt washers—each knob is held by a set-screw. Then, remove two screws from underneath the cabinet and withdraw the chassis.

Dial Pointer Adjustment,

To shift the position of the dial pointer, loosen two screws in the rear of the drive drum—see accompanying drawing—move the pointer disc to the required position and retighten the screws. The diagram also shows the route of the drive cord and the method of attachment.

MECHANICAL REPLACEMENT PARTS.

ltem	Part No.
Aerial Terminal Assembly	15941
Cabinet	22500
.Cable, Volume	25105
Dial Scale	23380
Dial Pointer Assembly	20132
Drum Assembly, Drive	25261
Front Panel Assembly	25259A
Knob	17603
Panel Fuse	25110
Reflector Assembly	25252
Shield Valve	25258
Socket Valve	4704
Socket, Valve Cushion	20142
Spindle Extension	22477
Strap, Mounting	22471
Strip, Tag, I way	7628
l way	22945
7 way	25559

D.C. RESISTANCE OF WINDINGS.

Winding	D.C. Resistance in Ohms
Aerial Coil (M.W.)	
Primary (L2)	30
Secondary (L3)	4
Aerial Coil (S.W.)	
Primary (L4)	6
Secondary (L5)	*
Primary (L6)	6
Secondary (L7)	*
Oscillator Coil (M.W.)	
Primary (L8)	2
Secondary (L9)	6
Oscillator Coil (S.W.)	
Primary (L10)	*
Secondary (L11)	*
Primary (L12)	*
Secondary (L13)	*
I.F. Transformer Windings	10
I.F. Filter (LI)	17.5†
R.F. Choke (LI4)	60
Loudspeaker Input Trans-	
former (TI)	
Primary	125
Secondary	₹

The above readings were taken on a standard chassis, but substitution of materials during manufacture may cause variations and it should not be assumed that a component is faulty if a slightly different reading is obtained.

*Less than I ohm.

†In some receivers this reading may be as high as 60 ohms.

SOCKET VOLTAGES. MODEL 526-M.

Valve	Cathode to Negative Volts	Screen Grid to Negative Volts	Anode to Negative Volts	Anode Current m A	Heater Volts
X76M Converter	2.0	65	185	0.7	13.0
Oscillator	_	· <u> </u>	90	5.0	-
W76 I.F. Amp.	0	65	190	- 3.0	13.0
DH76 Det., A.F. Amp., A.V.C	0	_	70*	0.4	13.0
KT7I Output	- 13.0	190	205	60.0	48.0
U76 Rectifier	215	_		_	30.0