



L ₁	SW Antenna Coil	J	Earphone Jack	R ₈	7.5 KΩ ± 5% ½W	R ₁₀	56 KΩ ± 5% ½W	C ₁₋₁ C ₁₋₂	Tuning Capacitor Trimmer	C ₁₁	2 PF	C ₂₁	30 μF 3V
L ₂	BC Antenna Coil	B	Battery BL-006P (9V)	R ₉	22 KΩ . . .	R ₁₁	5Ω . . .	C ₂₋₁ C ₂₋₂ C ₂₋₃		C ₁₂	0.01 μF	C ₂₂	0.05 μF
L ₃	SW Oscillator Coil			R ₁₀	470Ω . . .	R ₁₂	680Ω . . .	C ₃	2 PF	C ₁₃	200 PF	C ₂₃	5 PF
L ₄	BC Oscillator Coil	R ₁	27 KΩ ± 5% ½W	R ₁₁	5 KΩ VR with Switch	R ₁₃	220Ω . . .	C ₄	0.005 μF	C ₁₄	0.01 μF	C ₂₄	10 PF
IFT ₁	1 F Trans.	R ₂	42 KΩ . . .	R ₁₂	22 KΩ ± 5% ½W	R ₁₄	68 KΩ . . .	C ₅	0.01 μF	C ₁₅	10 μF 3V	C ₂₅	0.02 μF
IFT ₂	. . .	R ₃	22 KΩ . . .	R ₁₃	10 KΩ . . .	R ₁₅	220Ω . . .	C ₆	370 PF	C ₁₆	200 PF	C ₂₆	10 μF 10V
IFT ₃	. . .	R ₄	220Ω . . .	R ₁₄	56 KΩ . . .	R ₁₆	22Ω . . .	C ₇	2000 PF	C ₁₇	0.02 μF		
T ₁	Input Trans.	R ₅	100 KΩ . . .	R ₁₅	820Ω . . .	R ₁₇	22Ω . . .	C ₈	200 PF	C ₁₈	5 μF 6V		
T ₂	Output Trans.	R ₆	470Ω . . .	R ₁₆	820Ω . . .	R ₁₈	22 KΩ . . .	C ₉	20 μF 10V	C ₁₉	0.001 μF		
SP	6cm P. D. Speaker 8Ω	R ₇	820Ω . . .	R ₁₇	10 KΩ . . .	R ₁₉	220Ω . . .	C ₁₀	10 μF 3V	C ₂₀	5 μF 6V		