


SERVICE MANUAL

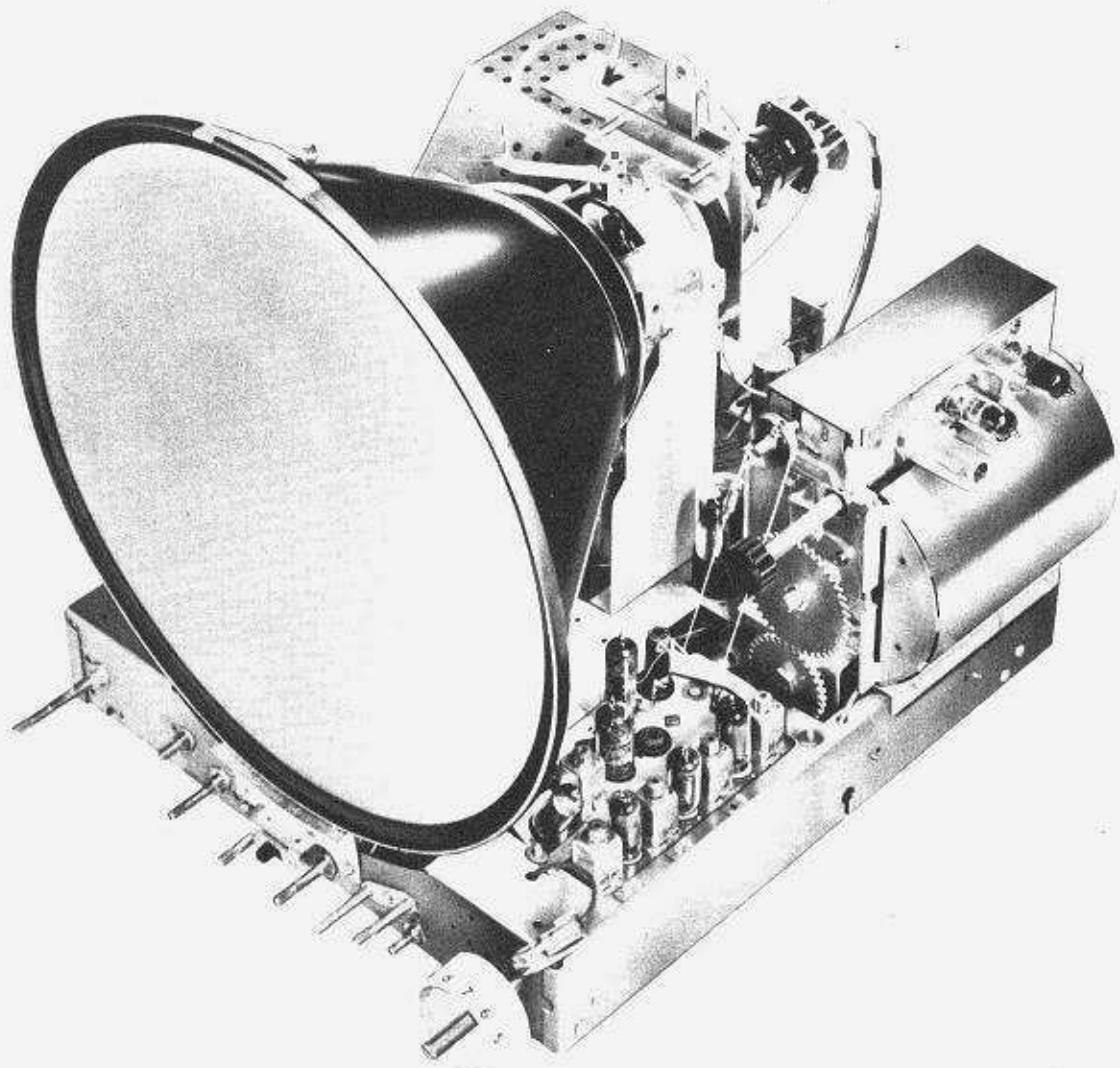

1951 TELEVISION RECEIVERS

CHASSIS 22H20 - 23H22 - 23H22Z - 24H20 - 24H21
22H21 - 22H22

ZENITH RADIO CORPORATION
6001 DICKENS AVENUE • CHICAGO 39, ILLINOIS
TV-7B PRICE 25 cents

ZENITH TELEVISION RECEIVERS

<u>MODEL</u>	<u>SCREEN</u>	<u>TV CHASSIS</u>	<u>RADIO CHASSIS</u>
H2226R	12 1/2"	Circular	22H20
H2226RZ	12 1/2"	Circular	22H20Z
H2227E	12 1/2"	Circular	22H20
H2227R	12 1/2"	Circular	22H20
H2227RZ	12 1/2"	Circular	22H20Z
H2229R	17"	Rectangular	22H21
H2230E	17"	Rectangular	22H21
H2230R	17"	Rectangular	22H21
H2241R	17"	Rectangular	22H21
H2242E	20"	Rectangular	22H22
H2242R	20"	Rectangular	22H22
H2250R	12 1/2"	Circular	22H20
H2252R	17"	Rectangular	22H21
H2253E	17"	Rectangular	22H21
H2254R	20"	Rectangular	22H22
H2255E	12 1/2"	Circular	22H20
H2328R	17"	Rectangular	23H22
H2328RZ	16"	Rectangular	23H22Z
H2329R	17"	Rectangular	23H22
H2329RZ	16"	Rectangular	23H22Z
H2330E	17"	Rectangular	23H22
H2330R	17"	Rectangular	23H22
H2341R	17"	Rectangular	23H22
H2352R	17"	Rectangular	23H22
H2352RZ	16"	Rectangular	23H22Z
H2353E	17"	Rectangular	23H22
H2353EZ	16"	Rectangular	23H22Z
H2437E	16"	Circular	24H20
H2437R	16"	Circular	24H20
H2438R	16"	Circular	24H20
H2439R	16"	Circular	24H20
H2443R	16"	Circular	24H20
H2445R	19"	Circular	24H21
H2447R	19"	Circular	24H21
H2449E	16"	Circular	24H20
H3068R	17"	Rectangular	22H21
H3168R	17"	Rectangular	23H22
H3267R	16"	Circular	24H20
H3273E	17"	Rectangular	22H21
H3274R	17"	Rectangular	22H21
H3284R	20"	Rectangular	22H22
H3373E	17"	Rectangular	23H22
H3374R	17"	Rectangular	23H22
H3469E	16"	Circular	24H20
H3475R	16"	Circular	24H20
H3477R	19"	Circular	24H21
H3478E	19"	Circular	24H21
			8H20Z
			8H20 or 8H20Z
			8H20
			10H20Z
			10H20

If the letter "Q" follows a model number it indicates that the receiver is equipped with the S-17268 Remote Control Unit.

POWER SUPPLY

110 Volts; 60 Cycles AC
 225 Watts 22H Series
 250 Watts 23H Series
 275 Watts 24H Series

ANTENNA IMPEDANCE

300 Ohms

AUDIO OUTPUT TV
 1.8 Watts Undistorted
 3.2 Watts Maximum

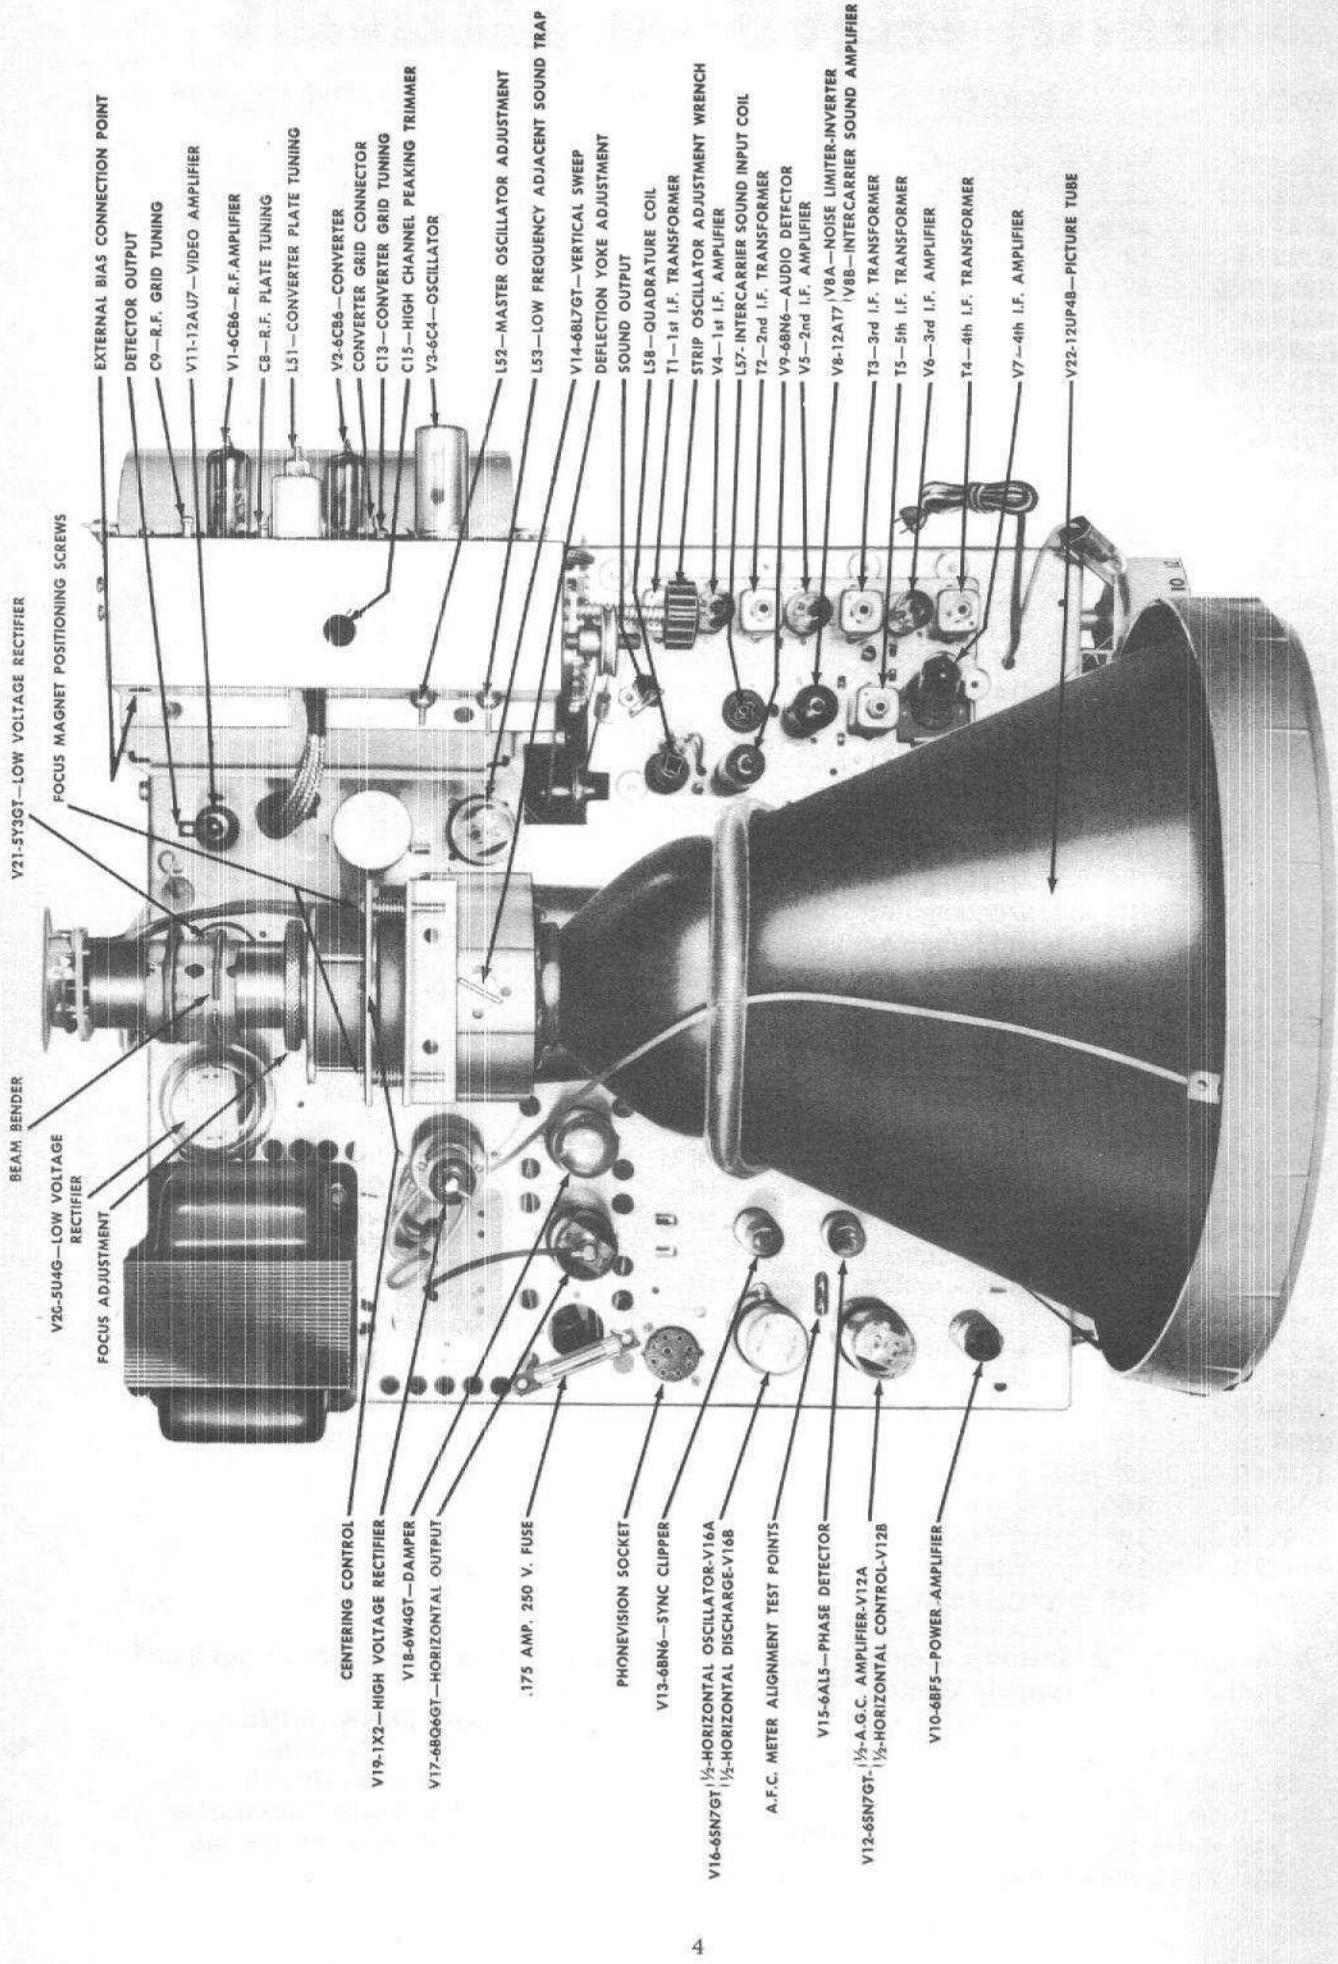


Fig. 1 Top View 22H20 Chassis.

CONTROLS AND FUNCTIONS

Location of the various receiver controls is shown in Fig. 2 After the receiver has been properly adjusted, the serviceman should remove the Horizontal Hold, Brightness, Fine Tuning, Vertical Hold, and Contrast Control knobs and re-position them so that the white dot stamped on the outer edge of each knob faces upward. (As in Fig. 2). The positioning of the knobs will aid the customer in resetting the controls should they be accidentally moved. A brief description of each control follows:

CHANNEL SELECTOR SWITCH: Switches into operating position the pre-tuned RF strip for reception of the particular channel desired.

FINE TUNING CONTROL: Provides a means of varying the frequency of the local oscillator to compensate for any frequency deviation which may result from tube and circuit variations. In operating this control it will be found that the range of sound is quite broad. Proper setting is the point where the best picture is obtained within the range of best sound.

VERTICAL HOLD CONTROL

VERTICAL HOLD RANGE CONTROL: The combination of these controls provide a means of changing the cathode resistance of the vertical oscillator to effect synchronization of the vertical sweep with the transmitted sync pulses. Adjustment is made by setting the vertical hold control in the center of its range and adjusting the vertical hold range control for proper sync. Improper adjustment will cause the picture to "roll" vertically.

BRIGHTNESS CONTROL: Controls the cathode voltage of the picture tube to afford control of picture brilliance. Must be operated in conjunction with the Contrast Control for maximum picture clarity.

CONTRAST CONTROL: Control is in the plate circuit of the 12AU7 second video amplifier. It regulates the magnitude of video signal applied to the picture tube.

PICTURE CONTROL SWITCH: The Picture Control Switch changes the magnitude of the sweep voltage into the vertical deflection coils thereby allowing the choice of either a Giant Circle or "conventional" picture.

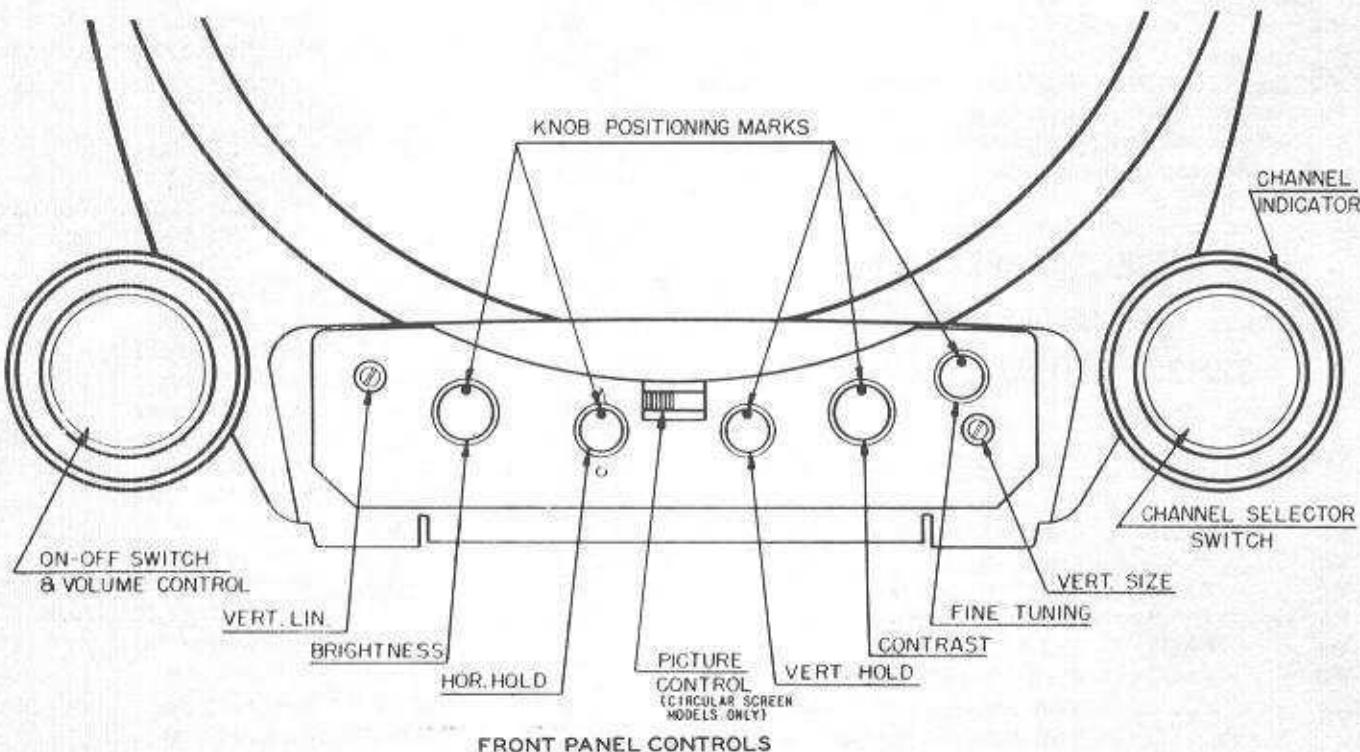
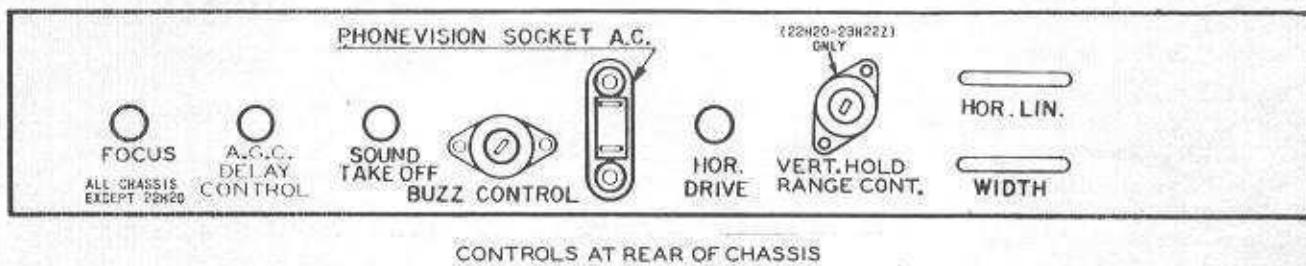


Fig. 2 Controls

HORIZONTAL HOLD CONTROL: The Horizontal Hold Control is used to tune the horizontal oscillator to the frequency of the transmitted sync pulses.

VERTICAL SIZE CONTROL: The Vertical Size Control is part of the vertical oscillator plate load. It is used in conjunction with the vertical linearity control to adjust the size of the picture vertically.

VERTICAL LINEARITY CONTROL: The Vertical Linearity Control is in the cathode circuit of the vertical output tube and is used to shift the operating point of the tube so that the sweep is amplified along that portion of the plate current curve which results in a linear output.

HORIZONTAL DRIVE CONTROL: Regulates the magnitude of the horizontal sweep voltage applied to the grid of the horizontal output tube. Care must be exercised not to advance this control to a point where the right side of picture begins to fold.

HORIZONTAL LINEARITY CONTROL: The Horizontal Linearity Control should be adjusted for best horizontal symmetry while observing a test pattern on the screen. The position of the horizontal drive and width controls also affect linearity and possible interaction of these controls must be taken into consideration when making linearity adjustments.

WIDTH CONTROL: A variable inductance L75 shunted across a portion of the secondary winding of the horizontal output transformer T14. Varying this shunt inductance changes the magnitude of the sweep voltage across the horizontal deflection coils thus causing the picture to widen or narrow accordingly.

FOCUS CONTROL: (22H20) A mechanical shunt which regulates the flux density of the ring type permanent magnet to effect proper focus.

FOCUS CONTROL: (23H & 24H series) A combination electro-permanent magnet is used. Focus is accomplished electrically by adjustment of the Focus Control at the rear of the chassis.

TUBE COMPLEMENT CHASSIS 22H20 - 23H22* - 23H22Z*

SYMBOL	TUBE	FUNCTION
V1	6CB6	RF Amplifier
V2	6CB6	Converter
V3	6C4	Oscillator
V4	6AU6	1st IF Amplifier
V5	6AU6	2nd IF Amplifier
V6	6AU6	3rd IF Amplifier
V7	6AU6	4th IF Amplifier
V8	12AT7	V8A Noise Limiter Inverter V8B Intercarrier Sound Amp.
V9	6BN6	Sound Detector and Limiter
V10	6BF5	Audio Output

V11	12AU7	V11A 1st Video Amplifier V11B 2nd Video Amplifier
V12	6SN7GT	V12A AGC Amplifier V12B Horizontal Control
V13	6BN6	Sync Clipper
V14	6BL7GT	V14A Vertical Oscillator V14B Vertical Output
V15	6AL5	Phase Detector
V16	6SN7GT	V16A Horizontal Oscillator V16B Horizontal Discharge
V17	6BQ6GT	Horizontal Output
V18	6W4GT	Damper
V19	1X2	High Voltage Rectifier
V20	5U4G	Low Voltage Rectifier
V21	5Y3GT	Low Voltage Rectifier
V22	12UP4B	Picture Tube

*Tube complement same as for 22H20 chassis except that V22 is a 17BP4 and two 6BQ6GT tubes are used in the horizontal output circuit. Chassis 23H22Z is the same as 23H22 except that V22 is a 16TP4. V19 on 23H22 and 23H22Z chassis can be 1X2 or 1B3GT.

TUBE COMPLEMENT


CHASSIS

24H20 - 24H21*

SYMBOL	TUBE	FUNCTION
V1	6CB6	RF Amplifier
V2	6CB6	Converter
V3	6C4	Oscillator
V4	6AU6	1st IF Amplifier
V5	6AU6	2nd IF Amplifier
V6	6AU6	3rd IF Amplifier
V7	6AU6	4th IF Amplifier
V8	12AT7	V8A Noise Limiter Inverter V8B Intercarrier Sound Amp.
V9	6BN6	Sound Limiter Detector
V10	6BF5	Audio Output
V11	12AU7	V11A 1st Video Amplifier V11B 2nd Video Amplifier
V12	6SN7GT	V12A AGC Amplifier V12B Horizontal Control
V13	6BN6	Sync Clipper
V14	6SN7GT	Vertical Oscillator
V15	6SN7GTA	Vertical Output
V16	6AL5	Phase Detector
V17	6SN7GT	V17A Horizontal Oscillator V17B Horizontal Discharge
V18	6BQ6GT	Horizontal Output
V19	6W4GT	Damper
V20	1B3/8016	High Voltage Rectifier
V21	5U4G	Low Voltage Rectifier
V22	5Y3GT	Low Voltage Rectifier
V23	16GP4	Picture Tube
V24	6BQ6GT	Horizontal Output

*Same as 24H20 except V23 is 19AP4A

TEST PATTERNS ON CIRCULAR SCREEN
MODELS

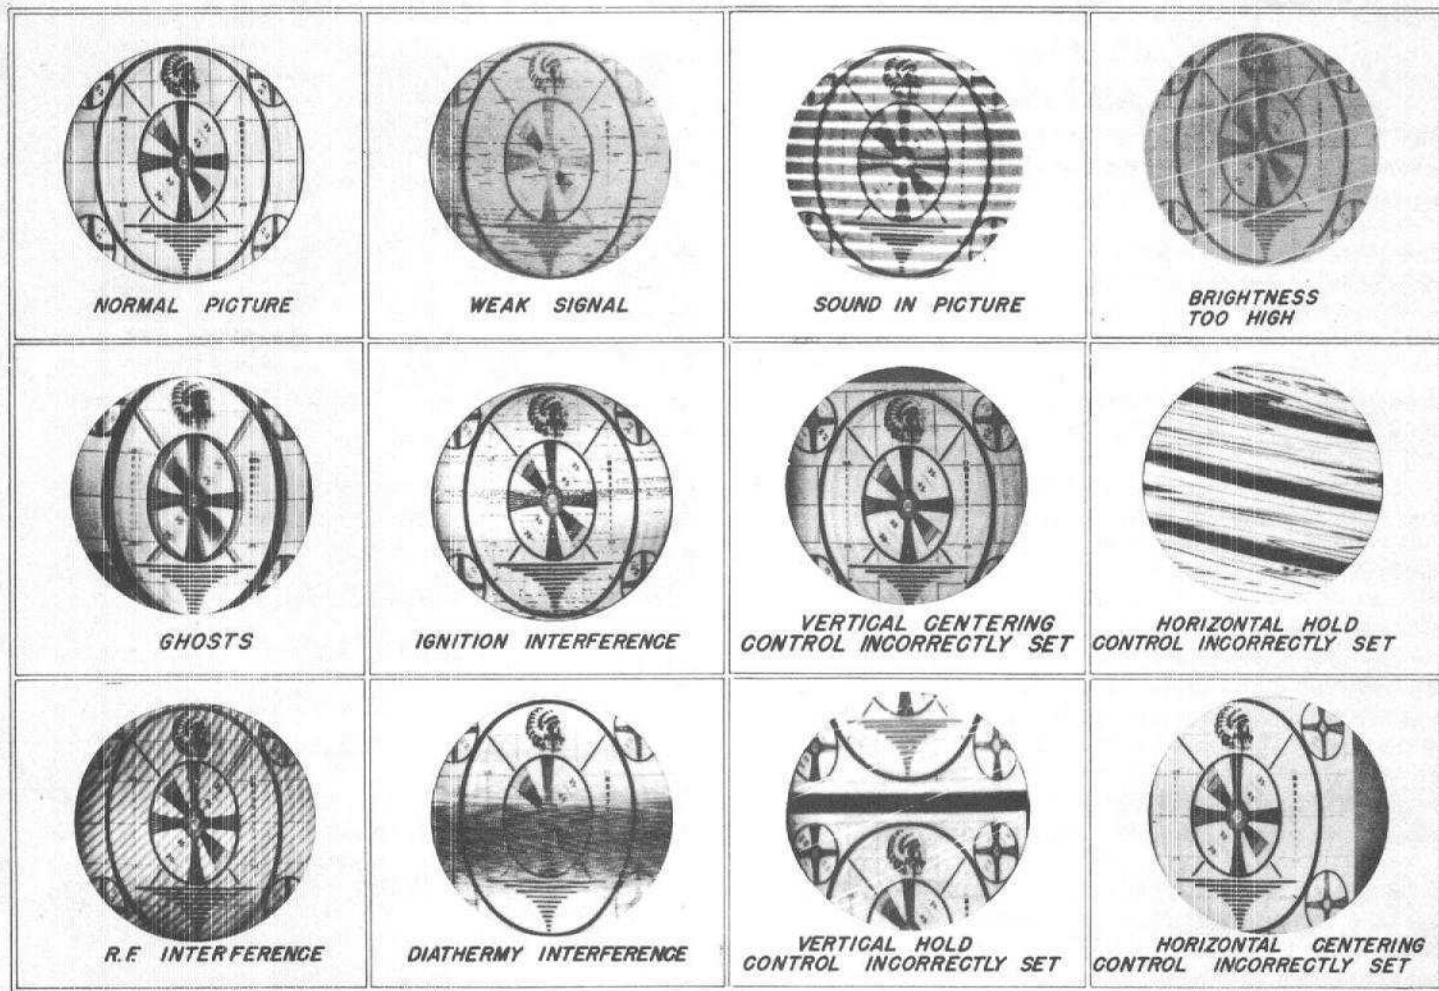

CHANNEL	FREQ BAND	PICTURE CARRIER	SOUND CARRIER	RECEIVER LOCAL OSCILLATOR
1				
2	54-60-MC	55.25 MC	59.75 MC	101 MC
3	60-66	61.25	65.75	107
4	66-72	67.25	71.75	113
5	76-82	77.25	81.75	123
6	82-88	83.25	87.75	129
7	174-180	175.25	179.75	132.5
8	180-186	181.25	185.75	138.5
9	186-192	187.25	191.75	144.5
10	192-198	193.25	197.75	150.5
11	198-204	199.25	203.75	156.5
12	204-210	205.25	209.75	162.5
13	210-216	211.25	215.75	168.5

Fig. 3 Television Channels and Corresponding Receiver Oscillator Frequencies.

ADJUSTMENTS AND ALIGNMENT

FOCUS AND CENTERING ADJUSTMENTS

The 22H series receivers incorporate mechanical means of centering and focusing while the 24H series utilize mechanical centering and electrical focus.

The centering control lever is used for centering the picture both vertically and horizontally. An up-down movement of the lever moves the picture horizontally while a left-right movement shifts it vertically.

Complete focus, centering and beam bender adjustments are made as follows:

1. Loosen the deflection yoke adjustment locknut (See Fig. 4) and move the yoke as far as possible toward the front of the picture tube. Check for picture tilt and tighten locknut.
2. Adjust the magnet positioning screws until the assembly is approximately $1/8$ " from the yoke. Be certain that the focus coil sleeve is inserted inside the magnet assembly for proper mechanical centering of the picture tube.
3. Set the centering lever to a position where the locking screw is centered inside its slot.
4. Rotate and slide the beam bender along the neck of the tube for a raster of maximum brilliance. (The beam bender has an identifying arrow which must point towards the front of the picture tube when installed. On double ring type beam benders, the air gaps should be 180° removed with the heavier ring nearest the picture tube socket.)
5. Adjust the focus shunt ring (22H series only), or the focus control for sharpest picture definition.
6. With the centering lever, center the picture vertically and horizontally. A slight readjustment of the beam bender may be necessary to obtain a full raster of maximum brilliance.

After adjustments are made, tighten the centering lever locknut.

BULLS EYE TUNER ADJUSTMENTS

With an intercarrier receiver of this type, a VTVM cannot be effectively used as a resonance indicator when oscillator adjustments are made with the built-in wrench.

Satisfactory adjustments can be made by setting the fine tuning control in the center of its range, observing a test pattern and adjusting the oscillator for best sound and picture. It will be noted that tuning to one side of resonance results in a faded, washed-out picture with the spacings between the wedge lines fogged and tuning in the opposite direction causes the spaces

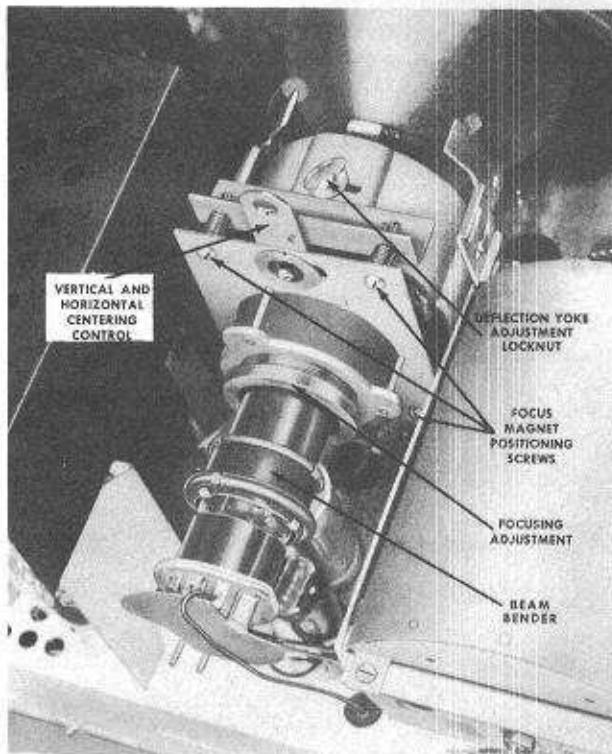


Fig. 4 Adjustments on Neck of Picture Tube.

between the lines to clear up. However, going beyond this point causes the picture to take on a "wormy" appearance from sound getting into the picture. Correct adjustment is obtained by tuning to the "wormy" picture and then backing the control off slightly until the picture clears up.

AFC ADJUSTMENTS

The AFC adjustment can effectively be made by setting the horizontal hold control (L74) to a position where it is virtually impossible to "throw" the receiver out of horizontal sync when switching from channel to channel.

AGC ADJUSTMENTS

Connect the calibrated oscilloscope through a 10K isolation resistor to the grid (Pin 7) of the 12AT7 limiter-inverter. Select the strongest TV signal and observe the deflection on the scope screen. Adjust the AGC delay control R50 for 2.5V peak output.

Satisfactory adjustment can also be made by observing the picture and backing off the AGC control from its maximum clockwise position to a point comfortably below the level of intercarrier buzz, picture distortion, improper sync or excessive contrast at maximum contrast setting.

CAUTION: Misadjustment of the AGC delay control can result in a washed-out picture, distorted picture, buzz in sound OR COMPLETE LOSS OF PICTURE AND SOUND.

SOUND ALIGNMENT

Proper alignment of the 4.5 Mc intercarrier sound channel can only be obtained if the signal to the receiver antenna terminals is reduced to a level below the limiting point of the 6BN6 Gated Beam Detector. This level can be easily identified by the "hiss" which then accompanies the sound.

Various methods may be used to reduce the signal level, however, it is recommended that a S17203 step attenuator be used for most satisfactory results. To prevent leakage, certain precautions must be taken when connections are made. Use as short a lead as possible between the attenuator and receiver antenna terminals and approximately 6 feet of 300 ohm shielded line between the antenna transmission line and the attenuator. The shield from the transmission line should be connected to the attenuator and the attenuator itself grounded to the TV chassis under test.

After the connections are made, proceed as follows:

1. Tune in a tone modulated TV signal and adjust the step attenuator until the signal is reduced to a level where "hiss" is heard with the sound.
2. Adjust the sound take-off coil L60, input coil L57, quadrature coil L58 and buzz control R19 for the cleanest sound and minimum buzz. It must be remembered that any of these adjustments may cause the "hiss" to disappear and further reduction of the signal is necessary so that the "hiss" never disappears during alignment.

In weak signal areas, where the signal amplitude is not sufficient to cause limiting, the adjustments may be made without the use of an attenuator.

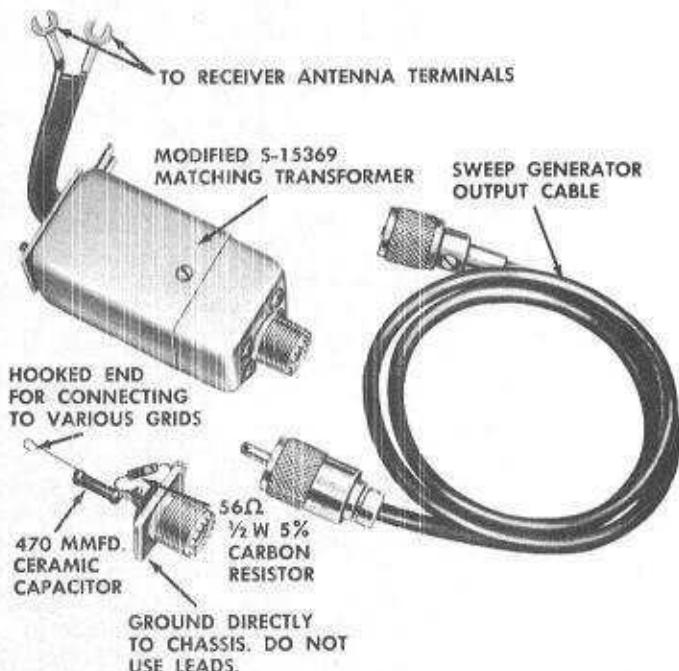


Fig. 5 IF - RF Alignment Fixtures.

If intercarrier buzz is in evidence, after all normal sound adjustments have been made, the cause may be attributed to one or more of the following.

1. Improper adjustment of the AGC delay control.
2. Defective 12AT7 inverter-limiter tube.
3. Extremely high signal levels which require attenuation in the antenna circuit.
4. Transmitter overmodulation.

CALIBRATING THE OSCILLOSCOPE

When aligning RF-IF stages and when making AGC adjustments, it is necessary to measure detector peak output voltage. This may be done with an oscilloscope which has been calibrated with a known DC voltage. To calibrate any oscilloscope proceed as follows:

Connect the ground lead of the scope vertical input cable to the negative side of a 3 volt battery supply. Turn the horizontal gain control fully counter-clockwise. With the "hot" lead, make a momentary contact to the positive connection on the battery and observe the instantaneous spot deflection on the screen. Discharge the scope input capacitor by shorting out the leads and then repeat the procedure, each time readjusting the scope vertical gain until the spot deflects 3 large divisions on the screen. Each division will then represent 1 volt peak. The position of the vertical gain control must be noted for future reference.

IF ALIGNMENT

When aligning the 40 Mc IF, it is of utmost importance to keep the sweep generator connections as short as possible. (See Fig. 5). Clip the negative lead of a 4.5V battery to test point "A" and the positive lead to chassis. Through a 10K isolation resistor connect the oscilloscope to the terminal "C" (See schematic). During alignment keep the output from the sweep generator at a level which develops approximately 3V peak output at the detector as viewed on the calibrated oscilloscope. It is important that the voltage be maintained at this 3V level.

After the bias and scope connections have been made and the receiver allowed a 15 minutes warm-up period, proceed as follows:

1. Feed the output from the sweep generator through a connector, as shown in Fig. 5, into the converter grid (terminal "F"). This terminal is immediately adjacent to the 6CB6 converter tube.
2. Remove oscillator tube V3 and switch channel selector to channel 12.
3. Adjust the IF transformers to obtain an overall pattern of maximum amplitude with linearity, similar to the illustration in Fig. 6. It will be noted that adjustment of L51, T1 and T3 will have maximum effect on the low frequency portion of the pattern (42.75 - 43.5 Mc) whereas adjustment of T2 and T4 will have

maximum effect on the high frequency side (45.75 and 45 Mc.) T5 tilts the top and is adjusted to obtain best symmetry.

After the correct overall pattern is obtained, turn the channel selector to channel 2 and inject a 47.25 Mc marker into the sweep. Adjust the low channel adjacent sound trap L53 for minimum indication on

the scope or on a VTVM connected to the video detector.

4. Feed a 4.5 Mc crystal calibrated signal to terminal "C" Fig. 20 and connect the RF probe of a VTVM to the cathode (Pin 11) of the picture tube. Advance the contrast control for approximately 1 volt indication on the meter and adjust trap L63 for minimum indication.

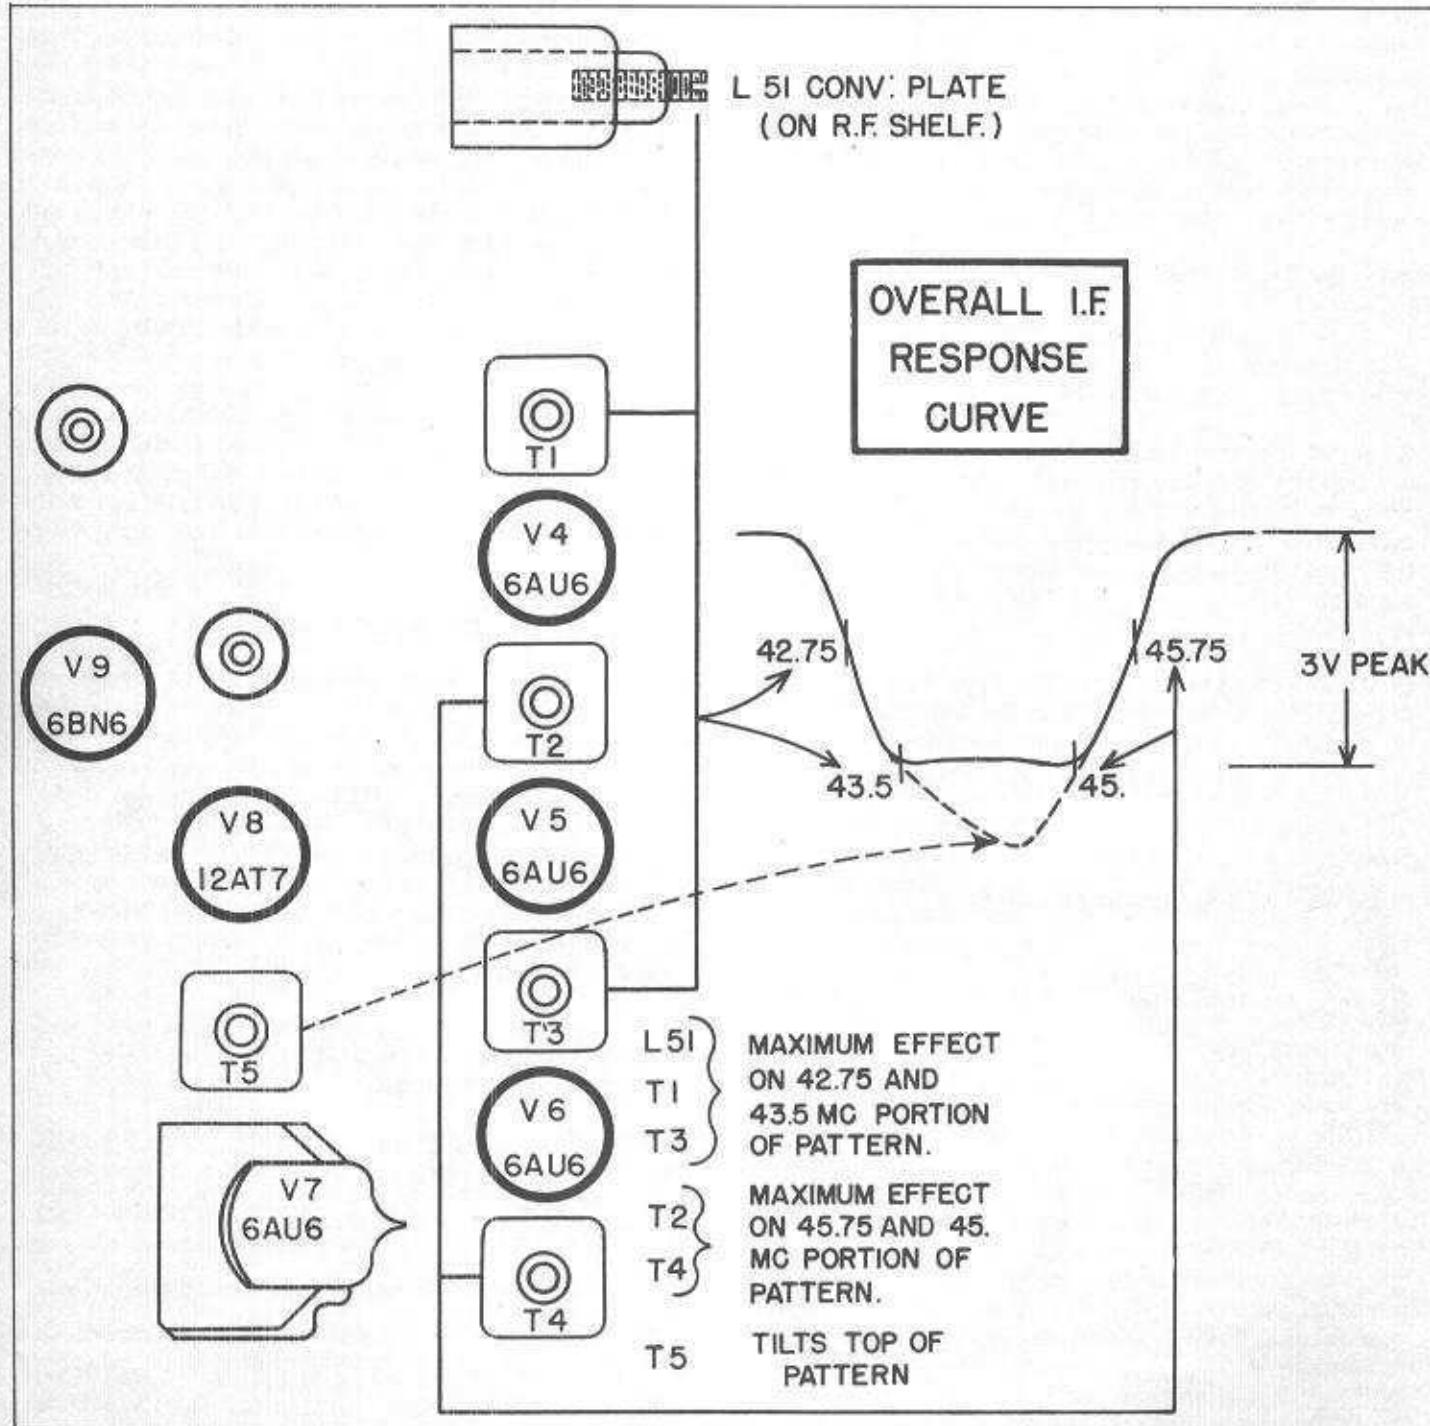


Fig. 6 IF Alignment Guide

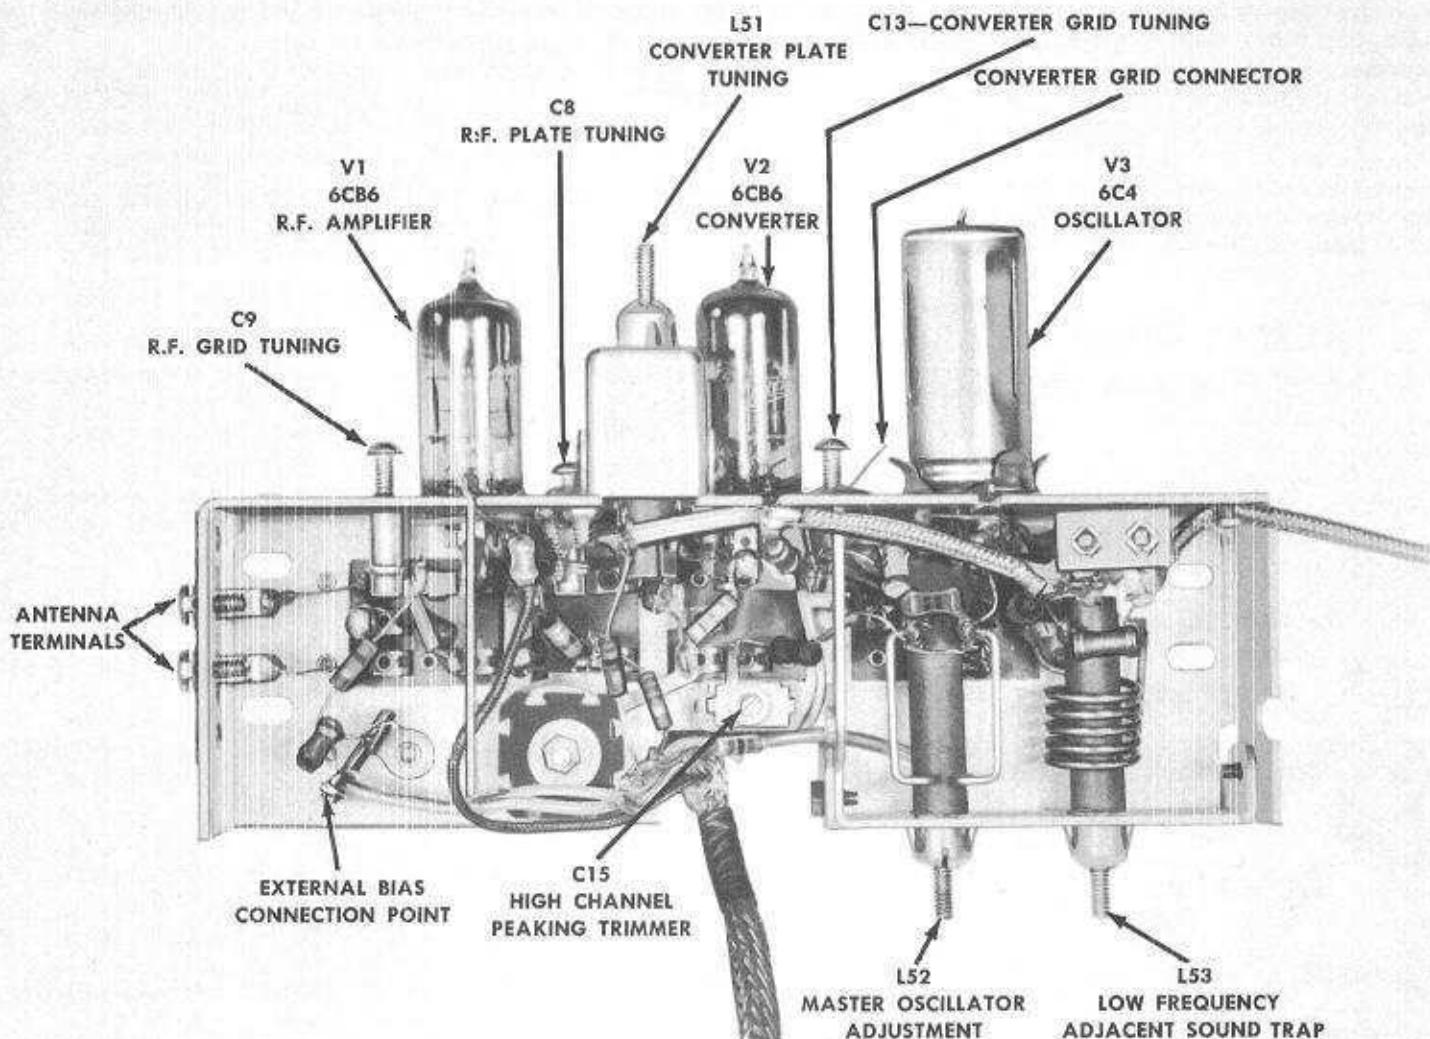


Fig. 7 RF Shelf

MASTER OSCILLATOR ALIGNMENT

The 6C4 master oscillator operates above the incoming frequency on the low channels (2-6) and below on the high channels (7-13). Slug L52 is used to pre-set the master oscillator on channel 7 since the channel 7 strip itself does not have an oscillator adjustment.

The master oscillator adjustment is to be made only if resonance cannot be obtained with the strip oscillator adjustment wrench when the fine tuning control is in its center position (open end of pulley on the RF shelf facing up) and after it has been determined that the channel strip itself is not at fault.

Although it is possible to set the master oscillator L52 by tuning in a station and alternating the master and strip oscillator adjustments until proper tuning results, the use of the Mega-Sweep and Mega-Marker Sr. is preferred. The Mega-Marker Sr. is provided

with crystals for the sound carrier frequencies of all 12 existing channels. The sound carrier frequencies can be used in adjusting the master oscillators, however, it is recommended that the Mega-Marker Sr. be equipped with a crystal for the picture carrier frequency for channel 7 (175.25 Mc). This crystal may be inserted into one of the extra positions and adjustments made as follows:

1. Connect the negative lead of a 4.5V battery to point "A" (See Fig. 20) and the positive lead to chassis.
2. Feed the signal generator through a S-15369 matching transformer to the antenna terminals of the receiver. Fig. 5.
3. Set the channel selector to channel 7 and turn the fine tuning control until the open end of the RF shelf pulley faces upward.

4. Adjust the sweep generator for an RF response curve (similar to Fig. 6). Set the Mega-Marker Sr. on channel 7 and observe the video marker on the response curve. Adjust L52 until this marker falls at approximately 50% on the response curve.

In adjusting the master oscillator on the sound carrier frequency for channel 7, the above procedure is followed, with the exception that the sound marker is placed at approximately 20 times down on the response curve.

TURRET TUNER AND RF SHELF ALIGNMENT

The RF shelf adjustments are made at the factory and normally do not require readjustment unless the unit has been tampered with. If adjustments become necessary, they are made as follows:

1. Connect the negative lead of a 4.5V bias supply to point "A" (See Fig. 20) and the positive lead to chassis.

Connect the oscilloscope through a 10K isolation resistor to terminal "C" and chassis.

2. Feed the output of the Mega-Sweep through a S-15369 matching transformer to the antenna terminals of the receiver.

3. Adjust the Mega-Sweep and check the RF response curve (See Fig. 6) on each channel. If all the response curves are tilted approximately the same amount, first check the IF response to see that it has a reasonably flat top (See Fig. 6) before an attempt is made to adjust the RF trimmers. If the IF response is correct, set the channel selector switch to channel 4 and adjust the RF grid (C9), RF plate (C8), converter grid (C13) for symmetry and amplitude of the response curve.

4. If the receiver sensitivity is satisfactory on the low channels (2 to 6) and is down on the high channels, adjust the high channel peaking trimmer (C15) for maximum sensitivity with band pass.

SERVICE HINTS

FRINGE RECEPTION - Vertical synchronization in weak signal areas may be improved by lowering the value of the resistor in the grid circuit of the sync clipper from its normal 1 Meg. value. Values as low as 10,000 ohms may be used, however, care must be exercised as too great a reduction of this resistance may introduce horizontal distortion into the picture on some signals.

POOR VERTICAL LINEARITY - (22H20 - 23H22Z) If this condition cannot be corrected by adjustment of the vertical linearity and height adjustments, the fault will probably lie in a defective 6BL7GT vertical sweep tube.

S-17268 REMOTE CONTROL UNIT - Locking of the manual control can be caused by failure of the worm drive gear to disengage. This condition can be the result of a weak solenoid armature actuating spring or misalignment of the magnet mounting bracket. It


will be noted that the solenoid mounting bracket has slotted mounting holes which allows for horizontal as well as vertical alignment. Improper seating of the solenoid clapper plate on the magnet core will cause excessive buzz.

IMPORTANT: Any receiver equipped with the remote control unit must be perfectly "bulls eyed" to insure its most satisfactory operation with the remote control unit.

TESTING GERMANIUM CRYSTALS - If, after all normal adjustments have been made, the picture appears washed out, the cause may be low detector output due to a defective germanium crystal. The crystal may be disconnected and tested with an ohmmeter for front-to-back ratio. The resistance in one direction should be lower than 400 ohms and at least 25 times this resistance (10,000 ohms) or higher in the other direction. Any ratio less than 25 to 1 would indicate a below standard crystal.




Rectangular Screen Models properly adjusted on Test Pattern.

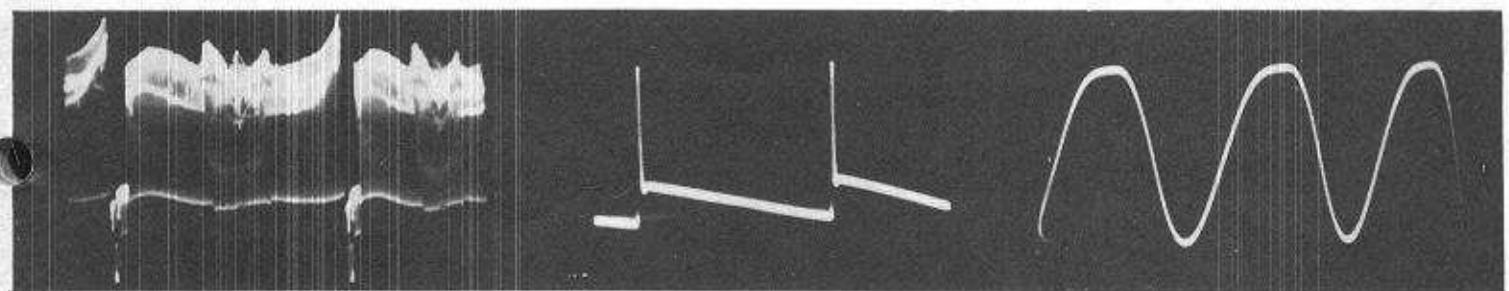

Pins 7&8 V8A-Pin 6 V12A Pin
1 V11A (60 cps)

Pin 2 V14B (60 cps)


Pin 2 V12B (15.75 Kc)

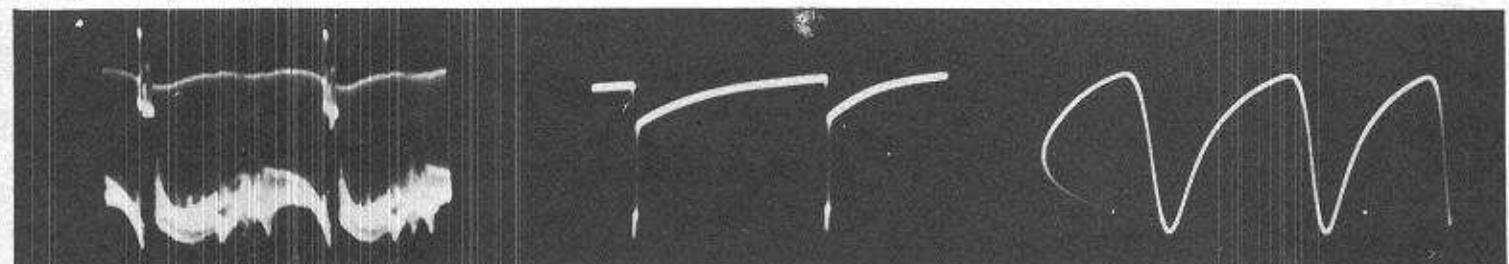

Pin 6 V8A Pin 2 V11A Pin 6
V11B Pin 2 V13 Pin 11 V22

Pin 1 V14B (60 cps)


Pin 5 V16A (15.75 Kc)

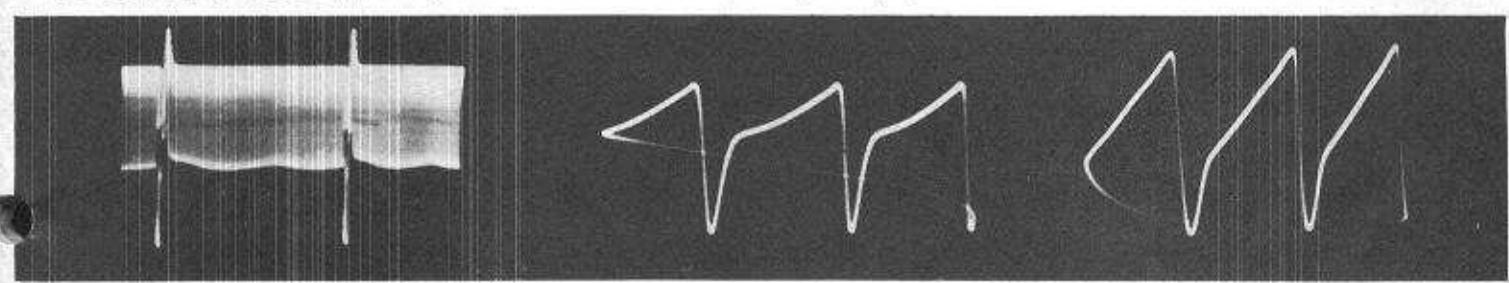

Pin 7 V13 (60 cps)

Pin 1&5 V15 (15.75 Kc)


Pin 2 V16B (15.75 Kc)

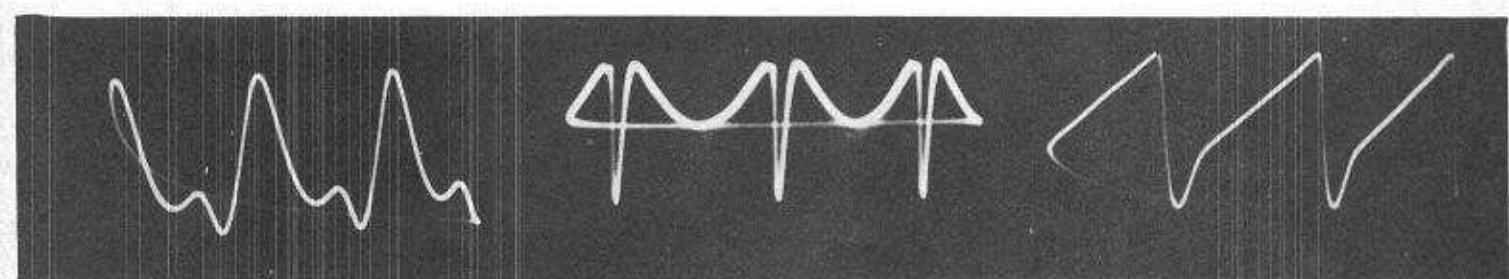

Pin 5 V12A (15.75 Kc)

Pin 2 V15 (15.75 Kc)

Pin 5 V17 (15.75 Kc)

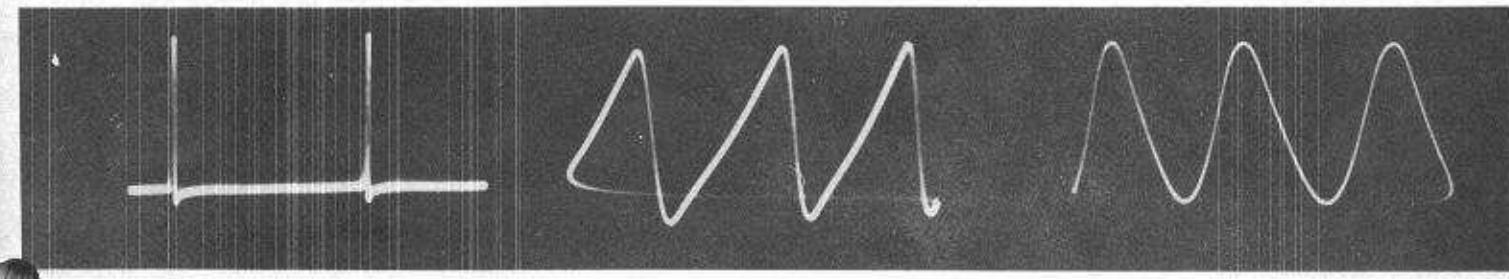

Pin 4 V14A (60 cps)

Pin 7 V15 (15.75 Kc)

Pin 8 V17 (15.75 Kc)

Fig. 8 Wave Forms 22H20 Chassis. Also representative for 23H22Z and 24H20-21 Chassis.

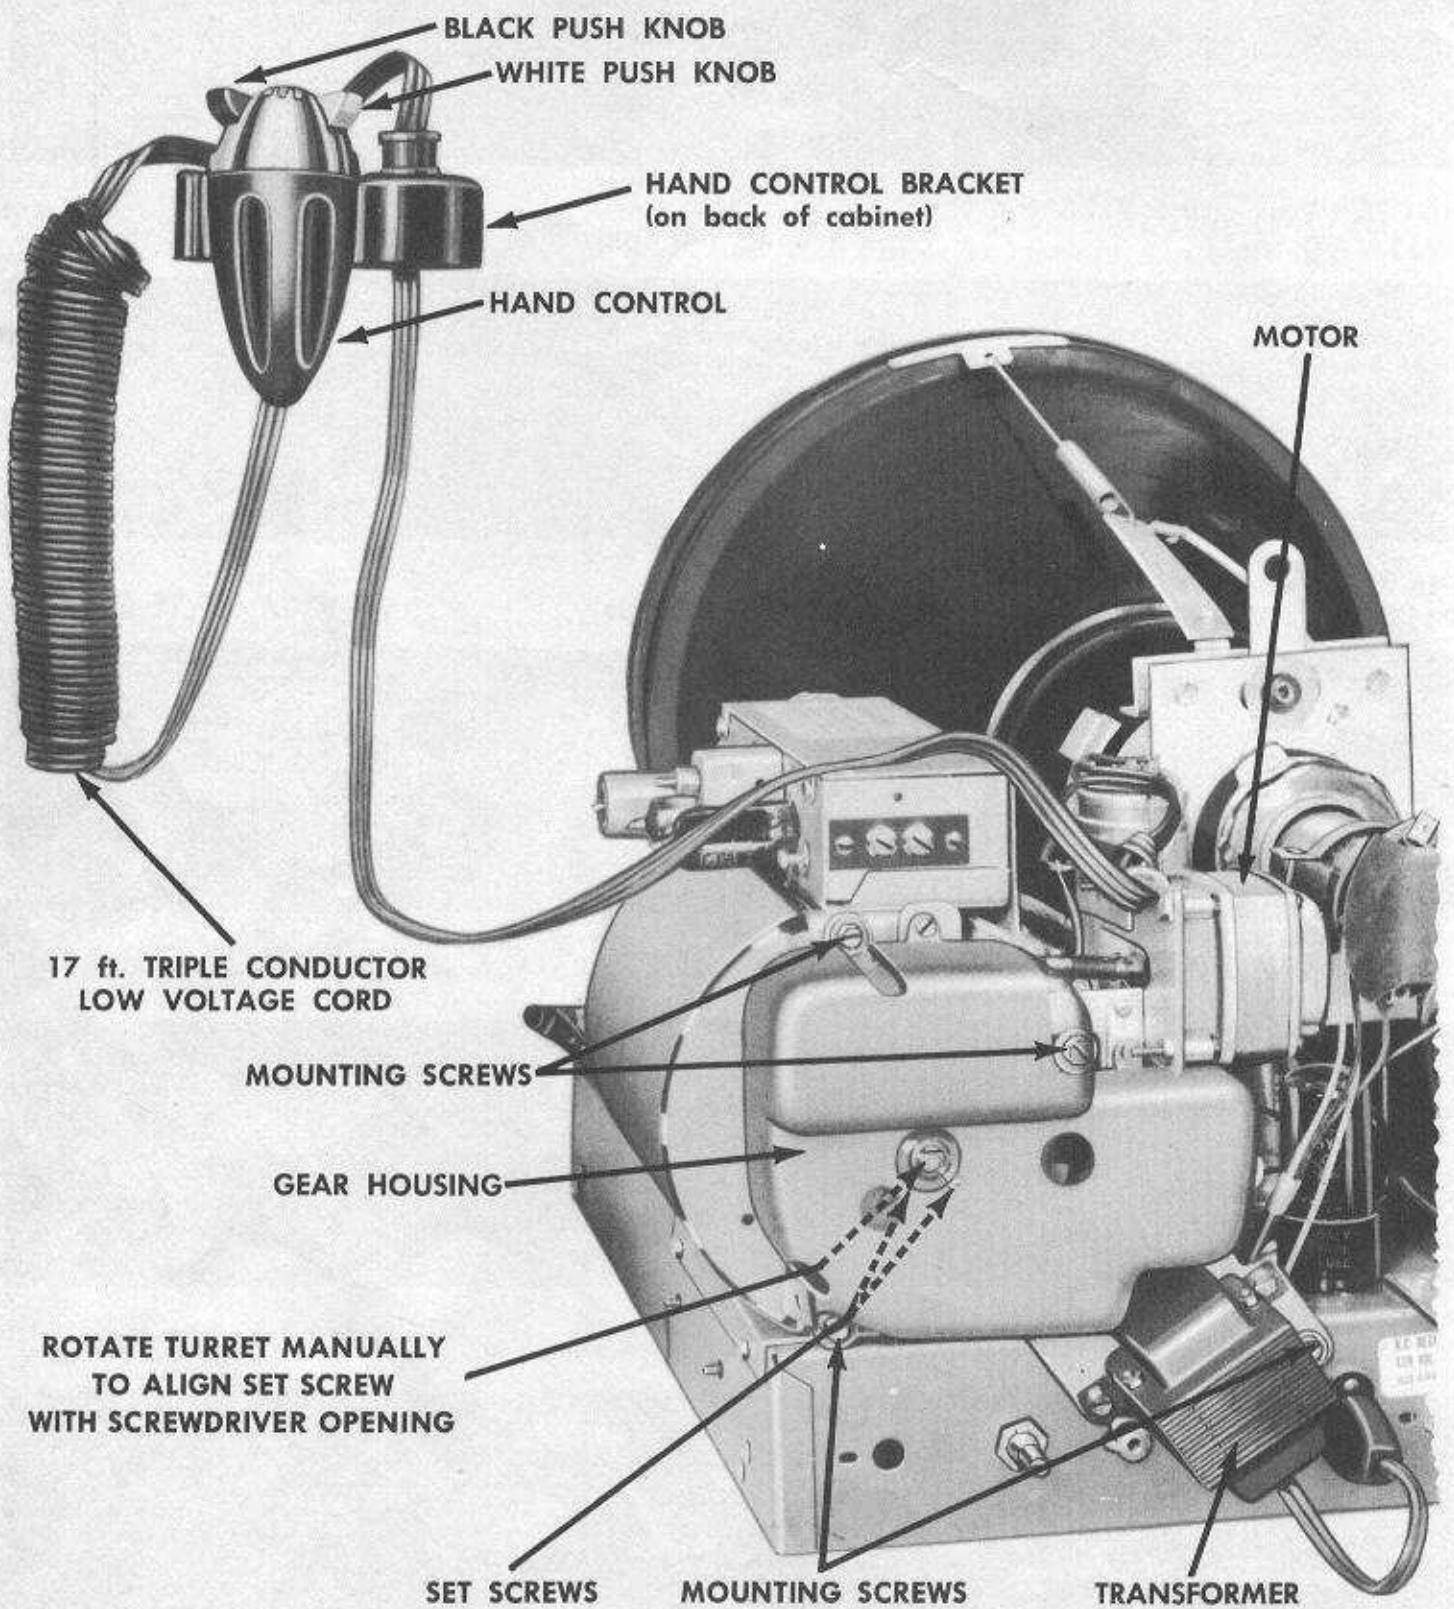


Fig. 9 Remote Control Unit.


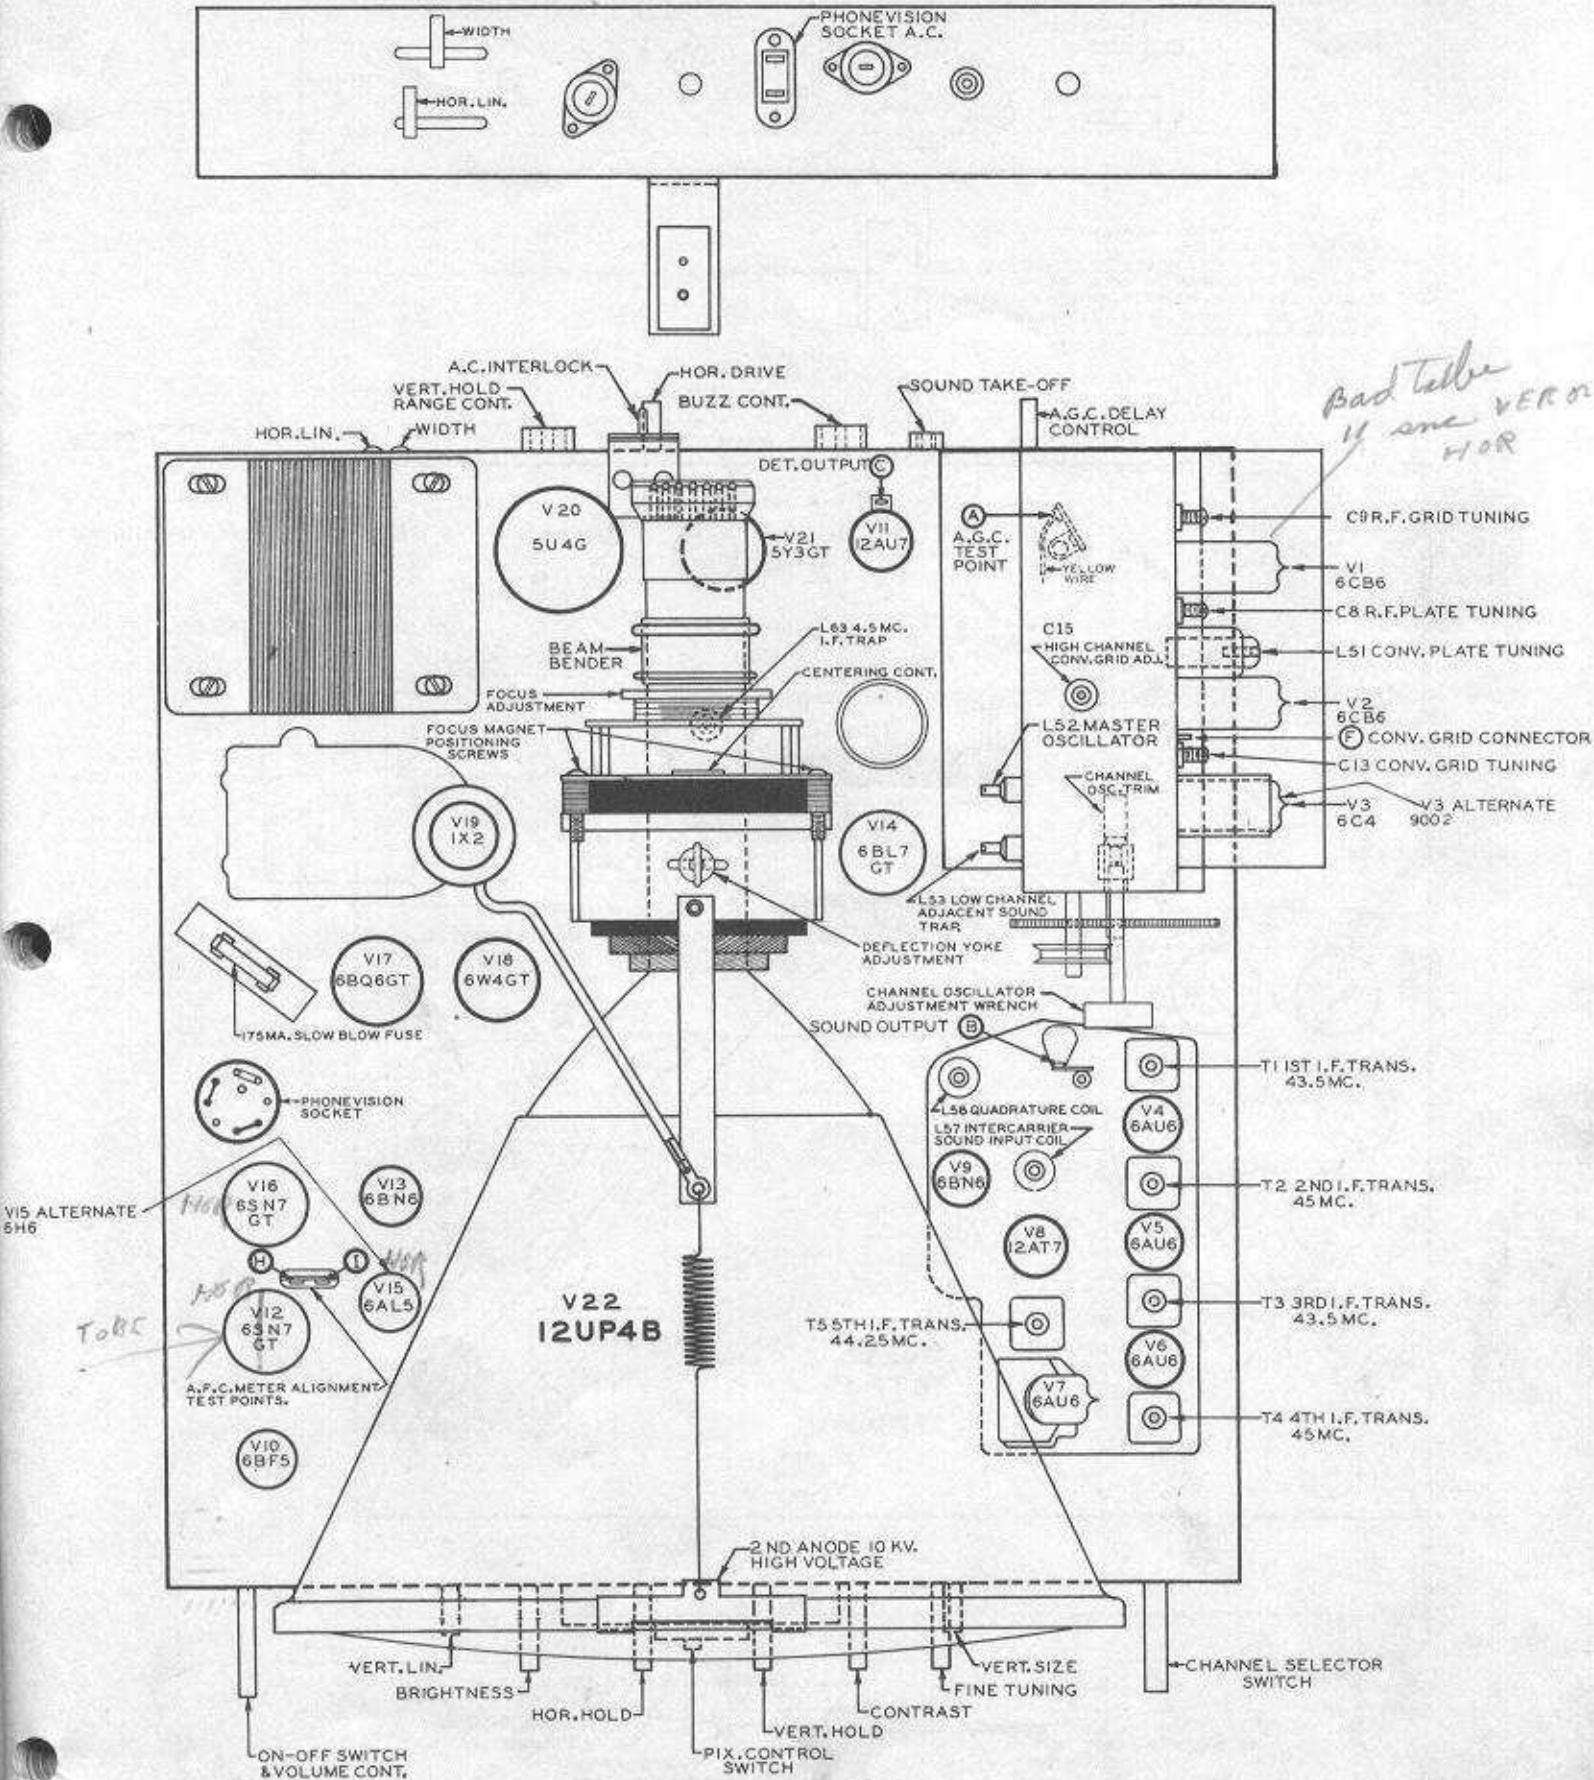


Fig. 10 Tube and Trimmer Layout 22H20 Chassis.

22H20 chassis

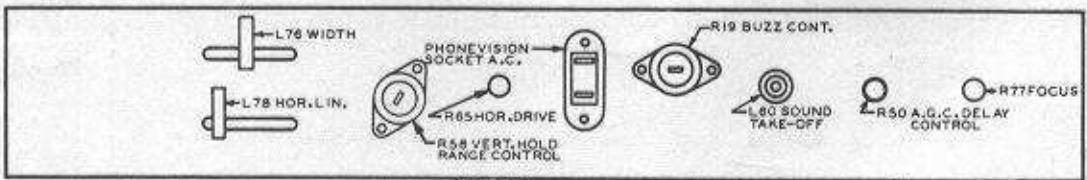

NOTE:
THE DIFFERENCE BETWEEN CHASSIS
23H22 AND 23H22Z ARE:
① PIX. TUBE 16TP4 USED ON CHASSIS 23H22Z ONLY.
② PIX. TUBE 17BP4 USED ON CHASSIS 23H22 ONLY.
③ L83 S-17230 EM-PM FOCUS COIL USED ON 23H22 ONLY.
④ L83 CHANGES TO L81 S-17230 EM-PM FOCUS COIL FOR
CHASSIS 23H22Z ONLY.

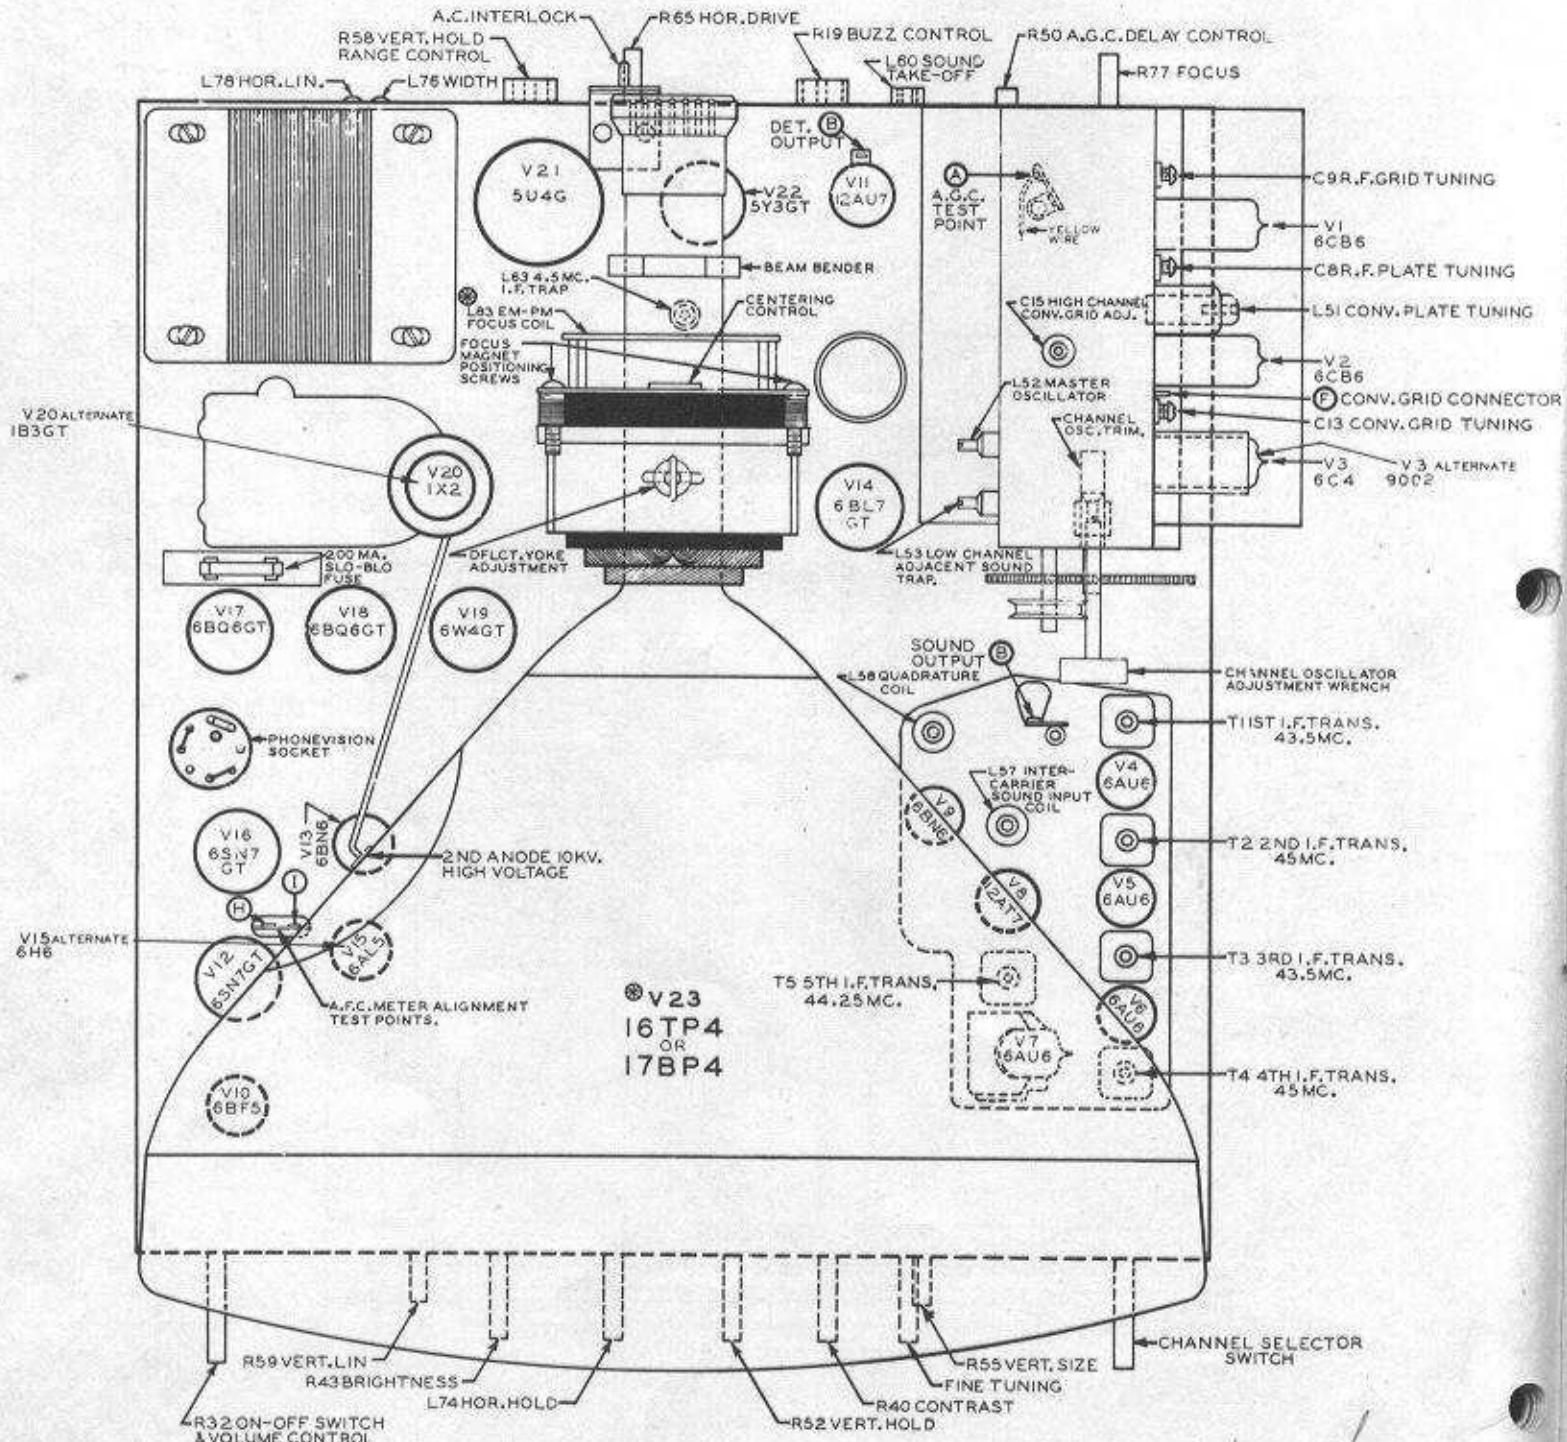


Fig. 11 Tube and Trimmer Layout 23H22Z Chassis.

Fetcher

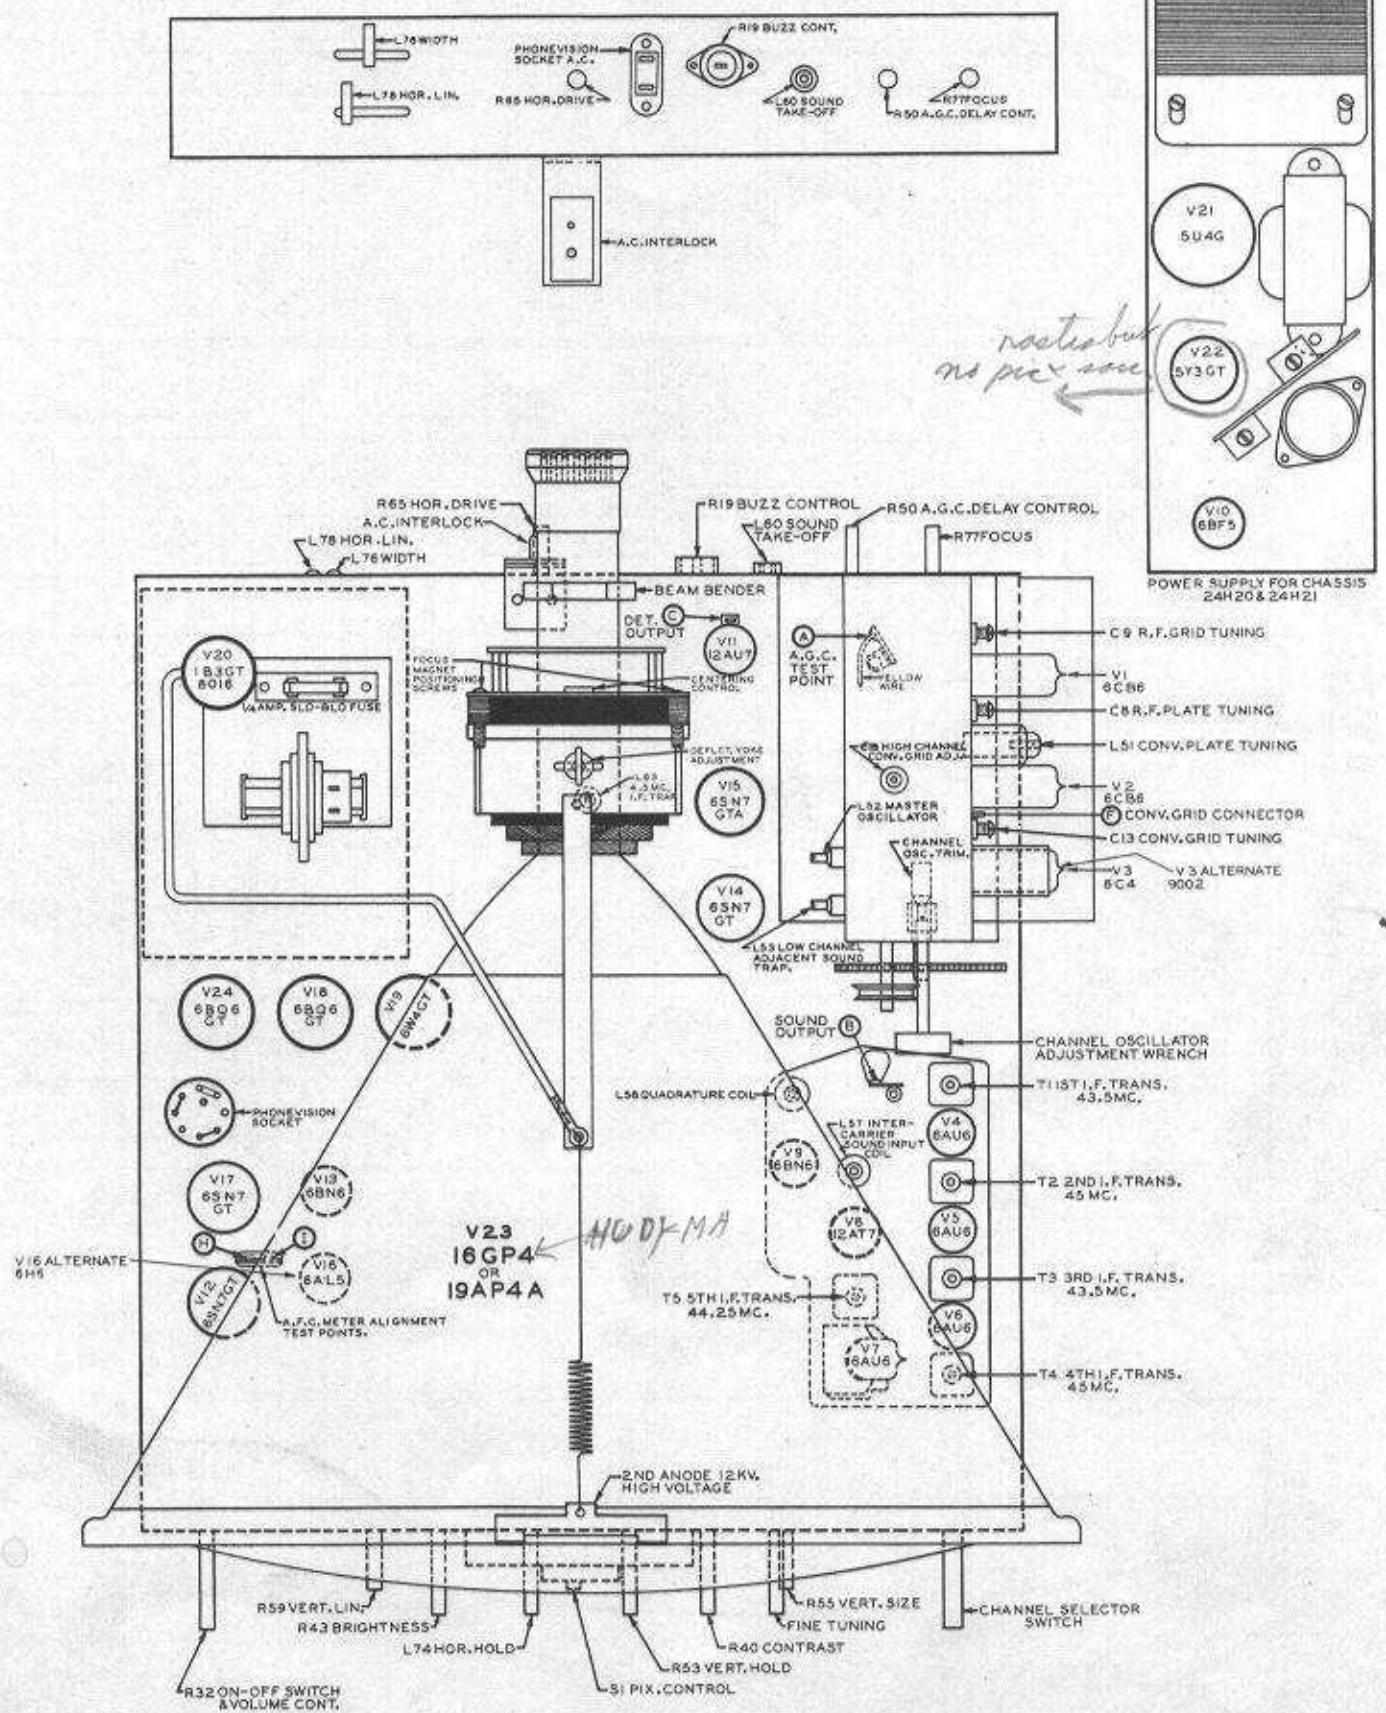


Fig. 12 Tube and Trimmer Layout 24H20-21 Chassis.

CIRCUIT LEGEND

CIRCUIT ID	PART NO.	DESCRIPTION	CHANNELS				DESCRIPTION				
			MAIN CHANNELS	SHIELD, H.F.	POWER, A.C.	PART NO.	MAIN CHANNELS	SHIELD, H.F.	POWER, A.C.	PART NO.	
C.1	22-1894	6 MMF.	500 V.	ABCD	R.1	63-1750	150 Ohm	10%	1/2W.	L.1	
C.2	22-1879	1-7.5 MMF. Slng Tuned Cap.	ABCD	R.2	63-1827	10K Ohm	10%	ABCD	R.F. Antenna coil	A.B.C.D	
C.3	22-1951	4.5 MMF.	500 V.	ABCD	R.3	63-1867	1500 Ohm	10%	ABCD	R.F. Grid coil	A.B.C.D
C.4	22-2139	2 MMF.	500 V.	ABCD	R.4	63-1933	3.3 Megohms	20%	1/2W.	BC	
C.5	22-2205	.81 MMF.	500 V.	ABCD	R.5	63-1855	47K Ohm	10%	1/2W.	ABCD	
C.6	22-1892	.7 MMF.	500 V.	ABCD	R.6	63-1785	1000 Ohm	10%	1/2W.	ABCD	
C.7	22-2206	24 MMF.	500 V.	ABCD	R.7	63-1702	10 Ohm	20%	1/2W.	ABCD	
C.8	22-2203	1-3.5 MMF. Trim. Capacitor	ABCD	R.8	63-1835	15K Ohm	20%	1/2W.	ABCD		
C.9	22-2203	1-3.5 MMF. Trim. Capacitor	ABCD	R.9	63-1736	68 Ohm	10%	ABCD	Converter Grid coil	A.B.C.D	
C.10	22-2050	5 MMF. Cap.	500 V.	ABCD	R.10	63-1849	35K Ohm	20%	1/2W.	ABCD	
C.11	22-2219	470 MMF. Cap.	500 V.	ABCD	R.11	63-1874	15K Ohm	10%	1/2W.	ABCD	
C.12	22-42	600 MMF. Sparkable	ABCD	R.12	63-1743	100 Ohm	10%	1/2W.	ABCD		
C.13	22-2073	1-3.5 MMF. Trim. Capacitor	ABCD	R.13	63-1772	470 Ohm	20%	1/2W.	ABCD		
C.14	22-69	475 MMF. Sparkable	ABCD								
C.15	22-2220	1-4-84 MMF. Trim. Capacitor	ABCD								
C.16	22-1891	2.5 MMF. Cap.	500 V.	ABCD							
C.17	22-2107	4.5 MMF. Cap.	500 V.	ABCD	R.17	63-1926	2.2 Meg.	20%	1/2W.	ABC	
C.18	22-2204	20 MMF. Cap.	500 V.	ABCD	R.18	63-1912	1.0 Meg.	20%	1/2W.	ABCD	
C.19	22-1876	47 MMF. Cap.	500 V.	ABCD	R.19	63-1850	500 Ohm Burnt Control	ABCD	R.F. Plate coil	A.B.C.D	
C.20	22-2091	6 MMF. Cap.	500 V.	ABCD	R.20	63-1982	190K Ohm	10%	3W.	ABCD	
C.21	22-2195	26 MMF. Cap.	500 V.	ABCD	R.21	63-1771	5V.0m	10%	1/2W.	ABCD	
C.22	22-2236	500 MMF. Cap.	500 V.	ABCD ABCD	R.22	63-1890	330K Ohm	10%	1/2W.	ABCD ABCD	
C.23	22-2194	10 MMF. Electro	250 V.	ABCD	R.23	63-1799	2200 Ohm	10%	1/2W.	ABCD	
C.25	22-2117	470 MMF. Cap.	500 V.	ABCD	R.24	63-1764	330 Ohm	10%	1/2W.	ABCD	
C.26	22-2143	40.0 MMF. Cap.	500 V.	ABCD	R.25	63-1783	100K Ohm	20%	1/2W.	ABCD	
C.27	22-4	.004 MFD. Cap.	500 V.	ABCD ABCD	R.27	63-2022	3500 Ohm	10%	10 W.	ABCD ABCD	
C.28	22-1804	7 MMF. Cap.	500 V.	ABCD	R.28	63-1751	10K Ohm	10%	5 W.	ABCD	
C.29	22-3	.01 MFD. Cap.	500 V.	ABCD ABCD	R.29	63-1765	270 Ohm	10%	2 W.	ABCD ABCD	
C.30	22-1761	50 MMF. Cap.	500 V.	ABCD	R.30	63-0777	400 Ohm	10%	5W.	ABCD	
C.31	22-2106	10 MMF. Cap.	500 V.	ABCD	R.31	63-1744	100 Ohm	20%	1/2W.	ABCD	
C.32	22-2118	.001 MFD.	500 V.	ABCD	R.32	63-2125	500K Ohm Burnt control	ABCD	R.F. Plate coil	A.B.C.D	
C.34	22-1842	.4700 MMF. 10%	200 V.	B.	R.33	63-1782	820 Ohm	10%	1/2W.	ABCD	
C.35	22-1782	.0047 MFD.	600 V.	ABCD	R.34	63-1838	18K Ohm	10%	1/2W.	ABCD	
C.36AD	15 MFD. Electro	475 V.	ABCD	R.35	63-1808	3300 Ohm	10%	1/2W.	ABCD		
C.36DD	22-2122	80 MFD. Electro	300 V.	ABCD	R.36	63-1768	590 Ohm	10%	1/2W.	ABCD	
C.37AD	15 MFD. Electro	475 V.	ABCD	R.37	63-1841	22K Ohm	10%	1/2W.	ABCD		
C.37DD	22-2224	20 MFD. Electro	250 V.	ABCD	R.38	63-1943	4700 Ohm	10%	1W.	ABCD	
C.38AD	15 MFD. Electro	475 V.	ABCD	R.39	63-1845	27K Ohm	10%	1/2W.	ABCD		
C.38DD	22-2223	40 MFD. Electro	250 V.	ABCD	R.40	63-2123	150K Contrast Control	ABCD	Oscillator Grid coil assembly	A.B.C.D	
C.39DD	20 MFD. Electro	475 V.	ABCD	R.41	63-2172	2K Vertical Linearity control	BC	R. F. Antenna coil	A.B.C.D		
C.40AD	20 MFD. Electro	450 V.	ABCD	R.42	63-1865	2.00K Ohm	10%	1/2W.	ABCD		
C.41	22-2223	100 MMF. C-cer. 10%	500 V.	ABCD	R.43	63-2125	100K Brightness Control	ABCD	R.F. Grid coil assembly	A.B.C.D	
C.42	22-2224	100 MMF.	500 V.	ABCD	R.44	63-1911	1.0 Meg.	10%	1/2W.	ABCD	
C.43	22-2224	.015 MFD.	10%	ABCD	R.45	63-1863	100K Ohm	10%	1/2W.	ABCD	
C.44	22-1843	.047 MFD.	600 V.	ABCD	R.46	63-1822	6.8K Ohm	10%	1/2W.	ABCD	
C.45	22-2233	1.0 MMF. C-cer.	500 V.	ABCD	R.47	63-1864	4700 Ohm	20%	1/2W.	ABCD	
C.46	22-2224	.047 MFD.	400 V.	AC	R.48	63-1449	470 Ohm	20%	1W.	ABCD	
C.47	22-2166	.15 MMF.	200 V.	AD	R.49	63-2110	25K A.G.C. Decay Control	ABCD	Series detector peakin coil	A.B.C.D	
C.48	22-2118	.001 MFD.	600 V.	AD	R.50	63-1863	650K Ohm	20%	1/2W.	BC	
C.50	22-1840	.200 MMF.	600 V.	AD	R.51	63-1975	1.0K Ohm	10%	1W.	AD	
			AD	R.52	63-1701	100K Vertical Mag Control	AD	Shunt peakin coil	A		
			AD	R.53	63-2173	750K Vertical Hold Control	BC	Trip coil assembly	A.B.C.D		
			AD	R.54	63-1867	470 Ohm	10%	1/2W.	BC		
			AD	R.55	63-2110	2.5K G.C. Decay Control	BC	Series detector peakin coil	A.B.C.D		
			AD	R.56	63-1861	20% 1/2W.	BC	B - Choke coil assembly	A.B.C.D		
			AD	R.57	63-1738	Intercarrier sound I.F. coil	AD	Shunt peakin coil	A.B.C.D		
			AD	R.58	63-1613	Quadrature coil assembly	AD	Intercarrier sound I.F. coil	A.B.C.D		
			AD	R.59	95-1170	Filter choke	A	Quadrature coil assembly			

C51	22-1841	0.1 MFD.	600 V.		ABCD	R60	C1-175	56K Ohm	10%	1/2W.	ABCD	L60	S-1685	A.M.G.	
C52	22-1865	100 MAF.	10%	500 V.	ABC'D	R61	C1-1813	4700 Ohm	10%	1/2W.	ABC'D	L62	S-17053	Abst Video abut peaking coil	
C53	22-1862	150 MAF.	5%	500 V.	ABC'D	R62	C1-1826	1K Ohm	5%	1/2W.	ABC'D	L63	S-1716	4.5 MAF. Video trap assembly	
C54	22-2071	.002 MFD.	200 V.		ABC'D	R63	C1-1951	3.8K Ohm	10%	1W.	ABC'D	L64	S-17052	2nd Video series peaking coil	
C55	22-2078	.047 MFD.	10%	600 V.	BC	R64	C1-1901	560K Ohm	10%	1/2W.	ABC'D	L65	S-17132	Picture control coil.	
C57	22-1139	470 MAF.	10%	500 V.	ABCD	R65	C1-1875	2SK Horizontal drive control			ABC'D	L66	IN T14	A.	
C58	22-1815	2200 MAF.	600 V.		ABCD	R66	C1-1860	56K Ohm	10%	1W.	ABC'D	L67	IN T14	1/2 Vertical deflection coil.	
C59	22-2163	.001 MFD.	10%	500 V.	ABCD	R67	C1-1951	1.2K Ohm	20%	1/2W.	ABC'D	L68	IN T14	1/2 Vertical deflection coil.	
C60	22-1849	.0047 MFD.	10%	500 V.	C	R68	C1-1978	150 Ohm	20%	2W.	A	L69	IN T14	1/2 Horizontal deflection coil.	
C61	22-4770	1.50 MAF.	500 V.		ABCD	R70	C1-2129	1.2 Ohm	10%	1W.	A	L70	IN T14	1/2 Vertical deflection coil.	
C62	22-1846	.01 MFD.	600 V.		ABC'D	R71	C1-2150	1000 Ohm	10%	4W.	A	L71	IN T14	1/2 Vertical deflection coil.	
C63	22-2034	.605 MAF.	5%	500 V.	ABC'D	R72	C1-1919	3.5 Meg.	20%	1/2W.	ABC'D	L72	IN T13	1/2 Horizontal deflection coil.	
C64	22-1814	2200 MAF.	10%	600 V.	ABC'D	R73	C1-2145	10K Ohm	20%	2W.	A	L73	IN T13	1/2 Horizontal deflections coil.	
C65	22-1851	.001 MFD.	1K V.		ABC'D	R74	C1-1876	1.5K Ohm	10%	1/2W.	ABC'D	L74	S-17114	Horizontal oscillator coil.	
C66	22-2146	.57 MFD.	200 V.		AD	R75	C1-2137	100K Ohm	10%	1W.	ABC'D	L75	S-17112	Width control.	
C67	22-2161	0.1 MFD.	400 V.		ABC'D	R76	C1-2103	200K Ohm	10%	1W.	ABC'D	L76	S-17175	Width control.	
C68	22-2098	.47 MFD.	200 V.		AD	R77	C1-2090	200K Focus Control			BCD	L78	S-17176	Horiz. linearity control.	
C69	22-2281	0.15 MFD.	400 V.		BCD	R78	C1-2101	400K Ohm	10%	5W.	BCD	L79	S-17400	Picture control coil.	
C70	22-2170	500 MAF.	10K V.	A	ABC'D	R79	C1-1705	3.3 Ohm	10%	1W.	ABC'D	L80	95-1218	Filmer choke.	
C71	22-2112	.001 MFD.	500 V.	A C	ABC'D	R80	C1-1705	3300 Ohm	10%	1/2W.	BC	L81	95-1730	Env. - P.M. Focus coil.	
C72	22-1777	0.1 MFD.	10K V.	B	ABC'D	R81	C1-2134	1.5K Ohm	20%	5W.	BCD	L82	S-17173	Antenna coil assembly.	
C73	22-1810	0.1 MFD.	10%	200 V.	ABC'D	R82	C1-1983	47 OHM	20%	2W.	BC	L83	S-17018	EM. - P.M. Focus coil.	
C74	22-2168	33 MAF.	10%	500 V.	ABC'D	R83	C1-2425	1.5K Ohm	10%	7W.	BCD	L84	S-16884	Filament choke assembly.	
C75A,B	22-2322	-20 MFD. Electro.	500 V.	BC	R84	C1-2076	3.3 Ohm	20%	1/2W.	B	L85	S-17005	Inverter plate probing assembly.		
C76,B	22-2322	15 MFD. Electro.	475 V.	BC	R85	C1-2177	1.8K Ohm	10%	4W.	BC	L86	IN T15	1/2 Vertical deflection coil.		
C77	22-2112	.001 MFD.	500 V.	BC	R86	C1-2136	1500 Ohm	10%	7W.	BC	L87	IN T15	1/2 Vertical deflection coil.		
C78	22-1777	0.1 MFD.	10K V.	BC	R87	C1-1814	4750 Ohm	20%	1/2W.	BC	L88	IN T15	1/2 Horizontal deflection coil.		
C79	22-1810	0.1 MFD.	200 V.	BC	R88	C1-1997	6800 Ohm	10%	2W.	BC	L89	IN T15	1/2 Horizontal deflection coil.		
G78AA	22-2225	20 MFD. Electro.	300 V.	BC	R89	C1-1848	3.3 Ohm	20%	1/2W.	ABC'D	L90	IN T19	B		
C81	22-2244	0.47 MFD.	200 V.	BC	R90	C1-1758	220 Ohm	20%	1/2W.	ABC'D	A	91	IN T19	1/2 Vertical deflection coil.	
C82	22-1812	500 MAF.	20K V.	BC	R91	C1-1754	100 Ohm	10%	1/2W.	ABC'D	A	92	IN T19	1/2 Horizontal deflection coil.	
C83	22-2127	.001 MFD.	800 V.	BC	R92	C1-1979	6800 Ohm	10%	2W.	ABC'D	L93	IN T19	1/2 Horizontal deflection coil.		
C84	22-1845	3.10 MAF.	10%	500 V.	ABC'D	R93	C1-1979	68K Ohm	10%	1W.	ABC'D	D	94	95-1271	Filmer choke.
C85	22-1137	1.50 MAF.	10%	500 V.	ABC'D	R94	C1-1778	680 Ohm	10%	1/2W.	B	L95	S-17651	EM-P.M. Focus coil.	
C86B	22-1650	1.50 MAF. Speakerplate		ABC'D	R95	C1-1904	680K Ohm	10%	1/2W.	BD	D	T18	S-17435	Horiz. sweep transformer.	
C86C	22-1650	1.50 MAF. Speakerplate		ABC'D	R96	C1-1970	47 Ohm	10%	1W.	CD	D	T18	S-17436	Power transformer.	
W1	5-17195	Power Supply cable		BC	R97	C1-1581	4.7 Ohm	10%	1/2W.	ABC'D	T16	95-1260	Horiz. sweep transformer.		
CX		Supplied with deflection yoke		BC	R98	C1-1733	8200 Ohm	10%	2W.	ABC'D	T15	95-1253	Deflection yoke.		
PL-1	100-67	Print Light		ABC'D	R99	C1-16873	Channel strip assy. #13			ABC'D	T14	S-17130	Horiz. sweep transformer.		
S1	85-488	Picture Control switch		ABC'D	R100	C1-16873	Channel strip assy. #12			ABC'D	T13	95-1246	Deflection yoke.		
A1	87-1	Geigeron-Lidde crystal (IN64)		ABC'D	R101	C1-16870	Channel strip assy. #11			ABC'D	T12	95-1244	Deflection yoke.		
A2	103-1	Integrator		ABC'D	R102	C1-16870	Channel strip assy. #10			ABC'D	T11	95-1240	Vertical output transformer.		
49-534	12 - P.M. Speaker used in Models H3375			ABC'D	R103	C1-16869	Channel strip assy. #9			ABC'D	T10	95-1239	Vertical output transformer.		
49-549	10" P.M. Speaker used in Models H2250 - H2255E			ABC'D	R104	C1-16868	Channel strip assy. #8			ABC'D	T9	95-1245	Power transformer.		
49-549	H2337 - H2338 - H2352			ABC'D	R105	C1-16867	Channel strip assy. #7			ABC'D	T8	95-1242	Power transformer.		
	H2353E			ABC'D	R106	C1-16866	Channel strip assy. #6			ABC'D	T7	95-1247	Output transformer.		
				ABC'D	R107	C1-16855	Channel strip assy. #5			ABC'D	T6	95-1248	Output transformer.		
				ABC'D	R108	C1-16854	Channel strip assy. #4			ABC'D	T5	S-17131	5th Video L.F. transformer.		
				ABC'D	R109	C1-16853	Channel strip assy. #3			ABC'D	T4	S-16805	4th Video L.F. transformer.		
				ABC'D	R110	C1-16852	Channel strip assy. #2			ABC'D	T3	S-16804	3rd Video L.F. transformer.		
				ABC'D	R111	C1-16851	Channel strip assy. #1			ABC'D	T2	S-16815	2nd Video L.F. transformer.		
				ABC'D	R112	C1-16850	Channel strip assy. #0			ABC'D	T1	S-16814	1st Video L.F. transformer.		

A INDICATES CHASSIS 24421
B INDICATES CHASSIS 24320
C INDICATES CHASSIS 23322
D INDICATES CHASSIS 23323

Fig. 13 Circuit Legend.

NUMERICAL PARTS LIST

MODELS. H2226E - H2226R & RQ - H2227E & EQ
 H2227R & RQ - H2250R & RQ - H2255E & EQ
 CHASSIS 22H20

MAIN CHASSIS

Diag. No.	Part No.	Description	Suggested List Price	Diag. No.	Part No.	Description	Suggested List Price
	12-1756	Pilot Light Bkt.		C55	22-2078	.047 Mfd. 10%	600V
	19-166	Coil Mtg. Clip (used on S-1714)	.06	C68	22-2098	.47 Mfd. (molded)	200V .65
	19-175	Coil Mtg. Clip (1 ea. used on S-17176- S-17112 S-16855 S-17116)	.06	C71	22-2112	.001 Mfd. Ceramic	500V .30
	19-206	Coil Mtg. Clip (used on S-17132)		C70	22-2120	500 Mmfd (molded)	10,000 (Special) 1.75
	19-207	C.R. Tube Mtg. Clip		C36AD		Elect. 15 Mfd. 475V 15 Mfd	
C29	22-3	.01 Mfd. Ceramic (Disc) (2 used) 500V	.26	BD-CD	22-2122	475V - 40 Mfd 50V 80 Mfd	
C27	22-4	.004 Mfd. Ceramic (Disc) (2 used) (or 22-1706) 500V	.26	DD		300V	4.00
C45	22-5	110 Mmf. 500V		C49	22-2128	.001 Mfd. (molded) (2 used)	600V .26
C52	22-365	100 Mmfd. Mica (molded)		C56	22-2133	500 Mmf 10%	500V
C61	22-470	150 Mmfd. Mica (molded)		C4	22-2139	2 Mmf.	500V
C22	22-2216	500 MMF Cer. 500V		C66	22-2146	.47 Mfd.	200V
C57	22-1138	470 Mmfd Mica (molded)		C24AA	22-2154	Elect. 10 Mfd.	250V 1.25
		500V		C79	22-2159	.33 Mfd.	200V
	22-1645	330 Mmfd. Mica (molded)		C53	22-2162	130 Mmfd - Mica	500V .26
		500V		C59	22-2163	1000 Mmfd - Mica	500V .45
C46	22-1775	.047 Mfd. Mica (molded) (2 used) 400V	.26	C47	22-2166	.15 Mfd.	200V .45
C72	22-1777	0.1 Mfd. 200V	.26	C74	22-2188	33 Mmfd Ceramic	500V .20
C35	22-1782	.0047 Mfd. (molded) (2 used) 600V	.26	C37AD		Elect. 20 Mfd. 475V - 40 Mfd.	
C73	22-1810	0.1 Mfd. 200V	.26	BD-CD	22-2223	300V - 80 Mfd. 25V - 100 Mfd	
C64	22-1814	.0022 Mfd. (molded)		DD		50V	
		(2 used) 600V	.26	C38AD		Elect. 20 Mfd. 200V - 20 Mfd.	
C51	22-1841	.1 Mfd. (molded) 600V	.45	BD-CD	22-2224	450V - 40 Mfd. 450V - 20 Mfd	
C82	22-1832	500 Mmfd. 20KV		DD		25V	
C34	22-1842	4700 Mmf. 10% 200V		C78AA	22-2225	20 Mfd. Electro	300V
C44	22-1843	.01 Mfd. 10% 600V		C75AB	22-2232	20 Mfd. Electro	300V
C39	22-1844	.047 Mfd. (Molded)		C75BB	22-2232	15 Mfd. Electro	475V
		600V		C40	22-2233	20 Mmfd Ceramic	500V
	22-1845	.0022 Mfd.				(2 used)	
		600V	.26	C41	22-2234	100 Mmfd - Ceramic	500V
	22-1846	.01 Mfd. (molded)		C81	22-2244	.47 Mid.	200V
		400V	.26	C80	22-2245	.062 Mid. 10%	600V
C60	22-1849	.0047 Mid. 10% 600V		C43	22-2248	.0033 Mid. 10%	800V
C65	22-1851	.001 Mfd. (molded) 1000V	.26	C69	22-2261	.15 Mid.	400V
C19	22-1876	47 Mmfd. Ceramic 500V	.35	C42	22-2264	.015 Mid	600V
C50	22-1880	.0012 Mfd. (molded) 600V	.26			34-183 Turret Drive Gear	.25
C63	22-2034	680 Mmfd (molded) 500V	.35			52-591 Insulated Shielded Lead	
C67	22-2061	.1 Mfd. (molded) 400V	.35			54-139 3/8-32x9/16" Hex Pal-	
C54	22-2071	.022 Mfd. (molded) 200V	.26			nut (7 used on controls) .01	
				R38	63-943	57-1675 Shaft Retaining Plate	
						58-188 Two Prong Plug	.08
						58-191 Nine Prong Adapter Plug	
						63-943 4700 Ohm 1W 10% Ins.	
						Res. (2 used) .24	
				R63	63-957	63-1065 15K Ohm 1W 10% Ins. Res.	.24
						63-1160 56K Ohm 1W 10% Ins. Res.	
						(2 used) .24	
				R79	63-1449	63-1449 470 Ohm 20% 1W	
				R66	63-1571	63-1571 6800 Ohm 2W 10% Ins. Res.	.33
						63-1578 150 Ohm 2W 20% Ins. Res.	
				R68	63-1620	63-1620 1800 Ohm 10% SW	
				R85	63-1674	Vertical Linearity Control	1.20
				R59			

Diag. No.	Part No.	Description	Suggested List Price	Diag. No.	Part No.	Description	Suggested List Price
R65	63-1675	25K Horiz. Dr. Control		R19	63-2050	Bias Control	
R31	63-1744	160 Ohm 1/2W 20% Ins.Res.	.21	R77	63-2099	20K Focus Control	
R67	63-1751	150 Ohm 1/2W 20% Ins. Res.	.21	R30	63-2077	400 Ohm W.W. 5W 10%	
R91	63-1754	180 Ohm 1/2W 10% Ins.Res.	.21	R76AB	63-2103	Ins. Res.	.43
R90	63-1758	220 Ohm 1/2W 20% Ins.Res.	.21	R76BB	63-2103	200 Ohm 10% 3W	
R29	63-1761	270 Ohm 1/2W 10% Ins.Res.	.21	R55	63-2110	200 Ohm 10% 3W	
R24	63-1764	330 Ohm 1/2W 10% Ins. Res.	.21	R84	63-2114	Vertical Size Control	1.20
R36	63-1768	390 Ohm 1/2W 10% Ins. Res.	.21	R40	63-2123	2.2 Ohm 1/2W 10% Ins.Res.	
R21	63-1771	470 Ohm 1/2W 10% Ins.Res.	.21	R32	63-2125	Contrast Control	
R60	63-1775	560 Ohm 1/2W 10% Ins. Res. (used on 95-1241 - 2 used)	.21	R43	63-2126	Vol. Control & Switch	1.81
R94	63-1778	680 Ohm 10% 1/2		R52	63-2127	Intensity Control	1.20
R33	63-1782	820 Ohm 1/2 W 10% Ins.Res.	.21	R69	63-2128	Vertical Hold Control	1.20
R35	63-1806	3300 Ohm 1/2W 10% Ins.Res.	.21	R70	63-2129	15K Ohm W.W. 7W 10%	
R80	63-1807	3300 Ohm 1/2W 20% Ins. Res.	.21	R81	63-2134	Ins. Res.	
R61	63-1813	4700 Ohm 1/2V 10% Ins.Res.	.21	R83	63-2135	1.2 Ohm W.W. 1/2W 10%	
		(2 used)		R75	63-2137	150 Ohm 5W 20% Ins.Res.	
R62	63-1826	10K Ohm 1/2W 5% Ins. Res.		R53	63-2140	15K Ohm 10W 10% Ins.Res.	
R34	63-1838	18K Ohm 1/2W 10% ins.Res.	.21	R73	63-2145	100K Ohm 1W 10% Ins.Res.	
R37	63-1841	22K Ohm 1/2W 10% Ins. Res.		R71	63-2150	500K Vertical Hold Control	
		(2 used)		R50	63-2153	10K Ohm 2W 20% Ins.Res.	
R92	63-1844	27K Ohm 1/2W 5% Ins.Res.		R51	63-2151	4700 Ohm W.W. 4W 10%	
R39	63-1845	27K Ohm 1/2W 10% Ins.Res.	.21	R58	63-2159	AGC Delay Control	
R89	63-1848	33K Ohm 1/2W 10% Ins.Res.	.21		73-114	150K Ohm 2W 20% Ins.Res.	
R5	63-1855	47K Ohm 1/2W 10% Ins.			78-605	Vert. Hold Range Cont.	
		Res. (3 used)			78-580	8-32x5/16" Slab Hd. Set.	
R47	63-1862	68K Ohm 1/2W 10% Ins.Res.	.21		78-640	Horiz. Hold Control Shaft	
R56	63-1863	68K Ohm 1/2W 20% Ins.Res.	.21		78-709	Nine Contact Socket	.22
R46	63-1869	100K Ohm 1/2W 10% Ins.			78-755	Elect. Cond. Socket	.05
		Res. (4 used)			78-807	Octal Tube Socket	.20
R25	63-1870	100K Ohm 1/2W 20% Ins.Res.			78-834	Octal Tube Socket	.18
		(2 used)			78-840	Two Contact Socket	.15
R74	63-1876	150K Ohm 1/2W 10% Ins.Res.	.21		78-875	C.R. Tube Socket	.30
R42	63-1883	220K Ohm 1/2W 10% Ins.Res.			78-876	Noval Miniature Tube	.40
		(2 used)			78-900	Socket	.25
R49	63-1884	220K Ohm 1/2W 20% Ins.Res.			78-908	Pilot Light Socket & Wire	
		(2 used)			80-744	Miniature Tube Socket	
R22	63-1890	330K Ohm 1/2W 10% Ins.Res.			80-744	PM Focus Mtg. Spring	
		(3 used)				(4 used)	.02
R44	63-1894	390K Ohm 1/2W 10%					
R48	63-1898	470K Ohm 1/2W 20% Ins.Res.		80-802		Retaining Spring (1 ea.	
		(2 used)				used on 149-100 - 149-101	.06
R64	63-1901	560K Ohm 1/2W 10% Ins.Res.	.21	80-822		Dial Cord Tension Spring	.10
R95	63-1904	680K Ohm 1/2W 10%		80-823		Shaft Guide Spring (used	
R45	63-1911	1 Megohm 1/2W 10% Ins.Res.				on S-17114)	
		(4 used)		80-824		Tube Plate Connector	
R18	63-1912	1 Megohm 1/2W 20% Ins.Res.				Spring (2 used)	
		(2 used)		80-838		C.R. Tube Retaining Sprg.	
R72	63-1919	1.5 Megohm 1/2W 20% Ins.Res.	.21	83-1837		Anode Lead Support Strip	
R17	63-1926	2.2 Megohm 1/2W 20% Ins.Res.				Picture Control Switch	
		(2 used)		S1		Integrator Unit	.26
R57	63-1975	12K Ohm 1W 10% Ins.Res.	.24	A1	87-1	Brass Washer (used on	
R20	63-1982	100K Ohm 2W 10% Ins.Res.			93-2	22-2154)	
R82	63-1983	47 Ohm 2W 20% Ins.Res.			93-525	Fibre Washer (2 used on	
R78	63-2017	4000 Ohm 5W 10%			78-7091	78-7091)	.65C
R27	63-2022	10K Ohm W. W. 5W 10%			93-961	Insulating Washer (Con-	
		Ins. Res.			93-971	trast control)	.03
R26	63-2023	3500 Ohm W. W. 10W 10%				Shell Support Washer (hor-	
		Ins. Res.				izontal Sweep)	.02

Diag. No.	Part No.	Description	Suggested List Price	Diag. No.	Part No.	Description	Suggested List Price
	93-1057	Insulating Washer (Con- trast Control)			S-17096	Dial Cord & Eyelet Assy. (Fine Tuning)	
L59	95-1170	Filter Choke	2.00		S17097	Brkt. Pulley & Gear Assy.	
T6	95-1238	Audio Output Trans.			S-17100	RF Shelf & Turret Assy.	
T10	95-1239	Vertical Output Trans.		L75	S-17112	Horiz. Size Control Coll Assy.	
T12	95-1241	Deflection Coll			S-17113	Horiz. Linearity & Size Control & Brkt. Assy. (Includes L75, L77)	
T8	95-1242	Power Trans.		L74	S-17114	Horiz. Osc. Coll Assy.	
PL1	100-67	Pilot Light	.11	L63	S-17116	4.5 Mc Video Trap Coll Assy.	
	112-88	Thumb Screw #8-32	.06		S-17121	Rectifier Mtg. Plate Assy.	
	112-758	#4-40x1/4 RHST (used on 85-488)	.02	T14	S-17127	Plug & Brkt Assy.	
	114-45	#8x3/8" Hex.Hd. S.T. Screw (2 used on S-17076)	1.10C	L65	S-17130	Horiz. Sweep Trans. Assy. (or S-17285)	
	114-201	#8x5/16" Hex. Hd. S.T. Screw (22 used)	.75C	L77	S-17132	Picture Control Coll Assy.	
	114-310	#8x5/16" Hex Washer Hd. S.T. (4 used)	.04		S-17176	Horiz. Linearity Control Coll Assy.	
	114-336	#10x5/16" Hex.Hd. S.T. (4 used on 95-1242)			S-17362	Indicator Drum & Shaft Assy.	
	125-26	Rubber Grommet (2 used on 78-709)	.03		S-17377	Contrast Control Shaft & Bush- ing Assy.	
	126-643	Fire Shield			S-17409	Insulator Strip & Terminal Assy.	
	136-21	Fuse 1/4 Amp.			S-17425	Fine Tuning Ext.Shaft & Coupling Bushing.	
	149-89	Iron Core (2 used on S-16855 & S-17116)	.10		S-17428	Anode Lead & Wire Assy.	
	149-98	Iron Core & Screw (used on S-17132)	.40		S-17164	Beam Bender unit all 12" and 19" tubes.	
	149-100	Iron Core & Spring (used on S-17113)	.20				
	149-101	Iron Core & Spring (used on S-17113)	.35				
	149-102	Iron Core & Screw (Used on S-17114)					
	188-131	Retaining Ring (used on S-17097)	.07				
	188-137	Retaining Ring (used on S-17362)	.08				
	196-145	Plastic Gasket					
	196-152	C.R. Tube Support Gasket					
	199-124	Focus Coil Sleeve	.02				
	S-16020	PM Focus & Centering Assy.	5.50	C2	6-65	Ball Bearing	
	S-17461	Beam Bender unit all 16" including rectangular tubes.			22-1879	Slug Tuned Trimmer Cond. (4 used)	.45
	S-16207	Deflection Yoke Mtg. Brkt. Assy.	.85	C6	22-1892	7 Mmfd. Ceramic	.26
	S-16209	Wire and Eyelet Assy.		C1	22-1894	8 Mmfd Ceramic	.35
L60	S-16855	Sound Trap Coll Assy.	.85	C3	22-1951	4.5 Mmfd Ceramic	.35
L64	S-17052	2nd Video Series Peak- ing Coll Assy.		C5	22-2139	2.0 Mmfd Ceramic	.35
L62	S-17053	2nd Video Shunt Peak- ing Coll Assy.		C7	22-2205	21 Mmfd Ceramic	.35
	S-17064	Video IF Strip Assy. (Complete)			22-2206	24 Mmfd Ceramic	.35
	S-17076	Gasket Reinforcing Brkt Assy.			46-779	Adjusting Wrench Knob and Set Screw	.20
	S-17081	C.R. Tube Socket & Wire Assy.			56-263	Groove Pin 1/8" dia. x 1/4" lg.	.02
	S-17084	Shaft-Gear & Coupling Assy.			57-1428	Bearing Plate	.10

TURRET TUNER ASSEMBLY

		57-1676	Bearing Plate	.15
		68-12	Adjusting Wrench	
		73-114	8-32x5/16 Slab Hd. Set Screw (2 used on S15024)	.01
		80-697	Adjusting Wrench Return Spring	.02
		94-734	Bearing Retaining Bushing	

Diag. No.	Part No.	Description	Suggested List Price	Diag. No.	Part No.	Description	Suggested List Price
TURRET TUNER ASSEMBLY (CONT'D)							
	114-201	#8x5/16" Hex.Hd S.T. Screw (4 used on S15022)	.75C		69-11	6-32x 3/4" RHMS Steel (1 used on ea. 22-2093)	.70C
	184-14	Steel Ball 1/8" Dia. (9 used)	.01		78-885	Miniature Tube Socket (molded)	.20
	S-15022	Turret Cover Assy.	1.75		78-886	Miniature Tube Socket	.20
	S-15024	Gear & Bushing Assy.	.60		78-888	Miniature Tube Socket	.30
ST2	S-16862	Channel Strip Assy. #2	3.25		80-736	Shaft Tension Spring	.08
ST3	S-16863	Channel Strip Assy. #3	3.25		83-1570	Antenna Terminal Strip	.15
ST4	S-16864	Channel Strip Assy. #4	3.25		93-1053	Bakelite Washer	.02
ST5	S-16865	Channel Strip Assy. #5	3.25		112-768	Spark Plate Mtg. Screw	.02
ST6	S-16866	Channel Strip Assy. #6	3.25		126-622	Tube Shield	.15
ST7	S-16867	Channel Strip Assy. #7	3.25		126-638	RF Shelf Shield	.25
ST8	S-16868	Channel Strip Assy. #8	3.25		149-74	Iron Core (used on S-17173)	.10
ST9	S-16869	Channel Strip Assy. #9	3.25		149-75	Iron Core & Screw (used on S-16265)	.20
ST10	S-16870	Channel Strip Assy. #10	3.25		149-92	Iron Core (used on S-17104)	.15
ST11	S-16871	Channel Strip Assy. #11	3.25		149-97	Iron Core & Screw (used on S-16501)	.10
ST12	S-16872	Channel Strip Assy. #12	3.25	L52	S-16265	Oscillator Coil Assy.	.40
ST13	S-16873	Channel Strip Assy. #13	3.25	L53	S-16501	Trap Coil Assy.	.45
	S-17092	Turret Housing Assy.			S-16651	Tuning Shaft & Cam Assay.	.80
	S-17098	Turret Tuner Assy. (Mechanical)			S-17099	RF Shelf Assy. (Complete)	
	S-17445	Bearing and Brkt. Assy.		L51	S-17104	Converter Plate Coil Assy.	.60
	S-17446	Turret Detent Spring Assy.		L82	S-17173	Antenna Coll. Assy.	.40
					S-17191	Shielded Cable Assy.	
					S-17194	Tuning Shaft & Pulley Assy.	

RF SHELF ASSEMBLY

							TUBES	
	19-166	Coil Mtg. Clip (1 ea. used on S-16265 & S-16501)	.06				2 - 6CB6 1 - 6C4	
	19-179	Coil Mtg. Clip (used on S-17104)	.06					
C19	22-1876	47 Mmfd Ceramic	500V	.35				
C16	22-1891	2.5 Mmfd Ceramic	500V	.35				
C10	22-2050	5 Mmfd Ceramic	500V	.30				
C20	22-2051	6 Mmfd Ceramic	500V	.35				
C8-9-13	22-2093	Trimmer Cond. (3 used)		.20				
C21	22-2155	26 Mmfd	500V	.30				
C18	22-2204	20 Mmfd Ceramic	500V	.35				
C17	22-2207	4.5 Mmfd Ceramic	500V	.30				
C22	22-2216	500 Mmfd Ceramic	500V	.35				
C11	22-2219	470 Mmfd Ceramic (4 used)	500V	.30				
C15	22-2220	Trimmer Cond.		.30				
C14	27-69	Silver Mica Disc.		.10				
C12	27-82	Silver Mica Disc.		.10				
	54-293	Locknut (1 used on ea. 22-2093)		.03				
	57-1689	Insulating Plate (Spark Plate) (2 used)						
R7	63-1702	10 Ohm 1/2W 10% Ins.Res.	.21		63-1571	6800 Ohm 2W 10% Ins.Res.	.33	
	63-1785	1000 Ohm 1/2W 10% Ins.Res.	.21	R12	63-1743	100 Ohm 1/2W 10% Ins.Res. (3 used)	.21	
R2	63-1827	10K Ohm 1/2W 10% Ins.Res.	.21		R91	63-1754	180 Ohm 1/2W 10% Ins.Res.	.21
R8	63-1835	15K Ohm 1/2W 20% Ins.Res.	.21		R21	63-1771	470 Ohm 1/2W 10% Ins.Res.	.21
	63-1855	47K Ohm 1/2W 10% Ins.Res.	.21		R13	63-1772	470 Ohm 1/2W 20% Ins.Res. (6 used)	.21
R4	63-1933	3.3 Megohm 1/2W 20% Ins. Res.	.21		R33	63-1782	820 Ohm 1/2W 10% Ins.Res.	.21
R3	63-1967	1500 Ohm 1W 10% Ins.Res.	.24	R6	63-1785	1000 Ohm 1/2W 10% Ins.Res.	.21	

Diag. No.	Part No.	Description	Suggested List Price	Diag. No.	Part No.	Description	Suggested List Price
C78AA	22-2226	Elect. 20 Mfd 300V		R44	63-1894	390K Ohm 1/2W 10% Ins.Res.	
C75AB	22-2232	Elect. 20 Mfd 300V		R48	63-1898	470K Ohm 1/2W 20% Ins.Res. (2 used)	
C75BB		15 Mfd. 475V		R64	63-1901	560K Ohm 1/2W 10% Ins.Res.	
C40	22-2233	20 Mmfd Ceramic (2 used) 500V		R103	63-1906	750K ohm 1/2W 5% Ins. Res.	
C41	22-2234	100 Mmfd Ceramic 500V		R45	63-1911	1 Megohm 1/2W 10% Ins.Res.	
C81	22-2244	.47 Mid 200V		R18	63-1912	1 Megohm 1/2W 20% Ins.Res.	
C43	22-2248	.0033 Mid 600V		R72	63-1919	1.5 Megohm 1/2W 20% Ins.Res.	
C69	22-2261	.15 Mid 400V		R17	63-1926	2.2 Megohm 1/2W 20% Ins.Res.	
	24-554	Fire Shield Rear Cover		R4	63-1933	3.3 Megohm 1/2W 20% Ins.Res.	
	52-591	Insulated Shielded Lead		R20	63-1982	100K Ohm 2W 10% Ins.Res. (2 used)	
	52-592	Insulated Shielded Lead		R82	63-1983	47 Ohm 2W 20% Ins.Res.	
	54-139	3/8-32x9/16" Hex Pal- nut (8 used to mt. controls)		R78	63-2017	4000 Ohm W.W. 5W 10% Ins. Res. (2 used)	
	57-1875	Shaft Retaining Plate (used on 76-604)		R19	63-2050	Bias Control	
	58-191	Nine Prong Adapter Plug		R77	63-2099	Focus Control	
R63	63-957	33K Ohm 1W 10% Ins.Res.		R76AB	63-2103	400 Ohm W.W. (Center Tapped)	
R79	63-1065	15K Ohm 1W 10% Ins.Res.		R55	63-2110	Vertical Size Control	
	63-1201	1800 Ohm W.W. 3W 10% Ins.Res.		R98	63-1581	4.7 ohm 1/2W 10% Ins.	
R54	63-1449	470 Ohm W.W. 1W 20% Ins. Res.		R40	63-2123	Contrast Control	
	63-1565	4700 Ohm 1W 20% Ins.Res. (2 used)		R32	63-2125	Vol. Control & Switch	
R59	63-1674	Vertical Linearity Control		R43	63-2126	Intensity Control	
R50	63-1675	Horiz. Drive Control			63-2130	150K Ohm 1W 10% Ins.Res.	
R12	63-1743	100 Ohm 1/2W 10% Ins.Res. (3 used)		R81	63-2134	150K Ohm 5W 20% Ins.Res.	
R31	63-1744	100 Ohm 1/2W 20% Ins.Res.		R83	63-2135	15K Ohm 10W Candolhm	
R67	63-1751	150 Ohm 1/2W 20% Ins.Res. (2 used)		R75	63-2137	100K Ohm 1W 10% Ins.Res.	
R36	63-1768	390 Ohm 1/2W 10% Ins.Res.		R53	63-2140	Vertical Hold Control	
R21	63-1771	470 Ohm 1/2W 10% Ins.Res. (2 used)			63-2153	AGC Control	
R60	63-1775	560 Ohm 1/2W 10% Ins.Res. (used on 95-1246)(2 used)		73-112		#8-32x1/2" Slab. Hd. Set	
R33	63-1782	820 Ohm 1/2W 10% Ins.Res.		73-114		Screw (2 used on S-17093)	
R6	63-1785	1000 Ohm 1/2W 10% Ins.Res.			76-604	#8-32x5/16" Slab Hd. Set. Screw	
R35	63-1806	3300 Ohm 1/2W 10% Ins. Res.			76-605	(2 used S-17083 and 4 used S-16529)	
R80	63-1807	3300 Ohm 1/2W 20% Ins.Res.			78-250	Fine Tuning Extension Shaft	
R61	63-1813	4700 Ohm 1/2W 10% Ins.Res. (3 used)			78-580	Horiz. Hold Control Shaft	
R62	63-1826	10K 1/2W 5% Ins.Res.			78-706	Elect. Cond. Socket	
R11	63-1834	15K Ohm 1/2W 10% Ins.Res.			78-709	Nine Contact Socket	
R34	63-1838	18K Ohm 1/2W 10% Ins.Res.			78-755	Octal Socket	
R37	63-1841	22K Ohm 1/2W 10% Ins.Res.			78-807	Octal Tube Socket	
R39	63-1845	27K Ohm 1/2W 10% Ins.Res.			78-834	Miniature Tube Socket(2 used)	
R89	63-1848	33K Ohm 1/2W 10% Ins.Res.			78-840	Octal Tube Socket	
R5	63-1855	47K Ohm 1/2W 10% Ins.Res. (2 used)			78-875	AC Socket	
R47	63-1862	68K Ohm 1/2W 10% Ins.Res.			78-876	CR Tube Socket	
R56	63-1863	68K Ohm 1/2W 20% Ins. Res.			78-883	Noval Miniature Tube Socket	
R46	63-1869	100K Ohm 1/2W 10% Ins. Res. (3 used)			78-900	Nine Contact Socket	
R25	63-1870	100K Ohm 1/2W 20% Ins.Res. (3 used)			80-744	Pilot Light Socket & Wire	
R42	63-1883	220K Ohm 1/2W 10% Ins.Res. (3 used)			80-802	Focus Mtg. Spring (4 used)	
R49	63-1884	220K Ohm 1/2W 20% Ins.Res. (2 used)			80-822	Retaining Spring (1 ea. used on 149-100 & 149-101)	
R22	63-1890	330K Ohm 1/2W 10% Ins.Res.			80-823	Dial Cord Tension Spring	
					80-824	Shaft Guide Spring	
					80-825	Tube Plate Connector	
					83-1802	Spring (2 used)	
					85-488	C.R. Tube Retaining Spring	
					87-1	Fuse Mtg. Strip	
						Picture Control Switch	
						Integrator Unit	

Diag. No.	Part No.	Description	Suggested List Price	Diag. No.	Part No.	Description	Suggested List Price
93-2		Brass Washer (used on 22-2154)		S-17127		Plug & Bracket Assy.	
93-525		Fibre Washer (2 used on 78-709)		S-17138		Gasket Reinforcing Brkt. Assy.	
93-961		Insulating Washer (used on Contrast Control)		S-17140		Horizontal Sweep Transformer Assy.	
93-971		Shell Support Washer (used on Horiz. Sweep)		S-17174		Deflection Yoke Mtg. Brkt Assy.	
93-1057		Insulating Washer (used on Contrast Control)		S-17175		Horizontal Size Control Assy.	
95-1240		Vertical Output Trans.		S-17176		Horiz. Linearity Control Coil Assy.	
95-1246		Deflection Coil		S-17177		Horiz. Size Control & Horiz. Linearity Control & Brkt. Assy.	
100-67		Pilot Light		S-17178		Fire Shield Assy.	
112-88		Thumb Screw #8-32 (Deflection Coil)		S-17179		Horiz. Sweep Trans. Mtg. Plate Assy.	
112-758		#4-40x1/4" RHST (used on 85-488)		S-17185		C.R. Tube & Socket Assy.	
114-45		#8x3/8" Hex Hd. S.T. Screw (2 used on S-17138)		S-17187		Insulator Strip & Terminal Assy.	
114-268		#6x1/4" Hex. Hd. S.T. (2 used on 24-554)		S-17230		Mechanical Centering & Focus Assy.	
114-310		#8x5/16" Hex. Washer Hd.S.T. #8x5/16" Hex Washer Hd. S.T. (4 used on Turret and 2 used Deft. Coil)		S-17362		Indicator Drum & Shaft Assy.	
125-26		Rubber Grommet (2 used on 78-709)		S-17377		Contrast Control Shaft & Bushing Assy.	
136-22		Fuse 1/4 Amp.		S-17400		Picture Control Coil Assy.	
149-89		Iron Core (1 ea. used on S-16855 & S-17116)		S-17425		Fine Tuning Shaft & Bushing Assy.	
149-98		Iron Core & Screw (used on S-17400)		S-17429		Anode Lead & Eyelet Assy.	
149-100		Iron Core & Spring (used on S-17177)		S-17461		Beam Bender Unit	
149-101		Iron Core & Spring (used on S-17177)				TUBES	
149-102		Iron Core & Screw (used on S-17114)		1 - 10GP4B		3 - 6SN7GT	
188-131		Retaining Ring (used on S-17097)		1 - 1B3GT		1 - 6SN7GTA	
188-137		Retaining Ring (used on S-17362)		1 - 6AL5		1 - 6W4GT	
196-146		Plastic Gasket		1 - 6BN6		1 - 12AU7	
196-152		C.R. Tube Support Gasket		2 - 6BQ6GT			
199-124		Focus Coil Sleeve					
S-16855		Sound Trap Coil					
S-17052		2nd Video Series Peaking Coil Assy.		22-2127	.001 Mfd. (Molded) 600V Elect. 20 Mfd. 200V - 20 Mfd		
S-17053		2nd Video Shunt Peaking Coil Assy.		22-2224	450V 40 Mfd. 450V 20 Mfd 25V		
S-17064		Video IF Strip Assy. (Complete)		54-42	10-32x5/16x3/32 Hex. Nut Steel N.P. (4 used 95-1245) .01		
S-17083		Gear Bushing & Set Screw Assy.		58-172	Nine Prong Plug .30		
S-17084		Shaft Gear & Coupling Assy.		63-1764	330 Ohm 1/2W 10% Ins. Res. .21		
S-17098		Dial Cord & Eyelet Assy.		63-1814	4700 Ohm 1/2W 20%		
S-17097		Brkt., Pulley & Gear Assy.		63-1997	Ins. Res. .21		
S-17100		RF Shelf & Turret Assy. (Complete)		63-2022	6800 Ohm W.W. 2W 10% Ins. Res. .33		
S-17114		Horiz. Osc. Coil Assy.		63-2136	10K Ohm W.W. 5W 10% Ins. Res. .60		
S-17116		4.5 Mc Video Trap Coil Assy.		78-274	Candohm Elect. Cond. Socket .03		
				78-755	Octal Tube Socket (2 used) .18		
				78-810	Miniature Tube Socket .15		

S-17189 POWER SUPPLY

Diag. No.	Part No.	Description	Suggested List Price	Diag. No.	Part No.	Description	Suggested List Price
93-127	#10 Int. Shakeproof Lock-washer (4 used on 95-1245)	.43C		54-34	Nut (4 used on Elect. & Motor Mtg.)		
95-1218	Filter Choke	3.00		57-1681	Worm Latch Plate		.31C
95-1245	Power Transformer			57-1683	Switch Mtg. Plate (used on S-17267)		
95-1247	Output Transformer			58-194	Three Prong Plug (Part of 52-596)		
114-43	10-32x3/8" Hex. St. Washer Hd. M. S. (4 used on 95-1245)	.72C		72-3	#5x5/8" Flat Hd. W. S. Steel N.P. (2 used)		
114-297	#6x1/4" Hex. Hd. St.S.T. (2 used on 126-604)	.01		73-136	#8-32x1/2" Hex.Hd. St. Set Screw (2 used on S-17378)		
125-69	Rubber Grommet	.07		78-901	Three Contact Socket and Ring		
126-604	Heat Shield	.20		80-833	Knob Tension Spring		
S-17189	Power Supply (Complete)			80-834	Worm Latch Spring		
S-17195	Cable Assembly			83-1817	Magnet Insulator Strip		
	TUBES			85-492	Push Switch (2 used S-17267)		
	1 - 6BF5			93-125	#6 Int. Shakeprf Lockwasher (1 used with ea. 54-34)		.31C
	1 - 5U4G			93-1062	1/16x.169x.310 Bakelite Washer (used on S-17392)		
	1 - 5Y3GT			93-1064	.010x.169x1/2" Fishpaper Washer (used on S-17392)		
				93-1066	Bearing Washer		
				93-1067	Magnet Shading Washer		
				93-1068	Worm Thrust Washer		
				94-295	Mtg. Bushing (2 used on S-17268)		.04
57-1548	Centering Plate	.20		94-738	Bearing Bushing		
57-1549	Focusing Coil Mtg. Plate			94-740	Motor Mtg. Bushing (4 used)		
57-1684	Magnet End Plate			95-1255	Step Down Trans.		
93-951	Spring Washer - Shake-proof - Blued	.02		97-398	Worm Latch Stud (2 used)		
93-1006	.0359x.1561 Dx1/2" O.D. Steel	.01		113-8	#6-32x1/4" Hex.Hd. St. M.S. Steel Shakeproof (3 used on S-17312 & 2 used on 95-1255)		
93-1007	.0359x.1561 Dx1" O.D. Steel	.03		113-24	#8-32x3/8" Hex.Hd. St. M.S. (Part of S-17392) #6-32x1/4" Phill. RHMS		1.70C .03
93-1009	Spring Washer - Blued	.02		113-40	Steel Shakeproof (2 used on S-17267) #2-56x3/16" RHMS Steel		
114-48	#6-32x1/4" Hex. Hd. St. M.S. (2 used)	.43C		113-41	Shakeproof (2 used on 15-97 and Knobs) #2-56x5/16" Phill. Pan		
S-17230	Mechanical Centering & Focus Assy. (Complete)			113-42	Hd. M.S. (Black Nickle) (used 2 on S-17267)		
S-17332	Focusing Coil Assy.			114-199	#6-3/16" Hex. Hd. St. S.T. (used on 12-1783)		
				114-358	#6x1/2" Hex. Hd. St.S.T. (4 used on S-17268 Mtg.)		.65C
6-66	Ball Bearing (2 used)			125-17	Rubber Grommet (4 used)		
12-1783	Latch Bracket			141-130	Drive Motor		
15-97	Control Cap (used on S-17267)			149-106	Magnet Core		
16-663	Packing Carton (S-17267)			199-140	Coupling Sleeve		
16-664	Packing Carton (S-17268)			202-849	Instruction Book		
19-214	Coupling Sleeve Retaining Clip (2 used)			S-17266	Remote Control Assy. (Complete)		
20-332	Magnet Coil						
22-2252	Elect. 130 Mid. 40V						
34-213	Worm Drive Gear						
43-193	Control Housing (used on S-17267)						
46-897	Push Knob - White						
46-898	Push Knob - Black						
52-596	Cable and Plug (used on S-17267) #6-32x1/4"x3/32" Hex						

Diag. No.	Part No.	Description	Suggested List Price	Diag. No.	Part No.	Description	Suggested List Price
	S-17267	Hand Control & Cable Assy. (Complete)			70-3	#5x1/2" RHWS Steel N.P. (2 used to mt. S-17306)	.85C
	S-17268	Remote Control & Hand Control & Cable Assy. (Comp.)			70-86	#6x5/8" Washer Hd Wood Screw St.Br. (5 used to mt. S-17333)	.60C
	S-17211	Planetary Gear & Yoke Assy.			72-81	#8x3/4" Phill. Flt. Hd. Wood Screw St. Br. (4 used to mt. S-17307)	.02
	S-17312	Housing & Bearing Bush- ing Assy.			74-58	Ventilating Screen	1.30
	S-17317	Drive Gear Assy.			78-787	Two Contact Socket (used with 11-106)	.10
	S-17324	Cable, Socket & Brkt. Assy.			80-826	Grounding Spring	
	S-17378	Output Gear & Set Screw Assy.			80-828	Door Return Spring	
	S-17392	Magnet & Brkt. Assy.			112-758	4-40x1/4" RHST Cad (8 used on Esc. mt.)	.02

ALL MODELS WITH SUFFIX LETTER "Q" ARE EQUIPPED WITH THE S-17268 REMOTE CONTROL ASSEMBLY AND UTILIZE THE FOLLOWING ADDITIONAL PARTS:

72-3	#5x5/8" Flat Hd W.S. Steel N.P. (2 used)
94-295	Mounting Bushing (4 used)
114-358	#6x1/2" Hex.Hd. Sl. S.T. (4 used)
202-849	Instruction Book(Remote Control)
S-17266	Remote Control Assy.
S-17267	Hand Control & Cable Assy.

CABINET PARTS H2226E

11-106	Line Cord & Plug 9' lg.	.80
12-1797	Clamping Guide Brkt. (Esc. Mtg.)	
14-1264E	Cabinet for H2226E Table Model	
16-649	Packing Carton	
24-446	AC Line Cord Plug Cover	.15
24-555	Control Cover (use S-17497)	
46-833	Volume Control Knob	.30
46-885	Contrast Control Knob	
46-887	Horiz. Hold Knob	
46-889	Channel Selector Knob	
46-893	Brightness Control Knob	
46-895	Fine Tuning Knob	
46-896	Vertical Hold Knob	

SPI	49-679	Speaker 5-1/4" PM	6.00
	ZC 5093 Cone	1.73	
	56-286	Cover Hinge Pin	
	57-1481	Esc. Clamping Plate (3 used)	.02
	57-1670	Glass Retaining Plate (2 used)	
	57-1672	Nameplate (use S-17497)	
	57-1673	Escutcheon	
	57-1678	Escutcheon (Vol. Control)	
	57-1679	Escutcheon (Channel Selector)	

70-3	#5x1/2" RHWS Steel N.P. (2 used to mt. S-17306)	.85C
70-86	#6x5/8" Washer Hd Wood Screw St.Br. (5 used to mt. S-17333)	.60C
72-81	#8x3/4" Phill. Flt. Hd. Wood Screw St. Br. (4 used to mt. S-17307)	.02
74-58	Ventilating Screen	1.30
78-787	Two Contact Socket (used with 11-106)	.10
80-826	Grounding Spring	
80-828	Door Return Spring	
112-758	4-40x1/4" RHST Cad (8 used on Esc. mt.)	.02
114-80	1/4-20x 1-3/8" Hex Washer Hd. M.S. (4 used chassis mtg.)	.05
114-341	#6x3/8" Hex. Hd S.T. (used on 80-826)	.02
114-353	#6x1/4" Hex.Hd S.T. Cad. (4 used on Esc. Mtg.)	
192-136	Protective Glass	
196-148	Glass Gasket	
196-160	Rubber Gasket	
202-829	Instruction Book	
S-17306	Antenna Terminal & Wire Assy.	
S-17307	Cabinet Antenna Assy. (Complete)	
S-17333	Cabinet Back Assy. (Complete)	
S-17497	Cover and Nameplate Assy.	

CABINET PARTS H2226R & RQ

Model H2226R is the same as H2226E except for the following:

OMIT:

14-1264E	Cabinet for H2226E Table Model
46-833	Vol. Control Knob
46-889	Channel Selector Knob

ADD:

14-1264R	Cabinet for H2226R Table Model
46-888	Channel Selector Knob
46-890	Vol. Control Knob.

CABINET PARTS H2227E & EQ

11-106	Line Cord & Plug 9' lg.	.80
12-1797	Clamping Guide Brkt.	
14-1266E	Cabinet for H2227E Table Model	
16-651	Packing Carton	
24-446	AC Line Cord Plug Cover	.15

<u>Diag. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Suggested List Price</u>	<u>Diag. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Suggested List Price</u>
24-555		Control Cover (use S-17497)		ADD:			
46-833		Vol. Control Knob	.30				
46-885		Contrast Control Knob		14-1266R		Cabinet for H2227R	
46-887		Horiz. Hold Knob				Table Model	
46-889		Channel Selector Knob		46-888		Channel Selector Knob	
46-893		Brightness Control Knob		46-890		Vol. Control Knob	
46-895		Fine Tuning Knob					
46-896		Vertical Hold Knob					
49-679		5-1/4" PM Speaker	6.00				
		ZC5093 Cone	1.73				
56-286		Cover Hinge Pin		11-106		Line Cord & Plug 9' lg.	.80
57-1481		Esc. Clamping Plate (3 used)	.02	12-1797		Clamping Guide Brkt. (2 used)	
57-1670		Glass Retaining Plate		14-1260R		Cabinet for H2250R	
57-1672		Nameplate (use S-17497)					
57-1673		Escutcheon		16-640		Packing Carton	
57-1678		Esc. (Vol. Control)		24-446		AC Line Cord Plug Cover	.15
57-1679		Esc. (Channel Selector)		24-555		Control Cover (use S-17497)	
70-3		#5x1/2" RHWS Steel N.P. (2 used to mt. S-17306)	.85C	46-885		Contrast Control Knob	
70-86		#6x5/8" Washer Hd. Wood Screw St.Br. (5 used to mt. S-17347)	.60C	46-887		Horizontal Hold Knob	
		#8x3/4" Phill. Flt. Hd. Wood		46-888		Channel Selector Knob	
72-81		Screw St. Br. (4 used to mt. S-17307)	.02	46-890		Volume Control Knob	
74-58		Ventilating Screen	1.30	46-893		Brightness Control Knob	
78-787		Two Contact Socket	.10	46-895		Fine Tuning Knob	
80-826		Grounding Spring		46-896		Vertical Hold Knob	
80-828		Door Return Sprng		SP1	49-649	10" PM Speaker	11.75
112-758		4-40x1/4" RHST Cad. (8 used on Esc. mtg.)	.02		ZC10161 Cone	3.41	
		1/4-20x1-3/8" Hex. Washer		56-286		Cover Hinge Pin	
114-80		Hd. M. S. (4 used chassis Mtg.)	.05	57-1481		Esc. Clamping Plate (3 used)	.02
114-341		#6x3/8" Hex. Hd. S.T. Cad. (used on 80-826)	.02	57-1670		Glass Retaining Plate	
114-353		#6x1/4" Hex.Hd. S.T. Cad. (used 4 on Esc. Mtg.)		57-1672		Nameplate (use S-17497)	
192-136		Protective Glass		57-1673		Escutcheon	
196-148		Glass Gasket		57-1678		Escutcheon (Vol. Control)	
196-160		Rubber Gasket		57-1679		Escutcheon (Channel Selector)	
202-829		Instruction Book		70-3		#5x1/2" RHWS Steel N.P. (2 used to mt. S-17305)	.85C
S-17306		Antenna Terminal & Wire Assy.		70-86		#6x5/8" Washer Hd. Wood Screw St.Br. (5 used on Esc. Mtg.)	.60C
S-17307		Cabinet Antenna Assy.		72-81		#8x3/4" Phill. Flt. Hd. Wood Screw St. Br. (5 used on Esc. mtg.)	.02
S-17347		Cabinet Back Assy. (Complete)		74-58		Ventilating Screen	1.30
S-17497		Cover & Nameplate Assy.		78-787		Two Contact Socket	.10
				80-826		Grounding Spring	
				80-828		Door Return Spring	
				112-758		4-40x1/4" RHST Cad.(8 used Esc. mtg.)	.02
				114-80		1/4-20x1-3/8" Hex. Washer Hd. M.S. (4 used chassis mtg)	.05
				114-341		#6x3/8" Hex. Hd. S.T. (used on 80-826)	.02
				114-353		#6x1/4" Hex. Hd. S.T. (4 used on Esc. Mtg.)	
				185-9		Metal Glide (4 used)	.03
				192-136		Protective Glass	
				196-148		Glass Gasket	
				196-160		Rubber Gasket	
				202-829		Instruction Book	
				S-17198		Cabinet Back Assy. (Comp.)	

CABINET PARTS H2227R & RQ

Model H2227R is the same as H2227E except for the following:

OMIT:

- 14-1266E Cabinet for H2227E
Table Model
- 46-833 Volume Control Knob
- 46-889 Channel Selector Knob

Diag. No.	Part No.	Description	Suggested List Price	Diag. No.	Part No.	Description	Suggested List Price
	S-17305	Antenna Terminal & Wire Assy.			78-787	Two Contact Socket	
	S-17444	Cabinet Antenna Assy. (Complete)			80-826	Grounding Spring	
	S-17497	Cover & Nameplate Assy.			80-828	Door Return Spring	
CABINET PARTS H2255E & EQ							
Model H2255E is the same as H2250R except for the following:					112-813	4-40x5/16" RHST (8 used on Esc. mtg.)	
					114-80	1/4-20x1-3/8" Hex. Wash- er Hd. M.S. (4 used to mt. chassis & 2 used to mt. power supply.)	
					114-201	#8x5/16" Hex. Hd. Sl. S.T. (used on power supply)	
					114-313	#8x1-2" Hex. Hd. S.T. (3 used on Esc. Mtg.)	
					114-341	#6x3/8" Hex. Hd. S.T. (used on 80-826)	
					156-33	Bullet Catch	
					165-13	Metal Glide (4 used)	
					166-57	Tack Bumper (2 used)	
					192-137	Protective Glass	
					196-149	Glass Gasket	
					202-829	Instruction Book	
					S-17189	Power Supply (Complete)	
					S-17192	Cabinet Back Assy.	
					S-17305	Antenna Terminal & Wire Assy.	
					S-17444	Cabinet Antenna Assy. (Complete)	
					S-17497	Cover & Nameplate Assy.	
CABINET PARTS H2437E							
	11-106	Line Cord & Plug - 9' lg.		CABINET PARTS H2437R			
	14-1258E	Cabinet for H2437E Con- sole Model.		Model H2437R is the same as H2437E except for the following:			
	16-637	Packing Carton					
	24-446	AC Line Cord Plug Cover					
	40-89	Cabinet Door Hinge (2 used)	.30				
	46-833	Volume Control Knob					
	46-885	Contrast Control Knob					
	46-887	Horizontal Hold Knob					
	46-889	Channel Selector Knob					
	46-893	Brightness Control Knob					
	46-895	Fine Tuning Knob					
	49-649	10" PM Speaker					
		ZC10161 Cone					
	56-286	Cover Hinge Pin					
	57-1270	Strike Plate					
	57-1481	Esc. Clamping Plate (3 used)					
	57-1670	Glass Retaining Plate (4 used)					
	57-1671	Escutcheon					
	57-1678	Esc. (Vol. Control)					
	57-1679	Esc. (Channel Selector)					
	70-3	#5x1/2" RHWS Steel (2 used to mt. S-17305)					
		#6x5/8" Washer Hd.		CABINET PARTS H2438R			
	70-86	Wood Screw Stat. Br. (4 used to mt. S-17192)					
	74-58	Ventilating Screen					
				11-106	Line Cord & Plug - 9' Ig.		
				14-1259R	Cabinet for H2438R Con- sole Model		
				16-638	Packing Carton		

Diag. No.	Part No.	Description	Suggested List Price	Diag. No.	Part No.	Description	Suggested List Price
	24-446	AC Line Cord Plug Cover			24-446	AC Line Cord Plug Cover	
	46-885	Contrast Control Knob			46-885	Contrast Control Knob	
	46-887	Horizontal Hold Knob			46-887	Horizontal Hold Knob	
	46-888	Channel Selector Knob			46-888	Channel Selector Knob	
	46-890	Volume Control Knob			46-890	Volume Control Knob	
	46-893	Brightness Control Knob			46-893	Brightness Control Knob	
	46-895	Fine Tuning Knob			46-895	Fine Tuning Knob	
	46-896	Vertical Hold Knob			46-896	Vertical Hold Knob	
	49-649	10" PM Speaker			49-687	12" PM Speaker	
		ZC10161 Cone				ZC12161 Cone	
	56-286	Cover Hinge Pin			56-286	Cover Hinge Pin	
	57-1481	Esc. Clamping Plate (3 used)			57-1284	Strike Plate (2 used)	
	57-1670	Glass Retaining Plate (4 used)			57-1481	Esc. Clamping Plate (3 used)	
	57-1671	Escutcheon			57-1670	Glass Retaining Plate (4 used)	
	57-1678	Escutcheon (Vol. Control)			57-1671	Escutcheon	
	57-1679	Escutcheon (Channel Selector)			57-1678	Esc. (Volume Control)	
	70-3	#5x1/2" RHWS Steel N.P. (2 used S-17305)			57-1679	Esc. (Channel Selector)	
		#6x5/8" Washer Hd. Wood			70-3	#5x1/2" RHWS Steel N.P. (2 used on S-17305)	
	70-86	Screw St. Br. (4 used on S-17192)				#6x5/8" Washer Hd. Wood	
		#8x3/4 Phillips Flt. Hd.			70-86	Screw St. Br. (4 used on S-17192)	
	72-81	Wood Screw St. Br. (4 used on S-17444)			72-81	#8x3/4 Phil. Flt Hd Wood Screw (St.Br.) (4 used on S-17444)	
	78-787	Two Contact Socket				Ventilating Screen	
	80-826	Grounding Spring			74-58	Two Contact Socket	
	80-828	Door Return Spring			78-787	Grounding Spring	
	112-813	4-40x5/16" RHST Cad. (8 used on Esc. Mtg.)			80-826	Door Return Spring	
	114-80	1/4-20x1-3/8" Hex Washer Hd. M.S. (4 used chassis mtg. (3 used pwr supply mtg.)			112-813	4-40x5/16" RHST Cad (8 used on Esc. Mtg)	
	114-201	#8x5/16" Hex. Hd. Sl. S.T. (used on Power Supply)			114-80	1/4-20x1-3/8" Hex. Washer Hd. M.S. (4 used chassis mtg. & 3 used pwr supply mtg.)	
	114-313	#8x1/2" Hex. Hd. S.T. (3 used on Esc. Mtg.)					
	114-341	#6x3/8" Hex. Hd. S.T. (used on 80-826)			114-201	#8x5/16" Hex. Hd. Sl. S.T. (used on Pwr. Supply)	
	165-13	Metal Glide (4 used)			114-313	#8x1/2" Hex. Hd. S.T. Cad. (3 used on esc. mtg.)	
	192-137	Protective Glass			114-341	#6x3/8" Hex. Hd. S.T. Cad. (used on 80-826)	
	196-149	Glass Gasket			156-35	Bullet Catch (2 used)	
	202-829	Instruction Book			165-13	Metal Glide (4 used)	
	S-17189	Power Supply (Complete)			166-55	Tack Bumper (2 used)	
	S-17192	Cabinet Back Assy. (Com- plete)			192-137	Protective Glass	
	S-17305	Antenna Terminal & Wire Assy.			196-149	Glass Gasket	
	S-17444	Cabinet Antenna Assy.			202-829	Instruction Book	
	S-17497	Cover & Nameplate Assy.			S-17189	Power Supply Assy. (Complete)	
					S-17192	Cabinet Back Assy. (Complete)	
					S-17305	Antenna Terminal & Wire Assy.	

CABINET PARTS H2439R

11-106	Line Cord & Plug - 9' Ig.
14-1257R	Cabinet for H2439R console model
16-634	Packing Carton

S-17444	Cabinet Antenna Assy. (complete)
S-17497	Cover & Nameplate Assy.

<u>Diag. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Suggested List Price</u>	<u>Diag. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Suggested List Price</u>
CABINET PARTS H2449E							
11-106		Line Cord & Plug - 9' lg.		72-81		Wood Screw St. Br. (4 used on S-17444)	
14-1255E		Cabinet for H2449E Console Cabinet.		74-58		Ventilating Screen	
16-633		Packing Carton		78-787		Two Contact Socket	
24-446		AC Line Cord Plug Cover		80-826		Grounding Spring	
46-833		Volume Control Knob		80-828		Door Return Spring	
46-885		Contrast Control Knob		112-813		4-40x5/16" RHST Cad. (8 used on Esc. Mtg.)	
46-887		Horizontal Hold Knob		114-80		1/4-20x1-3/8" Hex. Washer Hd. M.S. (4 used on chassis mtg. & 3 used pwr. supply)	
46-889		Channel Selector Knob		114-201		#8x5/16" Hex Hd Sl. S.T. (used on pwr supply)	
46-893		Brightness Control Knob		114-341		#6x3/8" Hex Hd. S.T. Cad. (used on 80-826)	
46-895		Fine Tuning Knob		125-79		Rubber Grommet (4 used on 138-39)	
46-896		Vertical Hold Knob		138-39		Cabinet Grille	
49-687		12" PM Speaker		165-13		Metal Glide (4 used)	
	ZC12161	Cone		192-137		Protective Glass	
56-286		Cover Hinge Pin		196-149		Glass Gasket	
57-1481		Esc. Clamp. Plate (3 used)		202-829		Instruction Book	
57-1670		Glass Retaining Plate (4 used)		S-17189		Power Supply Assy. (complete)	
57-1671		Escutcheon		S-17192		Cabinet Back Assy. (complete)	
57-1678		Esc. (Vol. Control)		S-17305		Antenna Terminal & Wire Assy-	
57-1679		Esc. (Channel Selector)		S-17444		Cabinet Antenna Assy. (complete)	
70-3		#6x1/2" RHWS Steel N.P. (2 used on S-17305)		S-17497		Cover & Nameplate Assy.	
		#6x5/8" Washer Hd. Wood					
70-86		Screw St. Br. (4 used on S-17192)					
70-160		#8x1" Phill. RHWS (4 used on 138-39)					
		#8x3/4" Phill. Flt. Hd.					

SPECIAL TEST EQUIPMENT FOR TV

68-7	Alignment Wrench	.30
68-13	Alignment Tool	.75
68-14	Tuning Wand	1.00
	Adjustment Wrench for Master Oscillator and Sound Trap Adjustments	
68-17	Sound Trap Adjustments	
	Trap Adjustments on RF Shelf	
68-18	18" Insulated Screwdriver for Hum and AGC adjustments	
68-19	Nylon Alignment Wrench	
95-1234	250 Watt Isolation Transformer	
S-15369	Generator Test Unit	5.50
S-15371	Coupling Ring	.55
S-15521	AC Test Cord for TV	
	Chassis	1.50
S-15627	Balance Transformer (Ant)	5.50
S-15729	Balance Transformer (Receiver)	5.50
S-17203	Step Attenuator	

Prices shown are suggested list prices and are subject to change without notice.

PARTS LIST SUPPLEMENT

S-17635 VIDEO I.F. ASSEMBLY

(Also refer to Parts List for S-17064 I.F. Assembly)

The S-17635 Video I.F. Assembly is interchangeable with the S-17064 units used in early production "H" series receivers. The new I.F. can be identified by the oblong shaped can which houses the 5th IF transformer.

Diag. No.	Part No.	Description	Suggested List Price
C29	19-209	Coil Mtg. Clip	.06
	22-3	.01 Mfd. Ceramic (Disc) (4 used)	500V .26
C27	22-4	.004 Mfd. Ceramic (Disc) (or 22-1706)(2 used)	500V .26
C57	22-1138	470 Mfd. Mica (molded)	500V .20
C30	22-1761	50 Mmfd. Ceramic	500V .20
C72	22-1777	0.1 Mfd.	200V .26
C28	22-1874	7 Mmfd. Ceramic	500V .26
C31	22-2106	10 Mmfd. Ceramic	500V .30
C26	22-2143	470 Mmfd. Ceramic (4 used)	500V .26
C22	22-2216	500 Mmfd. Ceramic (4 used)	500V .35
C32	22-2218	.001 Mfd. Ceramic	500V .35
	54-271	#6-32x1/4" Hex Palnut Inverted Type (2 used on each I.F.)	.01
R99	56-292	Coil Insert Ret. Pin	.01
R9	63-1101	8200 ohm 2W 10% Ins.	.36
R12	63-1736	68 ohm 1/2W 10% Ins.	.21
R1	63-1743	100 ohm 1/2W 10% Ins.	.21
R91	63-1750	150 ohm 1/2W 10% Ins.	.21
R21	63-1754	180 ohm 1/2W 10% Ins.	.21
R13	63-1771	470 ohm 1/2W 10% Ins.	.21
R33	63-1772	470 ohm 1/2W 20% (6 used) Ins.	.21
R6	63-1782	820 ohm 1/2W 10% Ins.	.21
R23	63-1785	1000 ohm 1/2W 10% Ins.	.21
R61	63-1799	2200 ohm 1/2W 10% Ins.	.21
R51	63-1813	4700 ohm 1/2W 10% Ins.	.21
R89	63-1820	6800 ohm 1/2W 10% Ins.	.21
R10	63-1848	33K ohm 1/2W 10% Ins.	.21
R47	63-1849	33K ohm 1/2W 20% Ins.	.21
R49	63-1862	68K ohm 1/2W 10% Ins.	.21
R22	63-1884	220K ohm 1/2W 20% Ins.	.21
R18	63-1890	330K ohm 1/2W 10% Ins.	.21
R93	63-1912	1 Megohm 1/2W 20% Ins.	.21
	78-876	68K ohm 1W 10% Ins. Miniature Tube Socket (Nine Contact)	.24
	78-905	Miniature Tube Socket (5 used)	.25

Diag. No.	Part No.	Description	Suggested List Price
--------------	-------------	-------------	-------------------------

S-17635 Video I.F. Strip Assembly (cont'd.)

94-538	Tuning Slug Insert (1 ea. used on S-16013 & S-16738)	.07
94-706	Tuning Slug Insert (1 ea. used on S-16275 - S-16604 & S-16605)	.10
94-742	Tuning Slug Insert (used on S-16274)	.09
94-750	Tuning Slug Insert (used on S-17613)	.10
A2	103-1 Crystal Diode (1N64)	.70
	125-69 Rubber Grommet (2 used)	.07
	126-661 Tube Shield	.10
	149-71 Iron Core (used on S-16984)	.10
	149-89 Iron Core (1 ea. used on S-16738 & S-16013)	.10
	149-96 Iron Core (1 ea. used on S-16274-75 - S-16604-06 & S-17614)	.10
L55	S-15128 B+ Choke Coil Assembly	.25
L56	S-16011 Shunt Peaking Coil Assy.	.35
L58	S-16013 Quadrature Coil Assy.	.45
T1	S-16274 1st. Video I.F. Trans. Assy.	.75
T2	S-16275 2nd. Video I.F. Trans. Assy.	.75
T3	S-16604 3rd. Video I.F. Trans. Assy.	.75
T4	S-16605 4th. Video I.F. Trans. Assy.	.75
L57	S-16738 Intercarrier Sound I.F. Coil Assembly	.75
L84	S-16984 Filament Choke Coil Assy.	.30
L85	S-17505 Inverter Plate Peaking Coil Assembly	.50
T5	S-17614 5th Video I.F. Trans. Assy.	
	S-17635 Video I.F. Strip Assy. (Complete)	42.00

MODEL H3469E & EQ - H3475R & RQ - H3267R & RQ
(24H20 & 10H20) (24H20 & 10H20) (24H20 & 8H20)

MODEL H3469E CABINET PARTS

Diag. No.	Part No.	Description	Suggested List Price
	2-199	Cabinet Back (Phono Section)	1.05
	11-106	Line Cord & Plug - 9 ft. lg.	.80
	12-1797	Clamping Guide Brkt, (2 used on Esc. Mtg.)	.04
	14-1263E	Cabinet for H3469E Console Combination Model	
	16-644	Packing Carton - Inner Pack	
	16-645	Packing Carton - Outer Pack	
	19-9	Cable Clip	.03
	19-169	Record Changer Mtg. Clip (2 used)	.07

Diag. No.	Part No.	Description	Suggested List Price	Diag. No.	Part No.	Description	Suggested List Price				
MODEL H3469E CABINET PARTS (cont'd.)											
19-210	Loop Connector Clip (2 used)	.03		165-14	Metal Glide (2 used)	.03					
24-535	Line Cord Plug Cover	.10		166-57	Tack Bumper (2 used)	.03					
46-833	Volume Control Knob	.30		188-54	Knob Clamping Ring (46-876)	.02					
46-876	Tuning Control Knob	.15		192-137	Protective Glass (TV)	6.25					
46-885	Contrast Control Knob	.15		192-138	Dial Glass (Radio)	.50					
46-887	Horizontal Hold Knob	.10		196-149	Glass Gasket (TV)	.45					
46-889	Channel Selector Knob	.35		202-829	TV Instruction Book	.20					
46-893	Brightness Control Knob	.15		202-851	Radio-Phono Instruction Book	.15					
46-895	Fine Tuning Knob	.15		S-14029	Variable Speed Record Changer						
46-896	Vertical Hold Knob	.10		S-15528	Low Impedance Loop Assy.	.35					
46-899	Band Switch Knob	.15		S-15536	Record Changer Compt. Hinge Brkt. & Link Assy. (2 used)	.50					
49-694	12" P.M. Speaker	17.50		S-15780	Cobra Tone Arm Cartridge	3.50					
	ZC12161 Cone & Voice Coil	4.60		S-16419	Record Adapter Plug & Envelope Assembly	.60					
56-286	Cover Hinge Pin	.05		S-16890	Cabinet Antenna Assy. (Complete)	1.75					
57-1284	Strike Plate (2 used)	.05		S-17005	Record Changer Mtg. Frame Assembly	3.00					
57-1481	Escutcheon Clamping Plate (7 used)	.02		S-17187	Vol. Control Knob Assy.	.25					
57-1666	Radio Dial Esc.	4.50		S-17189	Power Supply Assy. (Compl)	48.00					
57-1670	Glass Retaining Plate (2 used)	.02		S-17255	Radiorgan Cable Assy.	2.60					
57-1671	Television Esc.	10.00		S-17264	Cabinet Back Assy. (Compl) (TV)	10.00					
57-1678	Esc. (Vol. Control)	1.00		S-17328	Loop Loading Coil Assy.	.65					
57-1679	Esc. (Channel Selector)	1.00		S-17497	Cover & Nameplate Assy.	2.50					
70-86	#6 x 5/8 Washer Hd. Wood Screw - St. Br. (11 used to mt. backs)	.60C		S-17556	Antenna Terminal & Wire Assembly	.25					
72-81	#8 x 3/4" Phillips Flt. Hd. Wood Screw St. Br. (# used to mt. S-16890)	.02		RADIORGAN ESCUTCHEON PARTS							
74-58	Ventilating Screen	1.30		76-444	Radiorgan Knob Shaft	.04					
74-71	Ventilating Screen	.40		114-297	#6 x 1/4 Hex Hd. Sl. S.T. (2 ea. used on S-17252 & S-17253)	.01					
78-787	Two Contact Socket	.10		S-14255	Radiorgan Mtg. Brkt. Assy. (2 used)	.15					
80-604	Hinge Spring (2 used)	.15		S-17246	Radiorgan Knob & Eyelet Assy. (Treble)	.20					
80-826	Grounding Spring	.08		S-17247	Radiorgan Knob & Eyelet Assy. (Voice)	.20					
80-828	Door Return Spring	.07		S-17248	Radiorgan Knob & Eyelet Assy. (Alto)	.20					
80-830	Record Changer Mtg. Spring	.03		S-17249	Radiorgan Knob & Eyelet Assy. (Bass)	.20					
93-168	Rubber Shoulder Washer (4 used)	.07		S-17250	Radiorgan Knob & Eyelet Assy. (Lo-Bass)	.20					
112-808	#6 x 5/16 Phill. Rd. Hd. S.T. (4 used Mtg. Radio Esc.)	.02		S-17251	Radiorgan Knob & Eyelet Assy. (Normal)	.20					
112-809	Record Changer Mtg. Screw (3 used)	.08		S-17252	Radiorgan Esc. & Knob Assy. (R.H.)	1.55					
112-813	4-40 x 5/16 R.H.S.T. (8 used to mt. TV esc.)	.02		S-17253	Radiorgan Esc. & Knob Assy. L.H.)	1.55					
114-201	#8 x 5/16 Hex Hd. S. T. (used on pwr. supply)	.75C									
	Chassis & 3 used mtg. pwr. supply)	.05									
114-341	#6 x 3/8 Hex Hd. S.T. (used on 80-826)	.02									
114-350	#8 x 7/16" Hex Hd. Sl. S. T. (4 used on Radio esc. mtg.)	.02									
126-650	Heat Shield	.55									
156-35	Bullet Catch (2 used)	.05									
159-50	Plug Button (2 used)	.01									
165-9	Metal Glide (2 used)	.03									

Diag. No.	Part No.	Description	Suggested List Price	Diag. No.	Part No.	Description	Suggested List Price
MODEL H3475R CABINET PARTS							
Model H3475R is the same as Model H3469E except the following:							
OMIT:							
2-199	Cabinet Back (Phono Section)				ZC12161	Cone & Voice Coil	.40
14-1263E	Cabinet for H3469E Console Combination Model			56-286	Cover Hinge Pin	.05	
16-644	Packing Carton - Inner Pack			57-1284	Strike Plate (2 Used)	.05	
16-645	Packing Carton - Outer Pack			57-1481	Esc. Clamping Plate	.02	
46-833	Vol. Control Knob			57-1658	Radio Dial Esc.	.40	
46-889	Channel Selector Knob			57-1670	Glass Retaining Plate (TV)	.02	
126-650	Heat Shield			57-1671	Television Esc.	10.00	
166-57	Tack Bumper (2 used)			57-1678	Esc. (Vol. Control)	1.00	
ADD:							
2-197	Cabinet Back (Phono Section)	1.05		57-1679	Esc. (Channel Selector)	1.00	
14-1261R	Cabinet for H3475R Console Combination			70-86	#6 x 5/8 Washer Hd. Wood Screw St. Br. (15 used to mt. backs)	.60C	
16-642	Packing Carton - Inner Pack			72-81	#8 x 3/4" Phill. Flt. Hd. Wood Screw St. Br. (4 used to mt. S-16890)	.02	
16-643	Packing Carton - Outer Pack			74-58	Ventilating Screen	1.30	
46-888	Channel Selector Knob	.35		74-75	Ventilating Screen	.30	
46-890	Vol. Control Knob	.30		78-787	Two Contact Socket (TV Back)	.10	
126-649	Heat Shield	.55		78-847	Two Contact Socket (Radio Back)	.10	
166-55	Tack Bumper	.03		80-604	Hinge Spring (2 used)	.15	
MODELS H3267 & H3267R CABINET PARTS							
2-209	Cabinet Back (Phono Section)	1.25		80-826	Grounding Spring	.03	
11-106	Line Cord & Plug - 9 ft. lg. (TV Back)	.80		80-828	Door Return Spring	.07	
11-109	Line Cord & Plug - 3 ft. lg. (Radio Back)	.45		80-830	Record Changer Mtg. Spring (4 used)	.03	
12-1797	Clamping Guide Brkt. (2 used on TV Esc. Mtg.)	.04		93-1059	Felt Washer (used on 46-873)	.01	
14-1271	Cabinet for H3267 Console Combination			97-293	Chassis Mtg. Insulating Stud (3 used)	.18	
14-1271R	Cabinet for H3267R Console Combination			100-97	Pilot Light Bulb	.25	
16-654	Packing Carton - Inner Pack			112-809	Record Changer Mtg. Screw (3 used)	.08	
16-655	Packing Carton - Outer Pack			112-813	4-40 x 5/16" R.H.S.T. (8 used on TV Esc. Mtg.)	.02	
19-169	Record Changer Mtg. Clip (2 used)	.07		114-80	1/4-20 x 1-3/8" Hex Hd. (4 used to mt. TV Chassis) (3 used to mt. Pwr. Supply)	.05	
24-535	Line Cord Plug Cover	.10		114-128	#10 x 1-1/16" Hex Washer Hd. S.T. (3 used to mt. radio chassis)	1.81C	
46-873	Tone Control Knob	.10		114-201	#8 x 5/16 Hex Hd. S. T. (used on pwr. supply)	.75C	
46-876	Tuning Control Knob	.15		114-341	#6 x 3/8 Hex Hd. S. T. (used on 80-826)	.02	
46-885	Contrast Control Knob	.15		114-350	#8 x 7/16" Hex Hd. Sl. S. T. (4 used on Radio Esc. Mtg.)	.02	
46-887	Horizontal Hold Knob	.10		126-648	Heat Shield	.65	
46-888	Channel Selector Knob	.35		156-35	Bullet Catch (2 used)	.05	
46-890	Vol. Control Knob	.30		159-50	Plug Button (2 used)	.01	
46-893	Brightness Control Knob	.15		165-9	Metal Glide (2 used)	.03	
46-895	Fine Tuning Knob	.15		165-14	Metal Glide (2 used)	.03	
46-896	Vertical Hold Knob	.10		166-55	Tack Bumper (2 used)	.03	
46-899	Band Switch Knob	.15		188-54	Knob Clamping Ring (46-876)	.02	
49-694	12" P.M. Speaker	17.50		192-137	Protective Glass (TV)	6.25	
				192-138	Dial Glass (Radio)	.50	
				196-149	Glass Gasket (TV)	.45	
				202-829	Television Instruction Book	.20	

Diag. No.	Part No.	Description	Suggested List Price	Diag. No.	Part No.	Description	Suggested List Price
MODELS H2267 & H3267R							
CABINET PARTS (cont'd.)							
202-850	Radio-Phono Instruction Book	.20		C51	22-1841	.1 Mfd. (Molded)	600V .45
S-14029	Variable Speed Record Changer			C34	22-1842	.0047 Mfd.	200V .26
S-15536	Record Changer Compt. Hinge Brkt. & Link Assy. (2 used)	.50		C39	22-1844	.047 Mfd. (Molded) (5 used)	600V .35
S-15737	Socket Cap & Brkt.	.50		C58	22-1845	.0022 Mfd.	600V .26
S-15780	Cobra Cartridge	3.50		C62	22-1846	.01 Mfd. (Molded)	400V .20
S-16419	Record Adapter Plug & Envelope Assembly	.60		C65	22-1851	.001 Mfd. (Molded)	1000V .26
S-16890	Cabinet Antenna Assy.	1.75		C19	22-1876	47 Mmfd. Ceramic	500V .35
S-17005	Record Changer Mtg. Frame Assembly	3.00		C63	22-2034	680 Mmfd. (Molded)	500V .35
S-17167	Vol. Control Knob	.25		C67	22-2061	.1 mfd. (Molded)	400V .35
S-17189	Power Supply Assembly (Complete)	48.00		C54	22-2071	.022 Mfd. (Molded)	200V .26
S-17218	Low Impedance Loop Assy.	.80		C55	22-2078	.047 Mfd.	600V .40
S-17264	Cabinet Back Assy. (TV)	10.00		C71	22-2112	.001 Mfd. Ceramic	500V .30
S-17328	Loop Loading Coil Assy.	.65					
S-17399	Cabinet Back Assy. (Radio)	2.50		C36AD		15 Mfd. Electro	475V
S-17497	Cover & Nameplate Assy.	2.50		C36BD	22-2122	80 Mfd. Electro	300V
S-17556	Antenna Terminal & Wire Assembly	.25		C36CD		40 Mfd. Electro	50V
4.00							
MODELS H2447R & RQ - H3477R & RQ H3478E & EQ - H2445R & RQ							
24H21 Main Chassis							
12-1756	Pilot Light Brkt.	.02		C36DD		15 Mfd. Electro	475V
15-98	Socket Cap (used on S-17140)	.45		C49	22-2128	.001 Mfd. (Molded)	600V .26
19-166	Coil Mtg. Clip (used on S-17114)	.06		C24	22-2154	Elect. 10 Mfd.	250V 1.25
19-175	Coil Mtg. Clip (4 used)	.06		C79	22-2159	.33 Mfd. (Molded)	200V .60
19-206	Coil Mtg. Clip (used on S-17400)	.06		C53	22-2162	130 Mmfd. Mica	500V .26
19-207	C.R. Tube Mtg. Clip	.12		C59	22-2163	1000 Mmfd. Mica	500V .45
C29	22-3	.01 Mfd. Ceramic (Disc) (2 used)	500V .26	C74	22-2168	33 Mmfd. Ceramic	500V .20
C27	22-4	.004 Mfd. Ceramic (Disc) (2 used)(or 22-1706)	500V .26	C37AD		40 Mfd. Electro	300V
C52	22-365	100 Mmfd. Mica (Molded)	500V .20	C37BD		80 Mfd. Electro	25V
C61	22-470	150 Mmfd. Mica (Molded)	500V .20	C37CD	22-2223	100 Mfd. Electro	50V
C85	22-1137	150 Mmfd. Mica	500V .20	C37DD		20 Mfd. Electro	475V
C57	22-1138	470 Mmfd. Mica (Molded) (2 used)	500V .20	C78	22-2225	20 Mfd.	300V 1.60
C84	22-1645	330 Mmfd. Mica	500V .20	C75AB	22-2232	20 Mfd. Electro	300V
C72	22-1777	0.1 Mfd. (2 used)	200V .26	C75BB		15 Mfd. Electro	475V
C35	22-1782	.0047 Mfd. (Molded)	600V .26	C40	22-2233	20 Mmfd. Ceramic	500V .25
C73	22-1810	.1 Mfd.	200V .26	C41	22-2234	100 Mmfd. Ceramic	500V .35
C64	22-1814	.0022 Mfd.	600V .26	C81	22-2244	.47 Mfd.	200V .60
C82	22-1832	500 Mmfd. (Molded) (Special)	20,000V 2.25	C69	22-2261	.15 Mfd.	400V .40
				C42	22-2264	.015 Mfd.	600V .35
					24-554	Fire Shield Rear Cover	.20
					52-591	Insulated Shielded Lead	.35
					52-592	Insulated Shielded Lead	.35
					54-139	3/8-32x9/16 Hex Palnut (8 used to mount controls)	.01
					57-1875	Shaft Retaining Plate (used on 76-604)	.02
					58-188	Two Prong A-C Plug	.08
					58-191	Nine Prong Adapter Plug	.25
				R38	63-943	4700 ohm 1W 10%	
						(2 used)	Ins. .24
				R63	63-957	33K ohm 1W 10% Ins.	.24
				R79	63-1065	15K Ohm 1W 10% Ins.	.24
				R54	63-1449	470 ohm 1W 20% Ins.	
						WW	.24
				R65	63-1875	Horizontal Drive Control	1.20
				R12	63-1743	100 ohm 1/2W 10% Ins.	.21
				R31	63-1744	100 ohm 1/2W 20% (3 used)	
						Ins. .21	
				R67	63-1751	150 ohm 1/2W 20% (2 used)	
						Ins. .21	
				R36	63-1768	390 ohm 1/2W 10% Ins.	.21

Diag. No.	Part No.	Description	Suggested List Price	Diag. No.	Part No.	Description	Sugested List Price
		24H21 Main Chassis (cont'd.)		R41	63-2172	2K Vertical Linearity Control	
R21	63-1771	470 ohm 1/2W 10% Ins. (3 used)	.21	R53	63-2173	750K Vertical Hold Control	
R60	63-1775	560 ohm 1/2W 10% Ins. (2 used on 95-1246)	.21	R83	63-2426	15K ohm 7W Candohm (or 63-2135)	1.20
R94	63-1778	680 ohm 1/2W 10% Ins.	.21		73-114	8-32x5/16 Slab Hd. Set Screw (2 used S-17083 & 4 used S-16529)	
R33	63-1782	820 ohm 1/2W 10% Ins.	.21		76-604	Fine Tuning Ext. Shaft	.30
R6	63-1785	1000 ohm 1/2W 10% Ins. (2 used)	.21		76-605	Horiz. Hold Control Shaft	.20
R35	63-1806	3300 ohm 1/2W 10% Ins.	.21		78-250	Elect. Cond. Socket	.07
R80	63-1807	3300 ohm 1/2W 20% Ins.	.21		78-580	Nine Contact Socket	.22
R61	63-1813	4700 ohm 1/2W 10% Ins. (2 used)	.21		78-706	Octal Socket	.20
R62	63-1826	10K ohm 1/2W 5% Ins.	.21		78-709	Octal Tube Socket	.20
R34	63-1838	18K ohm 1/2W 10% Ins.	.21		78-755	Octal Tube Socket (5 used)	.18
R37	63-1841	22K ohm 1/2W 10% Ins.	.21		78-807	Miniature Tube Socket (2 used)	.15
R39	63-1845	27K ohm 1/2W 10% Ins.	.21		78-834	Octal Tube Socket	.25
R89	63-1848	33K ohm 1/2W 10% Ins.	.21		78-840	A.C. Socket	.30
R5	63-1855	47K ohm 1/2W 10% Ins. (2 used)	.21		78-875	C.R. Tube Socket	.40
R47	63-1862	68K ohm 1/2W 10% Ins.	.21		78-876	Novat Miniature Tube Socket	.25
R56	63-1863	68K ohm 1/2W 20% Ins.	.21		78-883	Nine Contact Socket	.20
R46	63-1869	100K ohm 1/2W 10% Ins. (4 used)	.21		78-900	Pilot Light Socket & Wire	.25
R25	63-1870	100K ohm 1/2W 20% Ins. (3 used)	.21		80-744	Focus Mtg. Spring (4 used)	.02
R74	63-1876	150K ohm 1/2W 10% Ins.	.21		80-802	Retaining Spring (1 ea. used on 149-100 & 149-101)	.06
R42	63-1883	220K ohm 1/2W 10% Ins. (3 used)	.21		80-822	Dial Cord Tension Spring	.10
R49	63-1884	220K ohm 1/2W 20% Ins. (2 used)	.21		80-823	Shaft Guide Spring	.10
R22	63-1890	330K ohm 1/2W 10% Ins.	.21		80-824	Tube Plate Connector Spring (2 used)	.08
R48	63-1898	470K ohm 1/2W 20% Ins. (2 used)	.21		80-825	C. R. Tube Retaining Spring	.20
R95	63-1904	680K ohm 1/2W 10% Ins.	.21		80-843	Tension Spring	.10
R103	63-1906	750K ohm 1/2W 5% Ins. Res.			80-846	Fine Tuning Limiting Spring	.10
R45	63-1911	1 Megohm 1/2W 10% Ins.	.21		83-1802	Fuse Mounting Strip	.20
R18	63-1912	1 Megohm 1/2W 20% Ins.	.21		85-488	Picture Control Switch	.30
R72	63-1919	1.5 Megohm 1/2W 20% Ins.	.21		93-2	Brass Washer (used on 22-2154)	.01
R17	63-1926	2.2 Megohm 1/2W 20% Ins.	.21		93-525	Fibre Washer (2 used on 78-709)	.65C
R4	63-1933	3.3 Megohm 1/2W 20% Ins.	.21		93-961	Insulating Washer (used on Contrast Control)	.03
R20	63-1982	100K ohm 2W 10% Ins. (2 used)	.33		93-971	Shell Support Washer (used on Horiz. Sweep)	.02
R82	63-1983	47 ohm 2W 20% (or 63-2161) Ins.	.33		93-1057	Insulating Washer (used on Contrast Control)	.03
R78	63-2017	4000 ohm 5W 10% Ins. (2 used) WW	.43		95-1240	Vertical Output Trans.	6.00
R19	63-2050	Bias Control	.50		95-1267	Deflection Coil	12.00
R77	63-2099	Focus Control	2.00		100-67	Pilot Light	.11
R76	63-2103	400 ohm WW Resistor (Center Tapped)	.40		103-1	Crystal Diode	1.60
R55	63-2110	Vertical Size Control	1.20		112-88	Thumb Screw #8-32 (Deflection Coil)	.06
R84	63-2078	3.3 ohm 1/2W 20% Ins.	.21		112-758	#4-40x1/4" R.H.S.T. (used on 85-488)	.02
R40	63-2123	Contrast Control	1.20		114-45	#8x3/8 Hex. Hd. S. T. (2 used on 8-17289)(or 114-313)	1.10C
R32	63-2125	Volume Control & Switch	1.81		114-268	#6x1/4 Hex Hd. S. T. (2 used on 24-554)	1.10C
R43	63-2126	Intensity Control	1.20		114-310	#8x5/16 Hex. Washer Hd. S. T. (4 used S-17100 & 2 used on Defl. Coil Mtg.)	.04
R81	63-2134	150 ohm WW 5W 20% Ins.	.43				
R75	63-2137	100K ohm 1W 10% Ins.	.24				
R50	63-2153	A.G.C. Control	1.20				
R85	63-2171	1800 ohm 4W 10% Ins.					

Diag. No.	Part No.	Description	Suggested List Price	Diag. No.	Part No.	Description	Suggested List Price				
24H21 Main Chassis (cont'd.)											
	125-26	Rubber Grommet (2 used on 78-709)	.03		S-17362	Indicator Drum & Shaft Assembly	.90				
	126-652	Pilot Light Shield	.05	L79	S-17377	Contrast Control Shaft & Bushing Assembly	.60				
	136-22	Fuse 1/4 amp	.25		S-17400	Picture Control Coil Assy.	1.75				
	149-89	Iron Core (1 ea. used on S-16855 & S-17116)	.10		S-17425	Fine Tuning Shaft & Bushing Assembly	.35				
	149-98	Iron Core & Screw (used on S-17400)	.40		S-17429	Anode Lead & Eyelet Assy.	.20				
	149-100	Iron Core & Spring (used on S-17177)	.20		S-17164	Beam Bender Unit	1.50				
	149-101	Iron Core & Spring (used on S-17177)	.35	TUBES							
	149-102	Iron Core & Screw (use S-17114)			1 - 19AP4B	3 - 6SN7GT					
	188-131	Retaining Ring (used on S-17097)	.07		1 - 1B3GT	1 - 6SN7GTA					
	188-137	Retaining Ring (used on (S-17362)	.08		2 - 6BQ6GT	1 - 6W4GT					
	196-147	Plastic Gasket	6.00		1 - 6AL5	1 - 12AU7					
	196-164	C.R. Tube Support Gasket	.40		1 - 6BN6						
	199-124	Focus Coil Sleeve	.02	For parts on S-17100 R.F. Shelf & Turret Tuner refer to 22H20 Chassis.							
	S-16855	Sound Trap Coil Assy.	.65	Parts for the Video I.F. Assembly are listed under Part Numbers S-17064 or S-17635.							
	S-17052	2nd. Video Series	.35	S-17290 MECHANICAL CENTERING & FOCUS ASSEMBLY							
	S-17053	2nd Video Shunt Peaking Coil Assembly	.40		57-1548	Centering Plate	.20				
	S-17064	Video I.F. Strip Assembly	36.50		57-1549	Focusing Coil Mtg. Plate	.25				
	S-17083	Gear, Bushing & Set Screw Assembly	.25		57-1684	Magnet End Plate	.06				
	S-17084	Shaft Gear & Coupling Assy.	2.00		93-951	SpringWasher - Shakeproof Blued	.02				
	S-17096	Dial Cord & Eyelet Assy. (Fine Tuning)	.10		93-1006	.0359x.156 I.D.x1/2" O.D. Steel	.01				
	S-17097	Brkt. Pulley & Gear Assy.	1.20		93-1007	.0359x.156 I.D.x1" O.D. Steel	.03				
	S-17100	R.F. Shelf & Turret Assy. (Complete)	67.50		93-1009	Spring Washer - Shakeproof Blued	.02				
L74	S-17114	Horiz. Oscillator Coil Assy.	1.20		114-48	#6-32x1/4" Hex. Hd. Sl. M.S. (2 used)	.43C				
	S-17118	4,5 MC Video Trap Coil Assembly	.80		S-17290	Mechanical Centering & Focus Assy. (Complete)	6.00				
	S-17140	Horiz. Sweep Trans. Assy.	17.50		S-17332	Focusing Coil Assembly	2.50				
L76	S-17175	Horiz. Size Control Coil Assembly	1.00	CABINET PARTS FOR H2447R & RQ							
L78	S-17176	Horiz. Linearity Control Coil Assembly	.55		11-106	Line Cord & Plug 9 ft. lg.	.80				
	S-17177	Horiz. Size & Linearity Control Coil & Brkt. Assy.	2.30		14-1262R	Cabinet For H2447R & RQ Console Model					
	S-17178	Fire Shield Assembly	.80		16-646	Packing Carton					
	S-17179	Horiz. Sweep Trans. Mtg. Plate Assembly	.20		24-446	A.C. Line Cord Plug Cover	.15				
	S-17185	C. R. Tube Socket Assy.	.85		46-885	Contrast Control Knob	.15				
	S-17221	Defl. Yoke Mtg. Brkt. Assy.	1.00		46-887	Horizontal Hold Knob	.10				
	S-17286	Insulator Strip & Terminal Assy.	.15		46-888	Channel Selector Knob	.35				
	S-17289	Gasket Support Plate & Switch Brkt. Assy.	.10		46-890	Volume Control Knob	.30				
	S-17290	Mechanical Centering & Focus Assembly	6.00		46-893	Brightness Control Knob	.15				
	S-17291	A.C. Plug & Brkt. Assy.	.25		46-895	Fine Tuning Knob	.15				
					46-896	Vertical Hold Knob	.10				
					49-649	10" PM Speaker	6.00				
					ZC-10161	Cone	3.41				

Diag. No.	Part No.	Description	Suggested List Price	Diag. No.	Parts No.	Description	Suggested List Price				
CABINET PARTS FOR H2447R & RQ (cont'd.)											
						<u>OMIT:</u>					
56-286	Cover Hinge Pin	.05		14-1262R	Cabinet for H2447R & RQ						
57-1481	Esc. Clamping Plate (3 used)	.02			Console Model						
57-1670	Glass Retaining Plate (4 used)	.02		16-646	Packing Carton						
57-1674	Escutcheon	12.00									
57-1678	Esc. (Vol. Control)	1.00									
57-1679	Esc. (Channel Selector)	1.00									
70-3	#5x1/2" R.H.W.S. Steel N.P. (2 used on S-17305)	.85C									
70-86	#6x5/8" Washer Hd. Wood Screw-St. Br. (5 used to int. S-17303)	.60C									
72-3	#5x5/8" Flt. Hd. W. S. Steel (2 used on RQ Model)	.02									
72-81	#8x3/4" Phill. Fit. Hd. Wood Screw - St. Br. (4 used to Mt. S-17293)	.02									
74-58	Ventilating Screen	1.30									
				<u>ADD:</u>							
				14-1269R	Cabinet for H2445R & RQ						
					Console Model						
				16-650	Packing Carton						
				57-1284	Strike Plate (2 used)	.05					
				74-76	Ventilating Screen	.30					
				156-35	Bullet Catch	.05					
				166-55	Tack Bumper (2 used)	.03					
CABINET PARTS FOR H3478E & EQ											
				2-207	Cabinet Back (Phono Sect.)	1.25					
				11-106	Line Cord & Plug 9 ft. lg.	.80					
				14-1270E	Cabinet for H3478E & EQ						
					Console Combination Model						
				16-652	Packing Carton - Inner Pack						
				16-653	Packing Carton - Outer Pack						
				19-9	Cable Clip	.03					
				19-169	Record Changer Mtg. Clip (2 used)	.07					
				19-210	Loop Connector Clip (2 used)	.03					
				24-535	Line Cord Plug Cover	.10					
				46-833	Volume Control Knob	.30					
				46-876	Tuning Control Knob	.15					
				46-885	Contrast Control Knob	.15					
				46-887	Horiz. Control Knob	.10					
				46-889	Channel Selector Knob	.35					
				46-893	Brightness Control Knob	.15					
				46-895	Fine Tuning Knob	.15					
				46-896	Vertical Hold Knob	.10					
				46-899	Band Switch Knob	.15					
				49-694	12" PM Speaker	17.50					
					ZC12161 Cone & Voice Coil						
				56-286	Cover Hinge Pin	.05					
				57-1270	Strike Plate (2 used)	.05					
				57-1481	Esc. Clamping Plate (7 used)	.02					
				57-1666	Radio Dial Esc.	4.50					
				57-1670	Glass Retaining Plate (4 used)	.02					
				57-1674	TV Escutcheon	12.00					
				57-1678	Esc. (Vol. Control)	1.00					
				57-1679	Esc. (Channel Selector)	1.00					
				70-3	#5x1/2" R.H.W.S. Steel N.P. (2 used S-17305 & 1 used 19-9)	.85C					
				70-86	#6x5/8" Washer Hd. Wood Screw - St. Br. (11 used to mt. Backs)	.60C					
				72-3	#5x5/8" Flt. Hd. W. Steel N.P. (2 used on EQ Models)	.02					
CABINET PARTS FOR H2445R & RQ											
Model H2445R & RQ is the same as H2447R & RQ except the following:											

Diag. No.	Part No.	Description	Suggested List Price	Diag. No.	Part No.	Description	Suggested List Price				
CABINET PARTS FOR H3478E & EQ (cont'd.)											
72-81	#8x3/4" Phill. Flt. Hd. Wood Screw - St. Br. (4 used on S-17293)	.02			S-17189	Power Supply Assy. (Complete)	48.00				
74-58	Ventilating Screen	1.33			S-17255	Radiorgan Cable Assy.	2.60				
74-71	Ventilating Screen	.40			S-17266	Remote Control Assy. (used on EQ Models)					
78-787	Two Contact Socket	.10			S-17267	Hand Control & Cable Assy. (used on EQ Models)					
80-604	Hinge Spring (2 used)	.15			S-17293	Cabinet Antenna Assy.	3.25				
80-826	Grounding Spring	.08			S-17305	Antenna Terminal & Wire Assembly	.20				
80-828	Door Return Spring	.07			S-17325	Low Impedance Loop Assembly	.30				
80-830	Record Changer Mtg. Spring (4 used)	.03			S-17328	Loop Loading Coil Assy.	.65				
93-168	Rubber Shoulder Washer (4 used)	.07			S-17351	Cabinet Back (TV)	10.50				
94-295	Mtg. Bushing (4 used on EQ Models)	.04			S-17497	Cover & Nameplate Assy.	2.50				
112-809	Record Changer Mtg. Screw (3 used)	.08		RADIORGAN ESCUTCHEON PARTS							
112-813	4-40x5/16" R.H.S.T. (8 used on TV Esc. Mtg.)	.02		76-444	Radiorgan Knob Shaft	.04					
114-80	1/4-20x1-3/8" Hex. Hd. M.S. (4 used Mtg. TV Chassis & 3 used Mtg. Pwr. Supply)	.05		114-297	#6x1/4 Hex. Hd. Sl. S. T. (2 ea. used on S-17252 & S-17253)	.01					
114-201	#8x5/16" Hex. Hd. S. T. (used on Pwr. Supply)	.75C		S-14255	Radiorgan Mtg. Brkt. Assy. (2 used)	.15					
114-341	#6x3/8 Hex Hd. S. T. (used on 80-826)	.02		S-17246	Radiorgan Knob & Eyelet Assembly (Treble)	.20					
114-350	#8x7/16" Hex. Hd. Sl. S. T. (used on Radio Esc. Mtg.)	.02		S-17247	Radiorgan Knob & Eyelet Assembly (Voice)	.20					
114-354	Radio Chassis Mtg. Screw (4 used)	.07		S-17248	Radiorgan Knob & Eyelet Assembly (Alto)	.20					
114-358	#6x1/2" Hex Hd. Sl. S. T. (4 used on EQ Models)	.02		S-17249	Radiorgan Knob & Eyelet Assembly (Bass)	.20					
126-653	Heat Shield	.80		S-17250	Radiorgan Knob & Eyelet Assembly (Lo-Bass)	.20					
156-33	Bullet Catch (2 used)	.05		S-17251	Radiorgan Knob & Eyelet Assembly (Normal)	.20					
159-50	Plug Button - Black Oxide (2 used)	.01		S-17252	Radiorgan Esc. & Knob Assembly (R.H.)	1.55					
165-14	Metal Glide (2 used)	.03		S-17253	Radiorgan Esc. & Knob Assembly (L.H.)	1.55					
166-57	Tack Bumper (2 used)	.03		CABINET PARTS FOR H3477R & RQ							
188-54	Knob Clamping Ring (48-876)	.02		Model H3477R & RQ is the same as H3478E & EQ except the following:							
192-138	Dial Glass (Radio)	.50		OMIT:							
192-139	Protective Glass (TV)	12.00		2-207	Cabinet Back (Phono Section)						
196-150	Glass Gasket (TV)	.50		14-1270E	Cabinet for H3478E & EQ Console Combination Model						
202-829	Instruction Book (TV)	.20		16-652	Packing Carton - Inner Pack						
202-849	Instruction Book (EQ Model)	.30		16-653	Packing Carton - Outer Pack						
202-851	Instruction Book (Radio-Phono)	.15		46-833	Volume Control Knob						
S-14029	Variable Speed Record Changer			46-889	Channel Selector Knob						
S-15536	Record Changer Compt. Hinge Brkt. & Link Assy. (2 used)	.50		57-1270	Strike Plate (2 used)						
S-15780	Cobra Tone Arm Cartridge	3.50		156-33	Bullet Catch (2 used)						
S-16419	Record Adapter Plug & Envelope Assembly	.60		166-57	Tack Bumper (2 used)						
S-17005	Record Changer Mtg. Frame Assembly	3.00		S-17351	Cabinet Back Assy. (TV)						
S-17167	Volume Control Knob Assy.	.25									

Diag. No.	Part No.	Description	Suggested List Price	Diag. No.	Part No.	Description	Suggested List Price
CABINET PARTS H3477R & RQ (cont'd.)				C68	22-2098	.47 Mfd. (Molded)	200V .65
	C71	22-2112 .001 Ceramic	500V .30				
	C70	22-2120 500 Mmfd. Special (Molded)	10,000V 1.70				
<u>ADD:</u>							
2-201	Cabinet Back (Phono Section)	1.25		C36AD		15 Mfd.	475V
14-1267R	Cabinet for H3477R & RQ Console Combination Model			C36BD	22-2122	80 Mfd.	300V
16-647	Packing Carton - Inner Pack			C36CD		40 Mfd.	50V 4.00
16-648	Packing Carton - Outer Pack			C36DD		15 Mfd.	475V
46-888	Channel Selector Knob	.35		C49	22-2128	.001 Mfd. (Molded) (2 used)	600V .28
46-890	Volume Control Knob	.30		C66	22-2146	.47 Mfd.	200V .60
57-1284	Strike Plate	.05		C24AA	22-2154	Elect. 10 Mfd.	250V 1.25
156-35	Bullet Catch (2 used)	.05		C53	22-2162	130 Mmfd. Mica	500V .28
166-55	Tack Bumper (2 used)	.03		C59	22-2163	1000 Mmfd. Mica	500V .45
S-17308	Cabinet Back Assy. (TV)	11.00		C47	22-2166	.15 Mfd.	200V .45
				C74	22-2168	33 Mmfd. Ceramic	500V .20
				C37AD		40 Mfd.	300V
				C37BD	22-2223	80 Mfd.	25V
				C37CD		100 Mfd.	50V 4.25
				C38AD		20 Mfd.	475V
				C38BD	22-2224	20 Mfd.	450V
				C33CD		20 Mfd.	200V 4.15
				C38DD		40 Mfd.	25V
				C40	22-2233	20 Mmfd. Ceramic (2 used)	450V .25
				C41	22-2234	100 Mmfd. Ceramic	500V .35
				C69	22-2261	.15 Mfd.	400V .40
				C42	22-2264	.015 Mfd.	600V .35
					34-183	Turret Drive Gear	.25
					52-591	Insulated Shielded Lead	.35
					54-139	3/8-32x9/16 Hex Palnut (8 used on control)	.01
					57-1675	Shaft Retaining Plate	.02
					58-188	Two Prong Plug (Part of S-17127)	.08
C29	22-3	.01 Mfd. Ceramic (Disc) (2 used)	500V .26		58-191	Nine Prong Adapter Plug	.25
C27	22-4	.004 Mfd. Ceramic (Disc) (2 used)	500V .26	R38	63-943	4700 ohm 1W 10% Ins. (2 used)	.24
C52	22-365	100 Mmfd. Mica (Molded)	500V .20	R63	63-957	33K ohm 1W 10% Ins.	.24
C61	22-470	150 Mmfd. Mica (Molded)	500V .20	R96	63-970	47 ohm 1W 10% Ins. (or 63-2093)	.24
C85	22-1137	150 Mmfd. Mica	500V .20	R79	63-1065	15K ohm 1W 10% Ins.	.24
C57	22-1138	470 Mmfd. Mica (Molded)	500V .20	R28	63-1571	6800 ohm 2W 10% Ins.	.33
C84	22-1645	330 Mmfd. Mica	500V .20	R98	63-1581	4.7 ohm 1/2W 10% Ins.	
C46	22-1775	.047 Mfd. (Molded)	400V .26	R97	63-1620	1800 ohm 2W 10% Ins. (or 63-1691)	.36
C72	22-1777	0.1 Mfd.	200V .26	R59	63-1674	Vertical Linearity Control	1.20
C35	22-1782	.0047 Mfd. (Molded) (2 used)	600V .26	R65	63-1675	Horiz. Drive Control	1.20
C73	22-1810	0.1 Mfd.	200V .26	R31	63-1744	100 ohm 1/2W 20% Ins. (3 used)	.21
C64	22-1814	.0022 Mfd. (2 used)	600V .26	R1	63-1750	150 ohm 1/2W 10% Ins.	
C51	22-1841	.1 Mfd. (Molded)	600V .45	R67	63-1751	150 ohm 1/2W 20% Ins. (2 used)	.21
C39	22-1844	.047 Mfd. (Molded) (5 used)	600V .35	R90	63-1758	220 ohm 1/2W 20% Ins.	.21
C58	22-1845	.0022 Mfd.	600V .26	R24	63-1764	330 ohm 1/2W 10% Ins.	.21
C62	22-1846	.01 Mfd. (Molded)	400V .20	R36	63-1768	390 ohm 1/2W 10% Ins.	.21
C65	22-1851	.001 Mfd. (Molded)	1000V .26	R21	63-1771	470 ohm 1/2W 10% Ins. (3 used)	.21
C19	22-1876	.47 Mmfd. Ceramic	500V .35				
C50	22-1880	.0012 Mfd. (Molded)	600V .26				
C63	22-2034	680 Mmfd.	500V .35				
C67	22-2061	.1 Mfd. (Molded)	400V .35				
C54	22-2071	.022 Mfd. (Molded)	200V .26				

Diag. No.	Part No.	Description	Suggested List Price	Diag. No.	Part No.	Description	Suggested List Price
		23H22Z Main Chassis (cont'd.)					
R60	63-1775	560 ohm 1/2W 10% Ins. (2 used on 95-1263)	.21		78-605	Horiz. Hold Control Shaft	.20
R33	63-1782	820 ohm 1/2W 10% Ins.	.21		78-580	Nine Contact Socket (Phonevision)	.22
R35	63-1806	3300 ohm 1/2W 10% Ins.	.21		78-640	Elect. Cond. Socket	.05
R61	63-1813	4700 ohm 1/2W 10% Ins. (2 used)	.21		78-709	Octal Tube Socket (2 used)	.20
R34	63-1838	18K ohm 1/2W 10% Ins.	.21		78-755	Octal Tube Socket (5 used)	.18
R37	63-1841	22K ohm 1/2W 10% Ins. (2 used)	.21		78-807	Miniature Tube Socket (3 used)	.15
R39	63-1845	27K ohm 1/2W Ins. 10%	.21		78-834	Octal Tube Socket	.25
R69	63-1848	33K ohm 1/2W 10% Ins.	.21		78-840	Two Contact Socket (AC)	.30
R5	63-1855	47K ohm 1/2W 10% Ins. (3 used)	.21		78-875	C.R. Tube Socket	.40
R47	63-1862	68K ohm 1/2W 10% Ins.	.21		78-876	Noval Miniature Tube Socket	.25
R56	63-1863	68K ohm 1/2W 20% Ins.	.21		78-900	Pilot Light Socket & Wire	.25
R46	63-1869	100K ohm 1/2W 10% Ins. (4 used)	.21		78-908	Miniature Tube Socket	.30
R25	63-1870	100K ohm 1/2W 20% Ins. (2 used)	.21		80-744	PM Focus Mtg. Spring (4 used)	.02
R74	63-1876	150K ohm 1/2W 10% Ins.	.21		80-802	Retaining Spring (1ea. Used on 149-100 & 149-101)	.06
R42	63-1883	220K ohm 1/2W 10% Ins.	.21		80-822	Dial Cord Tension Spring	.10
R49	63-1884	220K ohm 1/2W 20% Ins. (2 used)	.21		80-823	Shaft Guide Spring (used on S-17114)	.10
R22	63-1890	330K ohm 1/2W 10% Ins. (2 used)	.21		80-824	Tube Plate Connector Spring (3 used)	.08
R48	63-1898	470K ohm 1/2W 20% Ins. (2 used)	.21		80-841	C.R. Tube Grounding Spring	.10
R95	63-1904	680K ohm 1/2W 10% Ins.	.21		80-843	Tension Spring	.10
R45	63-1911	1 Megohm 1/2W 10% Ins. (4 used)	.21		80-846	Fine Tuning Limiting Spring	.10
R18	63-1912	1 Megohm 1/2W 20% Ins.	.21		82-25	C.R. Tube Retaining Strap	.75
R72	63-1919	1.5 Megohm 1/2W 20% Ins.	.21		83-1802	Fuse Mtg. Strip	.20
R17	63-1926	2.2 Megohm 1/2W 20% Ins. (3 used)	.21		83-1860	Light Shield Strip	.10
R93	63-1979	68K ohm 1W 10% Ins. (2 used)	.24		87-1	Integrator Unit	.26
R20	63-1982	100K ohm 2W 10% Ins.	.33		93-2	Brass Washer (used on 22-2154)	.01
R78	63-2017	4000 ohm WW 5W 10% Ins. (2 used)	.43		93-525	Fibre Washer (2 used on ea. 78-709)	.65C
R27	63-2022	10K ohm WW 5W 10% Ins.	.60		93-961	Insulating Washer (Contrast Control)	.03
R26	63-2023	3500 ohm WW 10W 10% Ins.	.80		93-971	Shell Support Washer (Horiz. Sweep)	.02
R19	63-2050	Bias Control	.50		93-1057	Insulating Washer (Contrast Control)	.03
R30	63-2077	400 ohm WW 5W 10% Ins.	.43		94-746	C.R. Tube Support Bushing (2 used)	.10
R77	63-2099	Focus Control	2.00		95-1170	Filter Choke	2.00
R55	63-2110	Vertical Size Control	1.20		95-1238	Audio Output Trans.	1.75
R40	63-2123	Contrast Control	1.20		95-1239	Vertical Output Trans.	4.25
R32	63-2125	Vol. Control & Switch	1.81		95-1260	Power Trans.	25.00
R43	63-2126	Intensity Control	1.20		95-1263	Deflection Coil	11.00
R52	63-2127	Vertical Hold Control	1.20		100-67	Pilot Light	.11
R81	63-2134	150 ohm WW 5W 20% Ins.	.43		112-88	Thumb Screw #8-32 (Deflection Coil Adj.)	.06
R75	63-2137	100K ohm 1W 10% Ins.	.24		114-65	#8-32x1-1/2" Hex Hd. Sl.	
R73	63-2145	10K ohm 2W 20% Ins.	.33			M.S. (used on S.17531)	.04
R50	63-2153	A.G.C. Control	1.20		114-201	#8x5/16 Hex Hd. S. T. (24 used)	.75C
R58	63-2159	Vertical Hold Range Control	1.20		114-310	#8x5116 Hex Washer Hd. S. T. (4 used on Turret Tuner & 2 used on 83-1802)	.04
R83	63-2425	15K ohm 7W 10% Ins.	.				
	73-114	8-32x5/16 Slab Hd. Set Screw (6 used S-17084)	.02				

Diag. No.	Part No.	Description	Suggested List Price	Diag. No.	Part No.	Description	Suggested List Price
23H22Z Main Chassis (cont'd.)							
	114-331	8-32x5/16 Hex Hd. S. T. (2 used to mt. S-17097)	.03		S-17521	C.R. Tube Support & Alignment Brkt. Assy.	1.75
	125-26	Rubber Grommet (2 used on ea. 78-709)	.03				
	126-643	Fire Shield	.20				
	126-652	Pilot Light Shield	.05				
	136-20	Fuse	.25				
	149-89	Iron Core (1 ea. used on S-16855 & S-17116)	.10				
	149-100	Iron Core & Spring (used on S-17175)	.20				
	149-101	Iron Core & Spring (used on S-17176)	.35				
	149-102	Iron Core & Screw (use S-17114)					
	188-131	Retaining Ring (used on S-17087)	.07				
	188-137	Retaining Ring (used on S-17362)	.08				
	196-164	C.R. Tube Support Gasket	.40				
	199-124	Focus Coil Sleeve	.02				
	199-145	Rubber Sleeve (used on S-17521)	.05				
	199-146	Rubber Sleeve (used on S-17521)	.03				
	S-16209	Wire & Eyelet Assembly	.30				
	S-16855	Sound Trap Coil	.65				
	S-17052	2nd Video Series Peaking Coil Assembly	.35				
	S-17053	2nd Vido Shunt Peaking Coil Assembly	.40				
	S-17064	Video I.F. Strip Assy.	36.50				
	S-17084	Shaft-Gear & Coupling Assy.	2.00				
	S-17096	Dial Cord & Eyelet Assy. (Fine Tuning)	.10				
	S-17097	Brkt. Pulley & Gear Assy.	1.20				
	S-17100	R.F. Shelf & Turret Assy.	67.50				
	S-17114	Horiz. Osc. Coil Assy.	1.20				
	S-17116	4.5 McVideo Trap Coil Assy.	.80				
	S-17121	Rectifier Mtg. Plate Assy.	.65				
	S-17127	A.C. Plug & Brkt. Assy.	.15				
	S-17175	Horiz. Size Control Coil Assembly	1.00				
	S-17176	Horiz. Linearity Control Coil Assy.	.55				
L81	S-17861	Mechanical Centering & Focus Assy.	6.00				
	S-17362	Indicator Drum & Shaft Assy.	.90				
	S-17377	Contrast Control Shaft & Bushing Assy.	.60				
	S-17425	Fine Tuning Ext. Shaft & Bushing Assembly	.35				
	S-17433	Deflection Yoke Mtg. Brkt. Assembly	1.00				
	S-17435	Horiz. Sweep Trans. Assy.	8.50				
	S-17447	Anode Clip & Wire Assy.	.30				
	S-17461	Beam Bender Unit	1.50				
<u>TUBES</u>							
	1 - 16TP4		1 - 6BN6				
	1 - 1X2		2 - 6BQ6GT				
	1 - 5U4G		2 - 6SN7GT				
	1 - 5Y3GT		1 - 6W4GT				
	1 - 6AL5		1 - 12AU7				
	1 - 6BF5		1 - 6BL7GT				
For parts on S-17100 R.F. Shelf & Turret Tuner refer to 22H20 Chassis							
Parts for the Video I.F. Assembly are listed under Part Numbers S-17064 or S-17635.							
For parts on S-17230 Mechanical Centering & Focus Assembly, refer to parts list for 24H20 Chassis.							
CABINET PARTS H2328RZ & RQZ							
	11-106	Line Cord & Plug 9 ft. lg.	.80				
	12-1798	Support Brkt. (4 used to mt. 192-140)	.01				
	14-1278R	Cabinet for H2328RZ & RQZ Table Model					
	16-665	Packing Carton					
	19-196	Clip (2 used on 188-134)	.03				
	24-446	AC Line Cord Plug Cover	.15				
	43-196	Control Housing	.75				
	46-885	Contrast Control Knob	.15				
	46-887	Horiz. Hold Knob	.10				
	46-888	Channel Selector Knob	.35				
	46-890	Volume Control Knob	.30				
	46-893	Brightness Control Knob	.15				
	46-895	Fine Tuning Knob	.15				
	46-896	Vertical Hold Knob	.10				
	49-696	5-1/4" PM Speaker	6.00				
	ZC5093	Cone & Voice Coil	1.73				
	54-129	Speed Nut (3 used on 188-134)	.60C				
	54-269	#8-32x11/32 (1 used on ea. S-17422)	.01				
	56-286	Cover Hinge Pin	.05				
	57-1481	Clamping Plate (4 used to mt. S-17422)	.02				
	57-1620	Retaining Plate (used on 188-134)	.03				
	70-3	#5x1/2" R.H.W.S. Steel N.P. (2 used on S-17306)	.85C				
	70-86	#6x5/8" Washer Hd. Wood Screw St. Br. (5 used to mt. back)	.60C				
	70-153	#5x1/4" R. H. W. S. Steel (2 used on 57-1620)	.01				
	72-3	#5x5/8" Flt. Hd. W.S. (2 used on QZ Models Only)	.02				

Diag. No.	Part No.	Description	Suggested List Price	Diag. No.	Part No.	Description	Suggested List Price
CABINET PARTS H2328RZ & RQZ (cont'd.)							
72-81	#8x3/4 Phillips Flat Hd. Wood Screw St. Br. (4 used on S-17307)	.02	54-269	#8-32x11/32" Panhead (4 used on dial glass mtg.)	.01		
72-90	#4x3/4 Phillips Flat Hd. Wood Screw St. Br. (4 used to mt. 43-196)	.02	56-286	Cover Hinge Pin	.05		
74-58	Ventillating Screen	1.30	57-1620	Retaining Plate (used on 188-134)	.03		
78-787	Two Contact Socket (Cabl. Backs)	.10	70-3	#5x1/2" R.H.W.S. Steel N.P. (2 used on S-17306)	.85C		
80-828	Cover Return Spring	.07	70-86	#6x5/8" Washer Hd. Wood Screw St. Br. (5 used to mt. back)	.60C		
94-295	Mtg. Bushing (4 used on RQZ Models only)	.04	70-153	#5x1/4" R.H.W.S. Steel (2 used on 57-1620)	.01		
114-80	1/4-20x1-3/8 Hex Washer Hd. M.S. (4 used Chassis Mtg.)	.05	72-81	#8x3/4 Phillips Flat Hd. Wood Screw St. Br. (4 used on S-17307)	.02		
114-358	#6x1/2" Hex Hd. Sl. S. T. (4 used on RQZ Models only)	.02	72-90	#4x3/4 Phillips Flat Hd. Wood Screw St. Br. (4 used to mt. 43-196)	.02		
188-133	Trim Ring	.35	74-58	Ventillating Screen	1.30		
188-134	Trim Ring	.40	78-787	Two Contact Socket	.10		
192-140	Protective Glass	6.00	80-828	Cover Return Spring	.07		
196-163	Rectangular Gasket	4.80	83-1844	Trim Strip	.20		
202-844	Instruction Book	.25	112-818	#4-40x1/4" Rd. Hd. S.T. Screw (2 used on S-17510)	.03		
202-849	Instruction Book (RQZ Models only)	.30	114-80	1/4-20x1-3/8" Hex Washer Hd. M.S. (4 used chassis mtg.)	.05		
S-17266	Remote Control Assy. (used on RQZ Models only)		188-133	Trim Ring	.35		
S-17267	Hand Control & Cable Assy. (used on RQZ Models only)		188-134	Trim Ring	.40		
S-17306	Antenna Terminal & Wire Assembly	.20	192-142	Protective Glass	6.00		
S-17307	Cabinet Antenna Assy.	1.35	196-166	Rectangular Gasket	4.80		
S-17422	Brkt. & Screw Assy. (4 used to mt. 192-140)	.20	202-844	Instruction Book	.25		
S-17443	Cabinet Back Assembly	9.50	S-17306	Antenna Terminal & Wire Assembly	.20		
S-17497	Cover & Nameplate Assy.	2.50	S-17307	Cabinet Antenna Assembly	1.35		

CABINET PARTS H2329RZ

11-106	Line Cord & Plug 9 ft. lg.	.80
14-1285R	Cabinet for H2329RZ Table Model	
16-773	Packing Carton	
19-196	Clip (2 used on 188-134)	.03
24-446	AC Line Cord Plug Cover	.15
43-196	Control Housing	.75
46-885	Contrast Control Knob	.15
46-887	Horiz. Hold Knob	.10
46-888	Channel Selector Knob	.35
46-890	Volume Control Knob	.30
46-893	Brightness Control Knob	.15
46-895	Fine Tuning Knob	.15
46-896	Vertical Hold Knob	.10
49-696	5-1/4" PM Speaker	6.00
	ZC5093 Cone & Voice Coil	1.73
54-129	Speed Nut (3 used on 188-133)	.60C

CABINET PARTS H2352RZ & RQZ

11-106	Line Cord & Plug - 9 ft. lg.	.80
14-1282R	Cab met for H2352RZ & RQZ Console Model	
16-771	Packing Carton	
19-196	Clip (2 used on 188-134)	.03
24-446	AC Line Cord Plug Cover	.15
43-196	Control Housing	.75
46-885	Contrast Control Knob	.15
46-887	Horiz. Hold Knob	.10
46-888	Channel Selector Knob	.35
46-890	Volume Control Knob	.30
46-893	Brightness Control Knob	.15
46-895	Fine Tuning Knob	.15
46-896	Vertical Hold Knob	.10
49-649	10" PM Speaker	11.75
	ZC10161 Cone & Voice Coil	3.41
54-129	Speed Nut (3 used on 188-133)	.60C

Diag. No.	Part No.	Description	Suggested List Price	Diag. No.	Part No.	Description	Suggested List Price
CABINET PARTS H2352RZ & RQZ (cont'd.)							
54-269	#8-32x11/32" Palnut (4 used on dial glass mtg.)	.01		11-106	Line Cord & Plug 9 ft. lg.	.80	
56-286	Cover Hinge Pin	.05		14-1284E	Cabinet for H2353EZ & EQZ		
57-1481	Clamping Plate (4 used on glass mtg.)	.02		Console Model			
57-1620	Retaining Plate (used on 188-134)	.03		16-772	Packing Carton		
70-3	#5x1/2" R.H.W.S. Steel N.P. (2 used to mt. S-17556)	.85C		19-196	Clip (2 used on 188-134)	.03	
70-86	#6x5/8" Washer Hd. Wood Screw St. Br. (7 used to mt. S-17511)	.60C		24-446	AC Line Cord Plug Cover	.15	
70-153	#5x1/4" R. H.W.S. Steel (2 used on 57-1620)	.01		43-195	Control Housing	1.10	
72-3	#5x5/8" Flt. Hd. W. S. (2 used on RQZ Models only)	.02		46-833	Volume Control Knob	.30	
72-81	#8x3/4 Phill. Flt. Hd. Wood Screw St. Br. (4 used to mt. S-16890)	.02		46-885	Contrast Control Knob	.15	
72-90	#4x3/4 Phill. Flt. Hd. Wood Screw St. Br. (4 used on 43-196)	.02		46-887	Horiz. Hold Knob	.10	
74-58	Ventilating Screen	1.30		46-889	Channel Selector Knob	.35	
76-787	Two Contact Socket	1.30		46-893	Brightness Control Knob	.15	
80-828	Cover Return Spring	.07		46-895	Fine Tuning Knob	.15	
83-1844	Trim Strip	.20		46-896	Vertical Hold Knob	.10	
94-295	Mtg. Bushing (4 used on RQZ Model only)	.04		49-649	10" PM Speaker	11.75	
112-818	#4-40x1/4" Rd. Hd. S. T. Screw (2 used on glass & gasket mtg.)	.03		ZC10161	Cone & Voice Coil	3.41	
114-80	1/4-20x1-3/8" Hex Washer Hd. M.S. (4 used chassis mtg.)	.05		54-129	Speed Nut (3 used on 188-134)	.60C	
114-358	#6x1/2" Hex. Hd. Sl. S. T. (4 used on RQZ Models only)	.02		54-269	#8-32x11/32" Palnut (4 used on glass mtg.)	.01	
165-9	Metal Glide (4 used)	.03		56-286	Cover Hinge Pin	.05	
188-133	Trim Ring	.35		57-1481	Clamping Plate (4 used on glass mtg.)	.02	
188-134	Trim Ring	.40		57-1620	Retaining Plate (used on 188-134)	.03	
192-142	Protective Glass	6.00		70-3	#5x1/2" R.H.W.S. Steel N.P. (2 used on S-17556)	.85C	
196-166	Rectangular Gasket	4.80		70-86	#6x5/8" Washer Hd. Wood Screw St. Br. (7 used to mt. back)	.60C	
202-844	Instruction Book	.25		70-153	#5x1/4" R.H.W.S. Steel Cad. (2 used on 57-1620)	.01	
202-849	Instruction Book (used on RQZ Models only)	.30		72-3	#5x5/8" Flt. Hd. W. S. Steel (2 used on EQZ Model only)	.02	
S-16890	Cabinet Antenna Assy.	1.75		72-81	#8x3/4 Phillips Flt. Hd. Wood Screw St. Br. (4 used on S-16890)	.02	
S-17266	Remote Control Assy. (used on RQZ Models only)			72-90	#4x3/4 Phill. Flt. Hd. Wood Screw St. Br. (4 used on 43-195)	.02	
S-17267	Hand Control & Cable Assy. (used on RQZ Models only)			74-58	Ventilating Screen	1.30	
S-17497	Control Cover Assy.	2.50		76-787	Two Contact Socket	.10	
S-17510	Frame & Stud Assy.	5.00		80-828	Cover Return Spring	.07	
S-17511	Cabinet Back Assy. (Complete)	9.50		83-1844	Trim Strip	.20	
S-17556	Antenna Terminal & Wire Assembly	.25		94-295	Mtg. Bushing (4 used on EQZ Models only)	.04	
				112-818	#4-40x1/4" Rd. Hd. (2 used on glass & gasket mtg.)	.03	
				114-80	1/4-20x1-3/8" Hex Hd. M.S. (4 used chassis mtg.)	.05	
				114-358	#6x1/2" Hex Hd. Sl. S. T. (4 used on EQZ model only)	.02	
				165-13	Glides (4 used)	.02	
				188-133	Trim Ring	.35	
				188-134	Trim Ring	.40	
				192-142	Protective Glass	6.00	
				196-166	Rectangular Gasket	4.80	

Diag. No.	Part No.	Description	Suggested List Price	Diag. No.	Part No.	Description	Suggested List Price				
CABINET PARTS H2353EZ & EQZ (cont'd.)											
202-844	Instruction Book		.25	80-828	Cover Return Spring		.07				
202-849	Instruction Book (used on EQZ models)		.30	114-80	1/4-20x1-3/8" Hex Washer	Hd. M.S. (4 used chassis mtg.)	.05				
S-16890	Cabinet Antenna Assembly	1.75		188-133	Trim Ring		.35				
S-17266	Remote Control Assy. (used on EQZ Models only)			188-134	Trim Ring		.40				
S-17267	Hand Control & Cable Assy. (used on EQZ Models only)			192-140	Protective Glass		6.00				
S-17497	Control Cover Assy.	2.50		196-163	Rectangular Gasket		4.80				
S-17510	Frame & Stud Assy.	5.00		202-844	Instruction Book		.25				
S-17511	Cabinet Back Assy. (Complete)	9.50		S-17306	Antenna Terminal & Wire Assembly		.20				
S-17556	Antenna Terminal & Wire Assembly	.25		S-17307	Cabinet Antenna Assy.		1.35				
H2328R & RQ - H2328E - H2329R & RQ - H2352R & RQ - H2353E & EQ											
CABINET PARTS H2328EZ											
11-106	Line Cord & Plug 9 ft. lg.		.80	CHASSIS 23H22							
14-1278E	Cabinet for H2328EZ Table Model			MAIN CHASSIS							
16-665	Packing Carton			Chassis 23H22 is the same as 23H22Z except for the following:							
19-196	Clip (2 used on 188-134)		.03	<u>OMIT:</u>							
24-446	AC Line Cord Plug Cover		.15	94-746 C.R. Tube Support Bushing (2 used)							
43-195	Control Housing		1.10	S-17064 Video I.F. Strip Assy. (Complete)							
46-833	Volume Control Knob		.30	S-17521 C.R. Tube Support & Align- ment Brkt. Assembly							
46-885	Contrast Control Knob		.15								
46-887	Horiz. Hold Knob		.10								
46-889	Channel Selector Knob		.35								
46-893	Brightness Control Knob		.15								
46-895	Fine Tuning Knob		.15								
46-896	Vertical Hold Knob		.10								
49-696	5-1/4" PM Speaker		6.00								
	ZC5093 Cone & Voice Coil		1.73								
54-129	Speed Nut (3 used on 188-134)		.60C								
54-269	#8-32x11/32" Panut (4 used on S-17422)		.01								
56-286	Cover Hinge Pin		.05								
57-1481	Clamping Plate (4 used on S-17422)		.02								
57-1620	Retaining Plate (used on 188-134)		.03								
70-3	#5x1/2" R.H.W.S. Steel N.P. (2 used on S-17306)		.85C								
70-86	#6x5/8" Washer Hd. Wood Screw St. Br. (5 used to Mt. back)		.60C								
70-153	#5x1/4" R.H.W.S. Steel Cad. (2 used on 57-1620)		.01								
72-81	#8x3/4 Phill. Flt. Hd. Wood Screw St. Br. (4 used to mt. S-17307)		.02								
72-90	#4x3/4 Phill. Flt. Hd. Wood Screw St. Br. (4 used on 43-195)		.02								
74-58	Ventilating Screen		1.30								
78-787	Two Contact Socket		.10								
TUBES											
1 - 16TP4											
<u>ADD:</u>											
94-745 C.R. Tube Support Bushing (2 used)											
S-17531 C.R. Tube Support & Align- ment Brkt. Assembly											
S-17635 Video I.F. Strip Assy. (Compl.)											
TUBES											
1 - 17BP4											
For parts on S-17635 refer to page 33.											

<u>Diag. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Suggested List Price</u>	<u>Diag. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Suggested List Price</u>
CABINET PARTS H2328R & RQ							
Model H2328R & RQ is the same as H2328RZ & RQZ except for the following:						<u>OMIT:</u>	
<u>OMIT:</u>						196-166 Rectangular Gasket	
196-163 Rectangular Gasket						<u>ADD:</u>	
<u>ADD:</u>						196-165 Rectangular Gasket	
196-157 Rectangular Gasket						CABINET PARTS H2353E & EQ	
CABINET PARTS H2329R & RQ							
Model H2329R & RQ is the same as H2329RZ & RQZ except for the following:						Model H2353E & EQ is the same as H2353EZ & EQZ except for the following:	
<u>OMIT:</u>						<u>OMIT:</u>	
196-166 Rectangular Gasket						196-166 Rectangular Gasket	
<u>ADD:</u>						<u>ADD:</u>	
196-165 Rectangular Gasket						196-165 Rectangular Gasket	
CABINET PARTS H2352R & RQ							
Model H2352R & RQ is the same as H2352RZ & RQZ except for the following:						CABINET PARTS H2328E	
						Model H2328E is the same as H2328EZ except for the following:	
						<u>OMIT:</u>	
						196-163 Rectangular Gasket	
						<u>ADD:</u>	
						196-157 Rectangular Gasket	

Prices shown are suggested list prices, and are subject to change without notice.

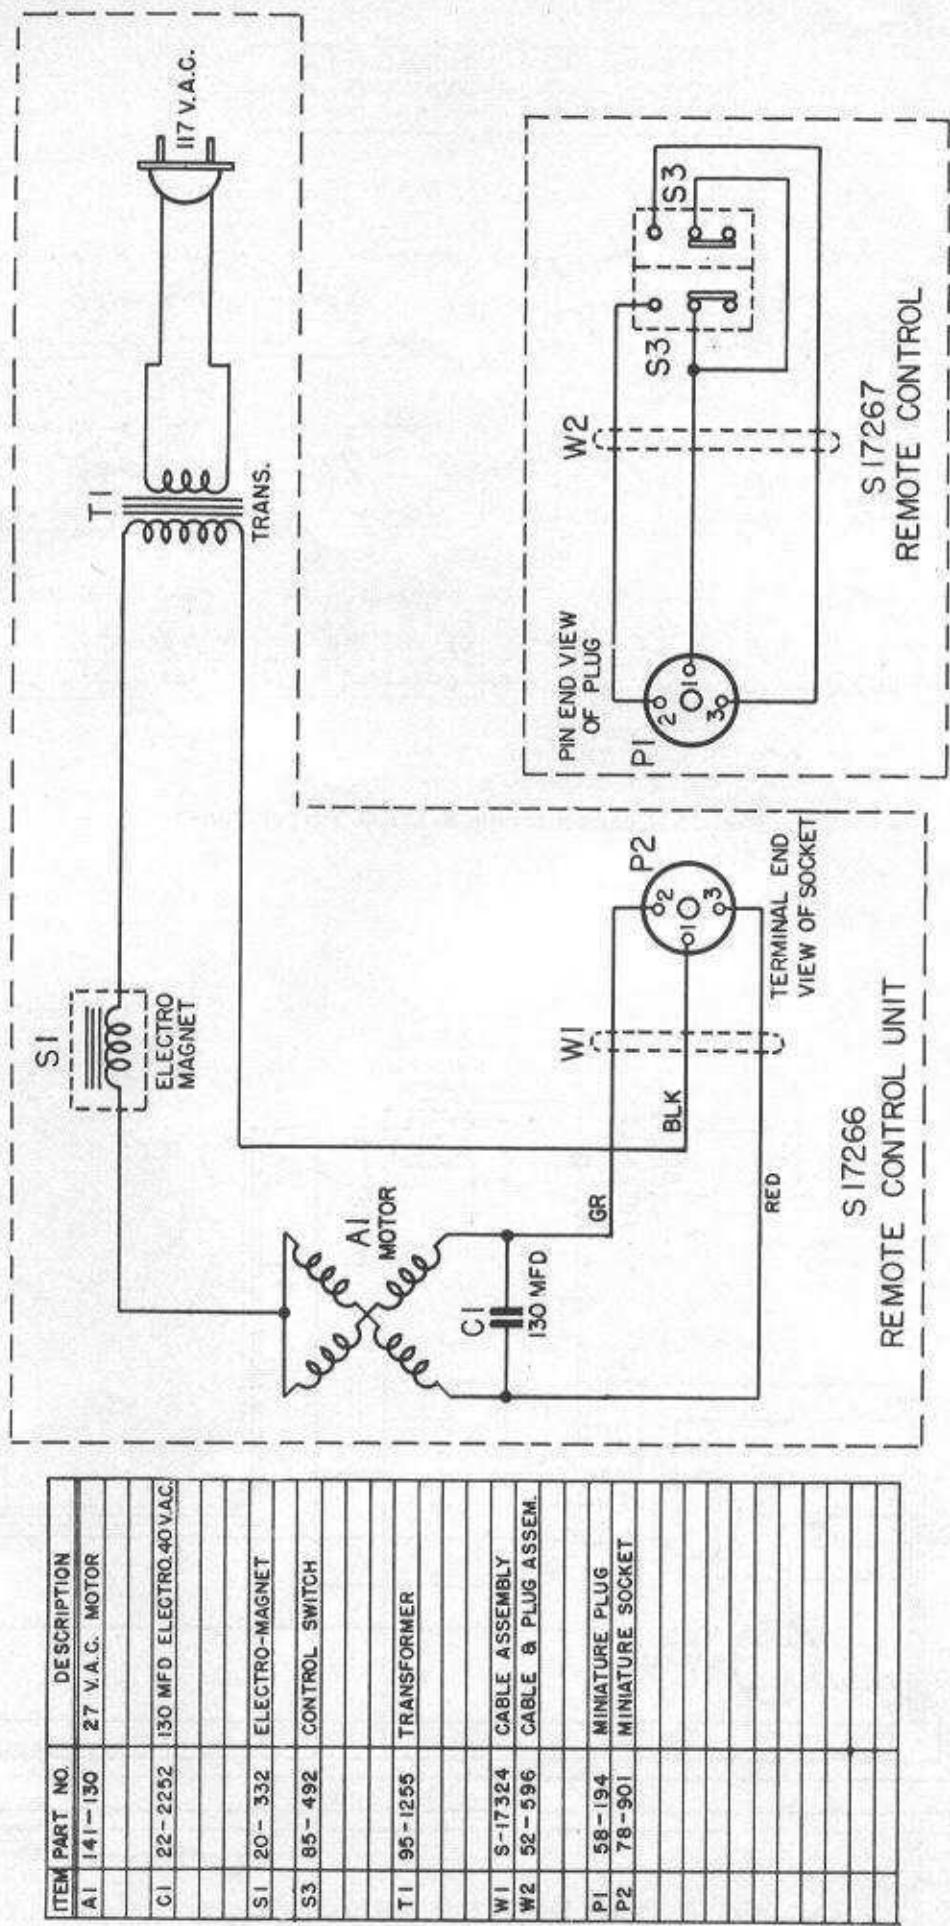


Fig. 14 Schematic Diagram Remote Control Tuner.




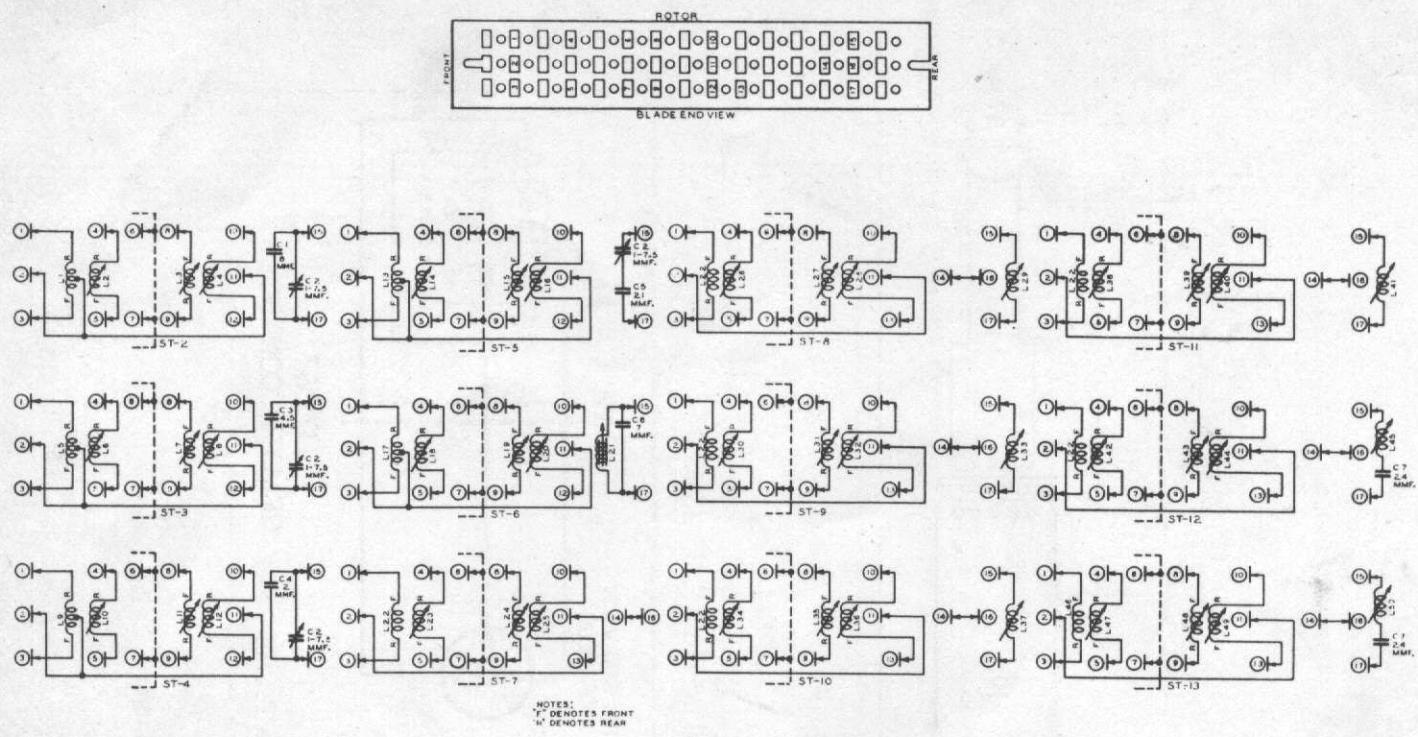



Fig. 15 Channel Strips S-17100 Turret Tuner.

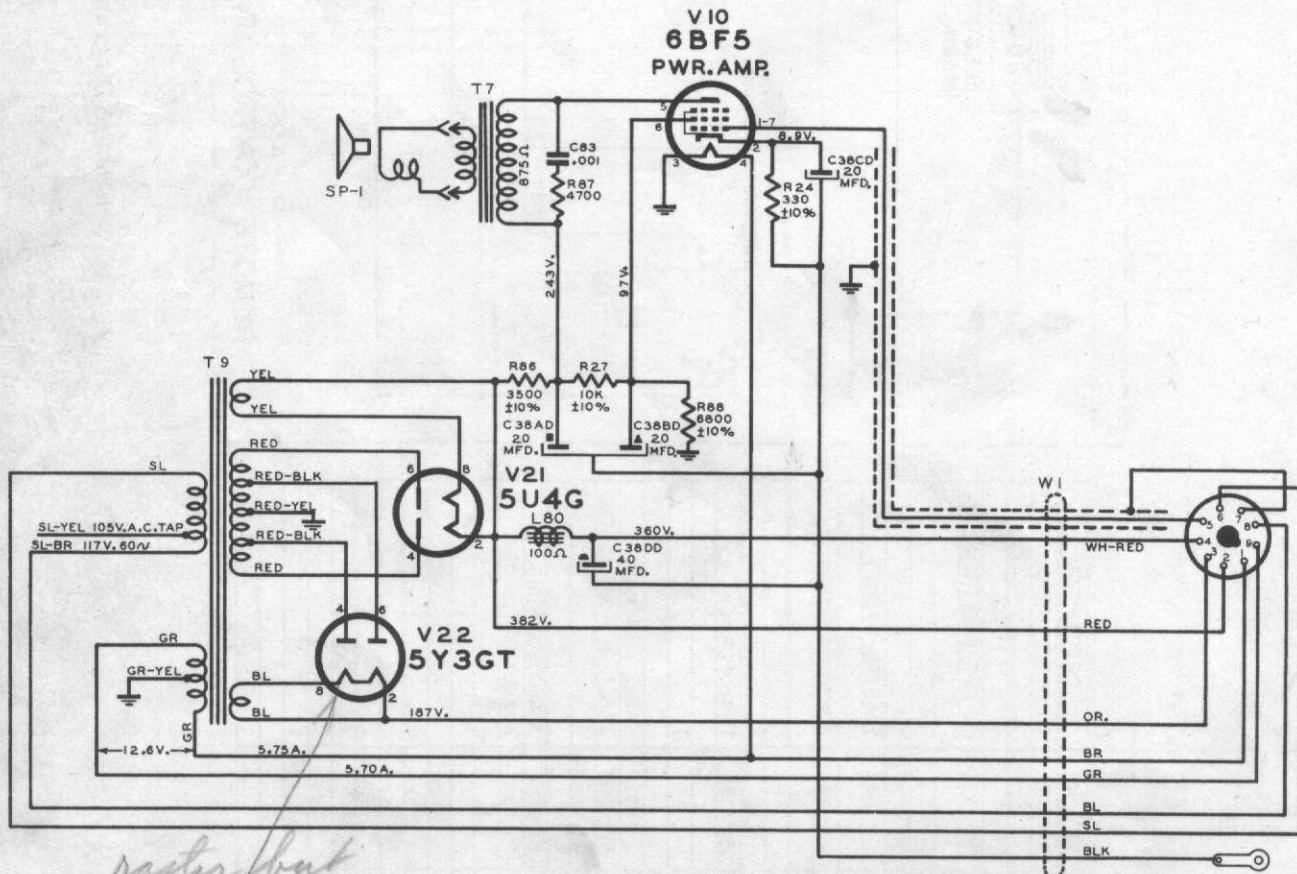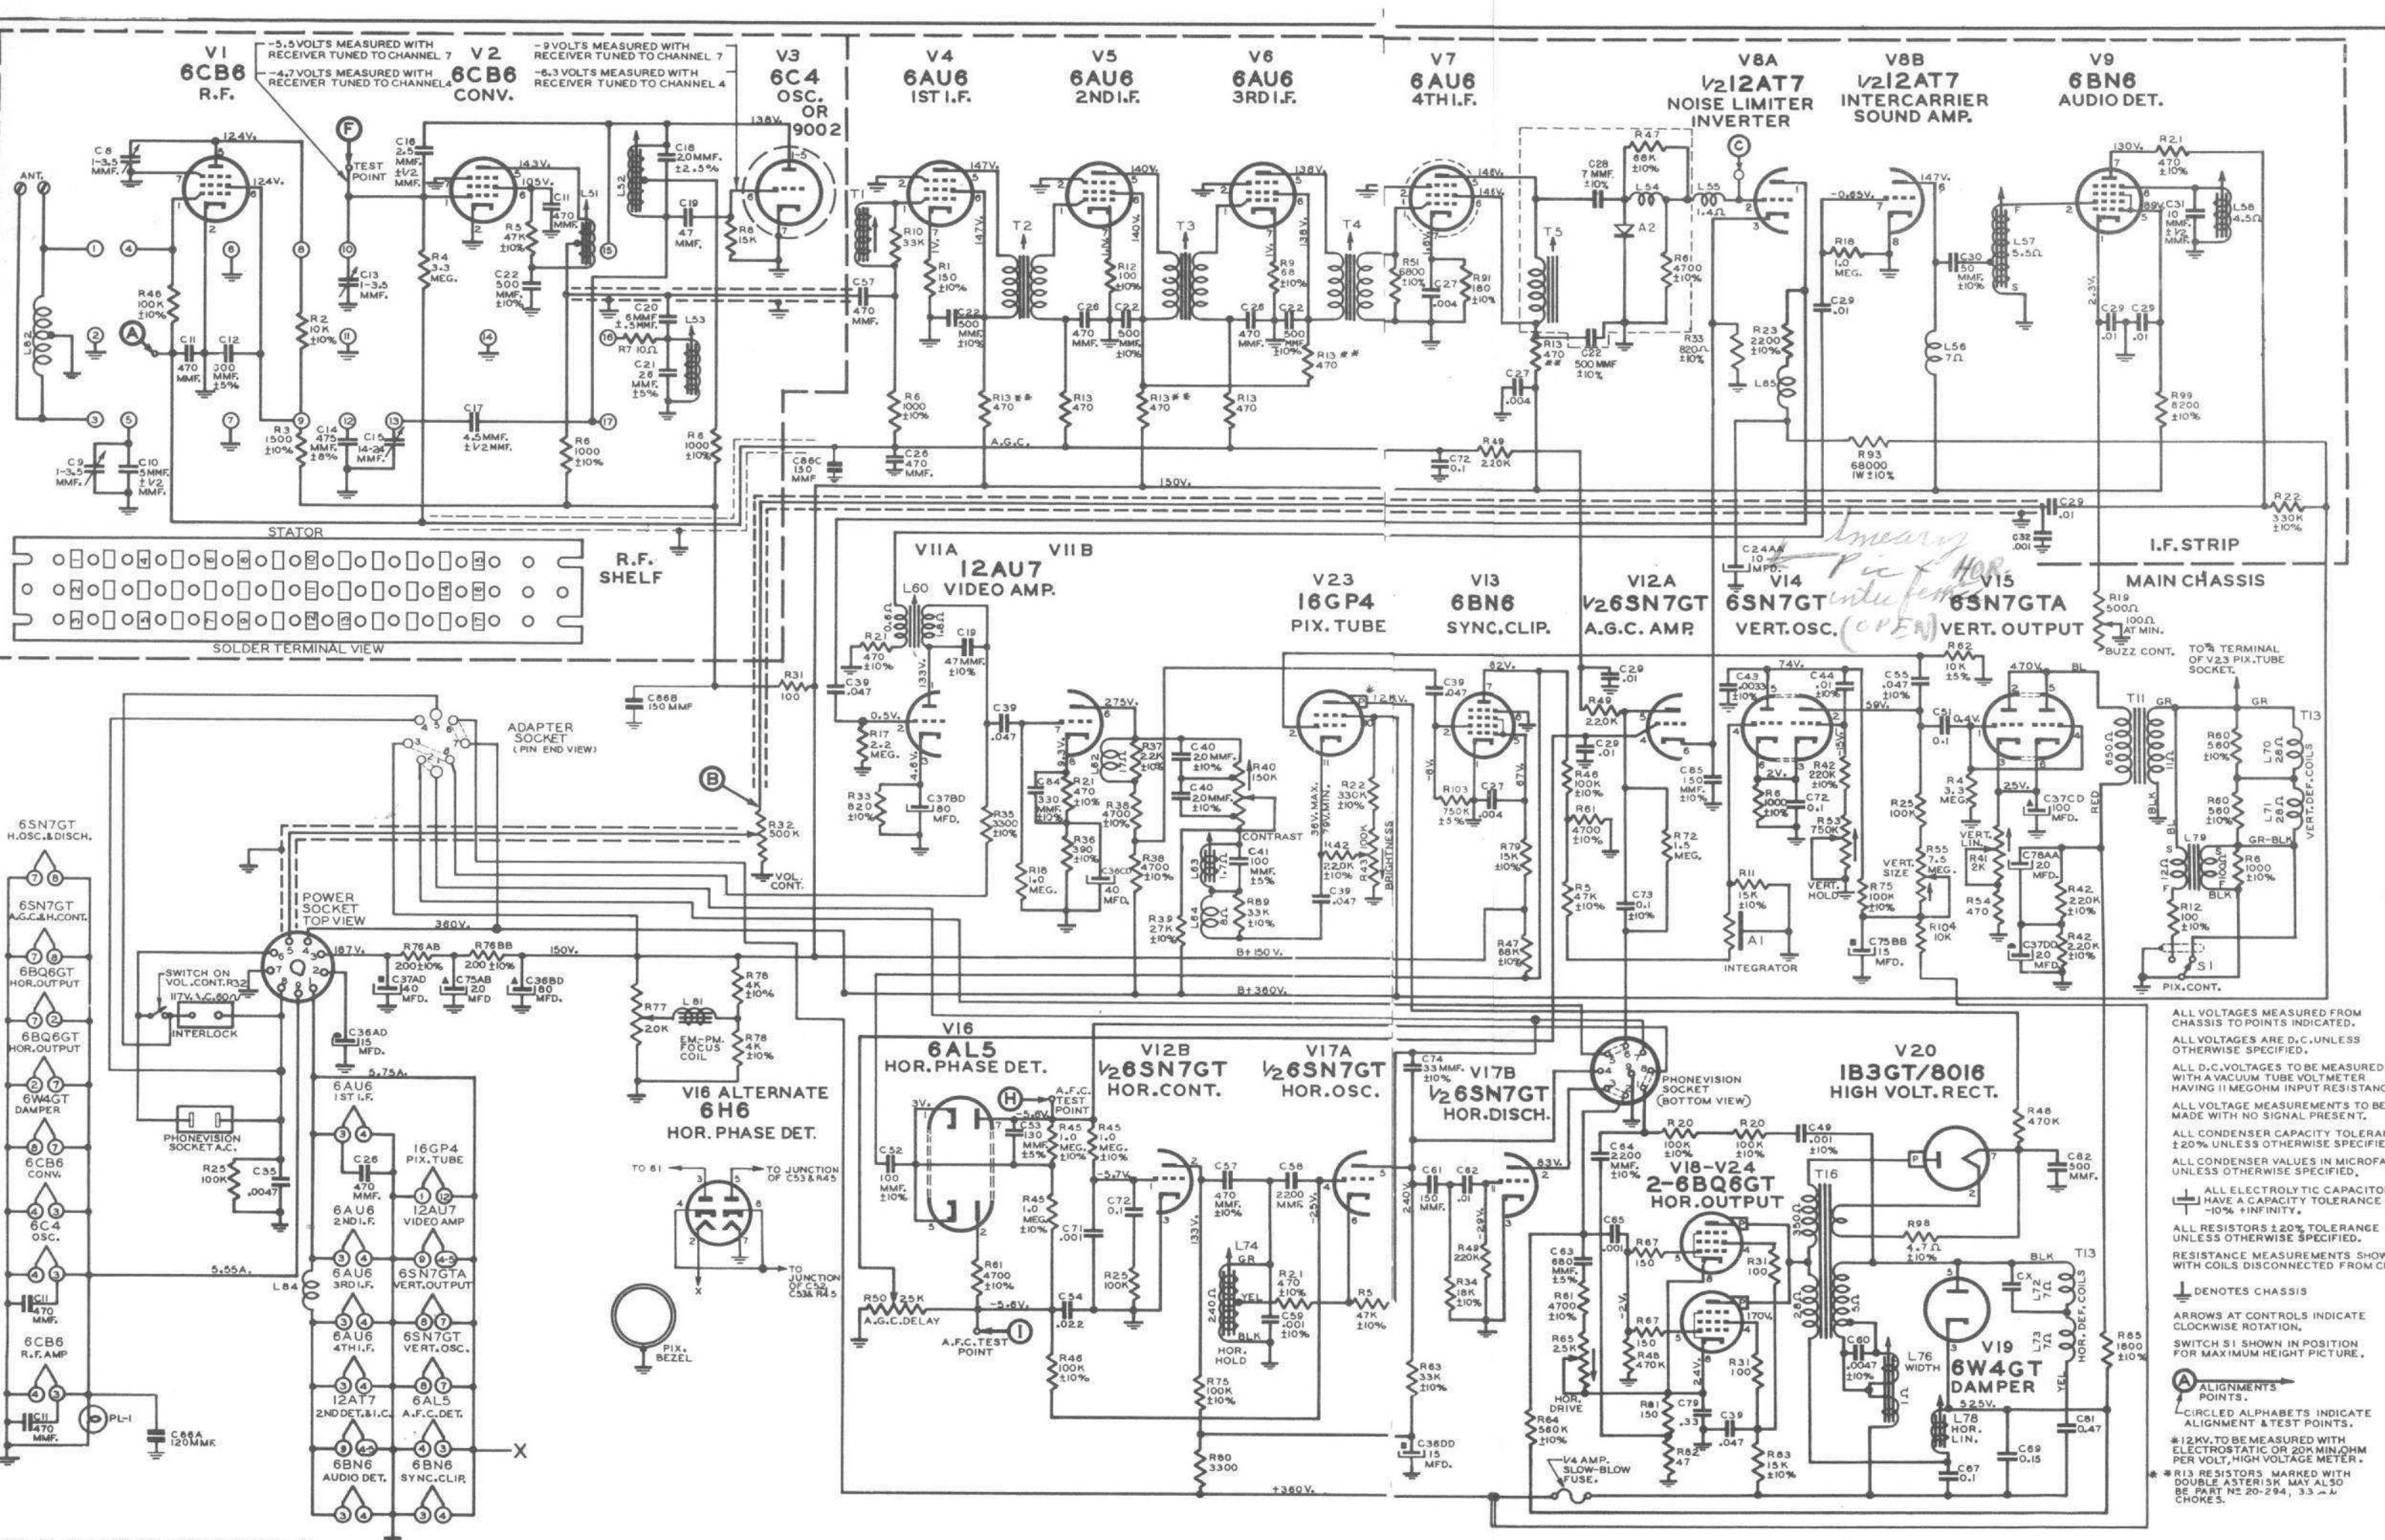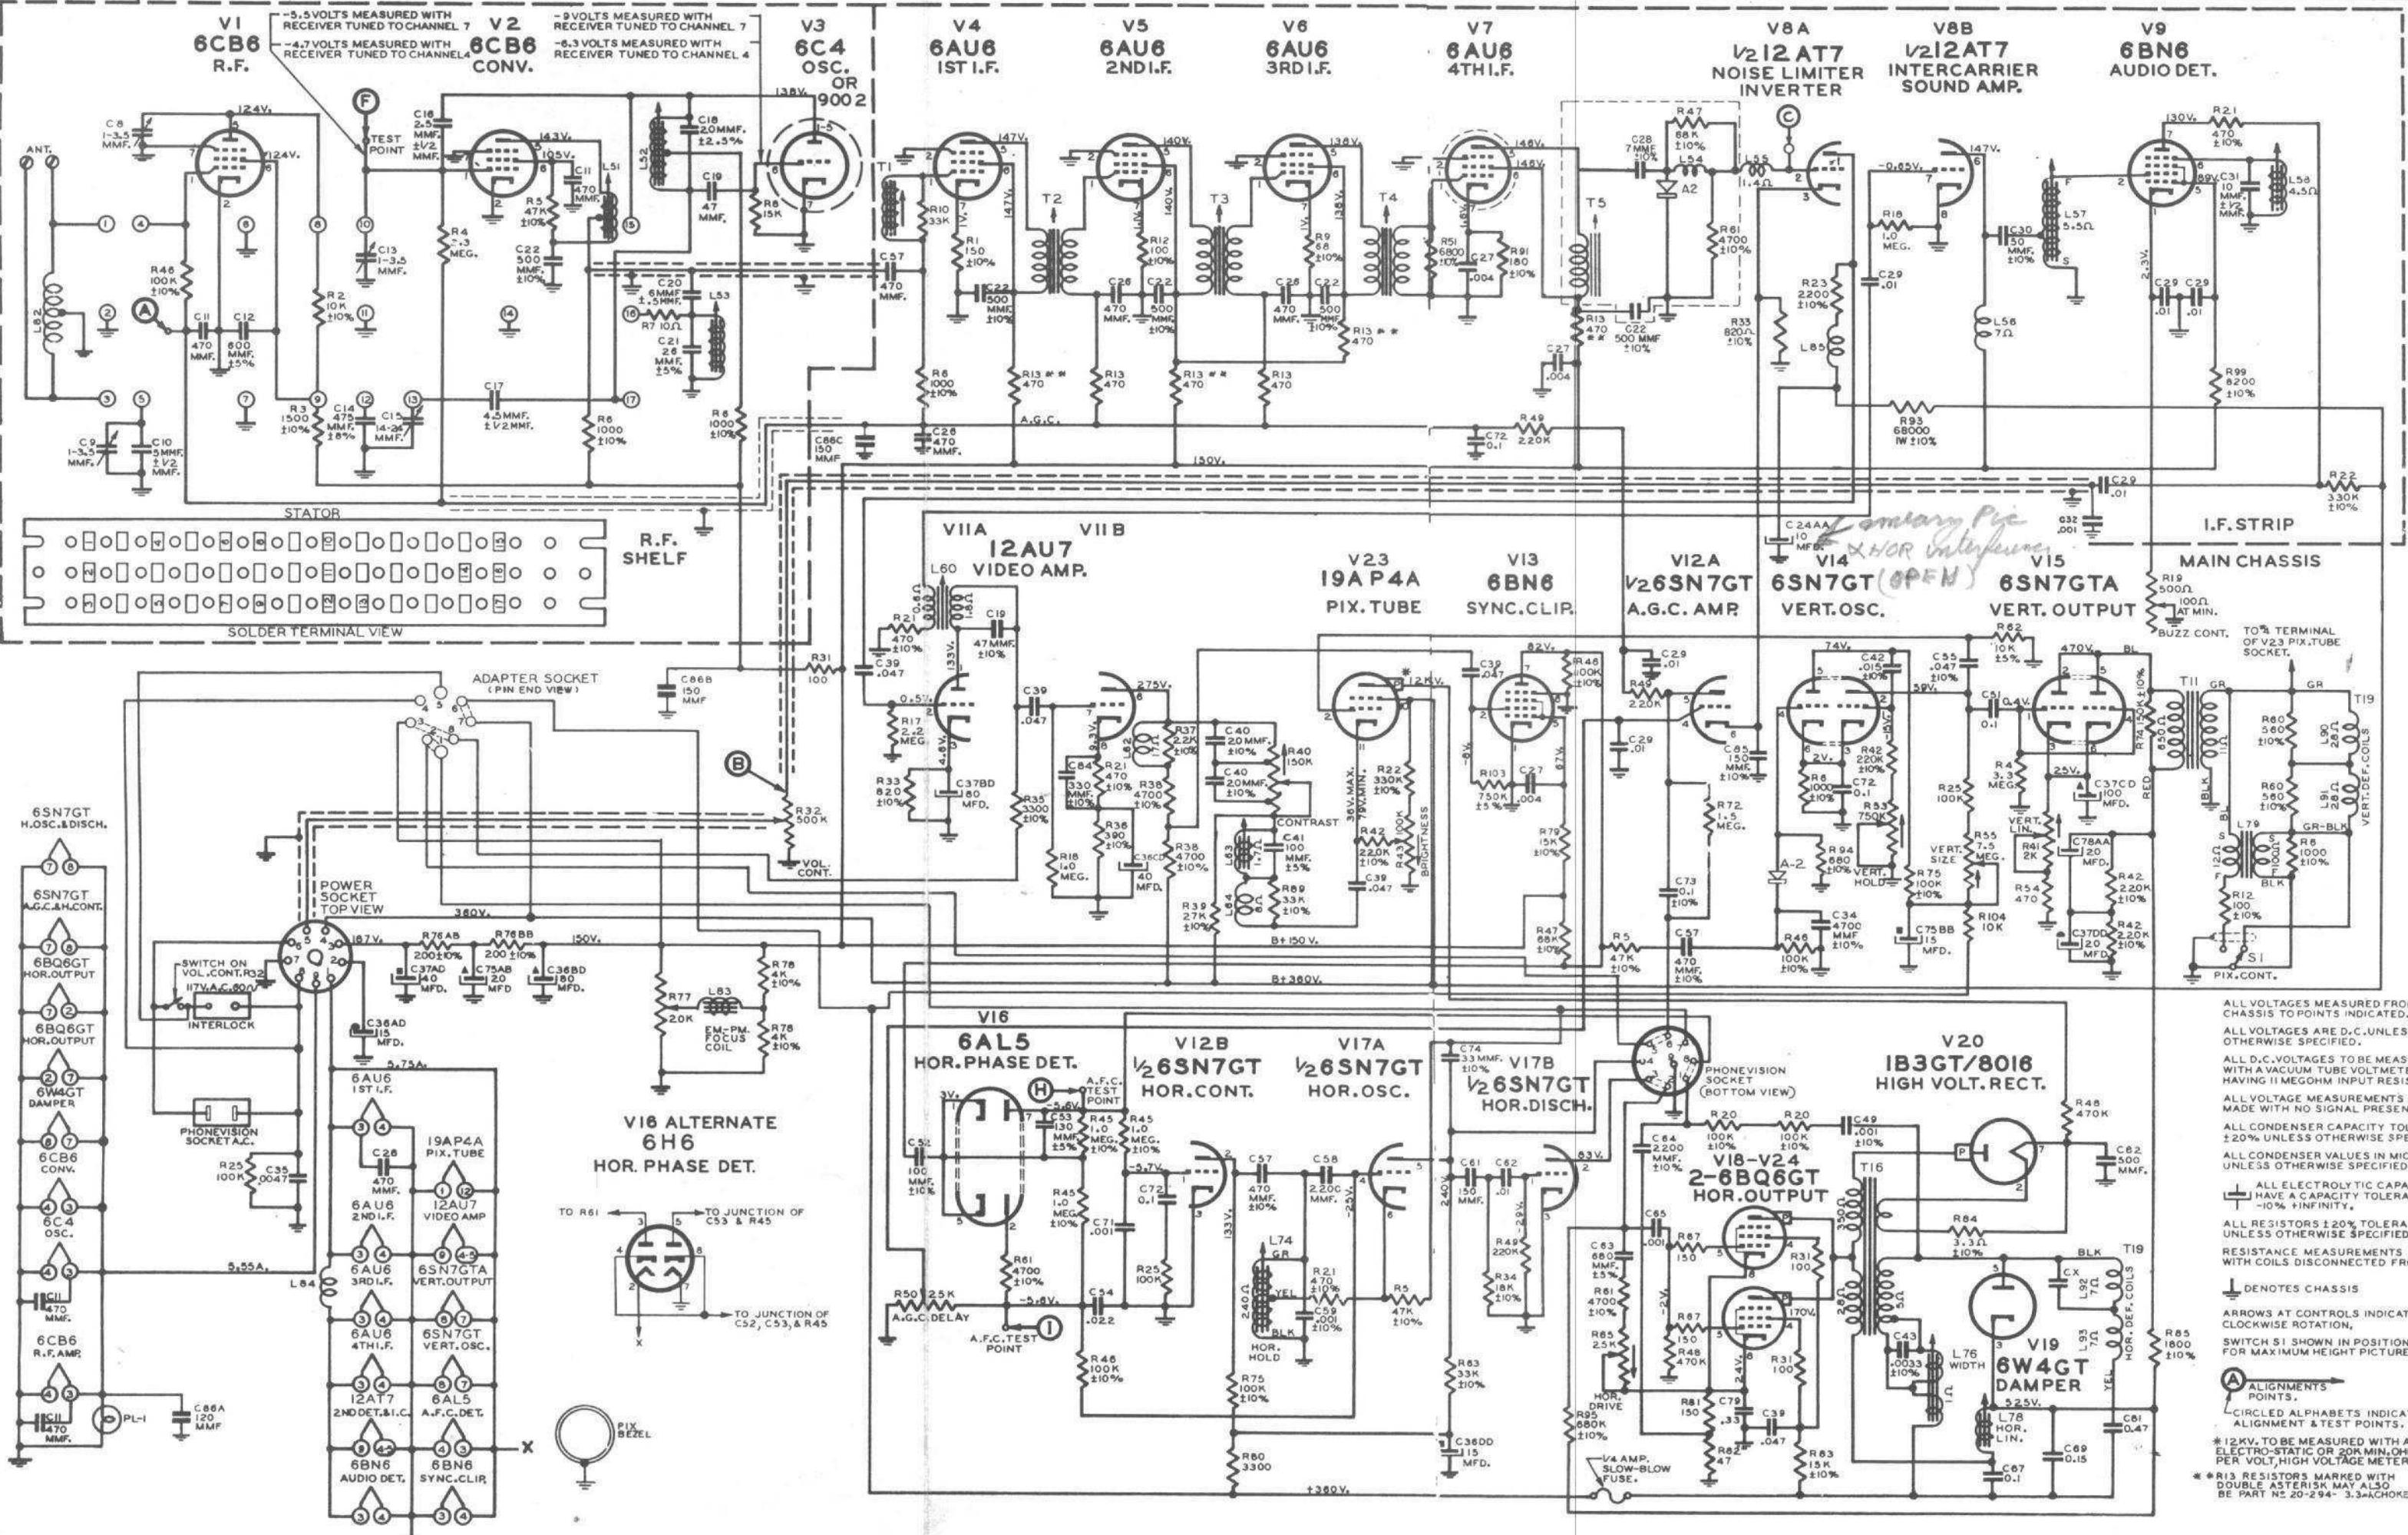

no pic or sound Fig. 16 Power Supply For 24H20-21 Chassis.





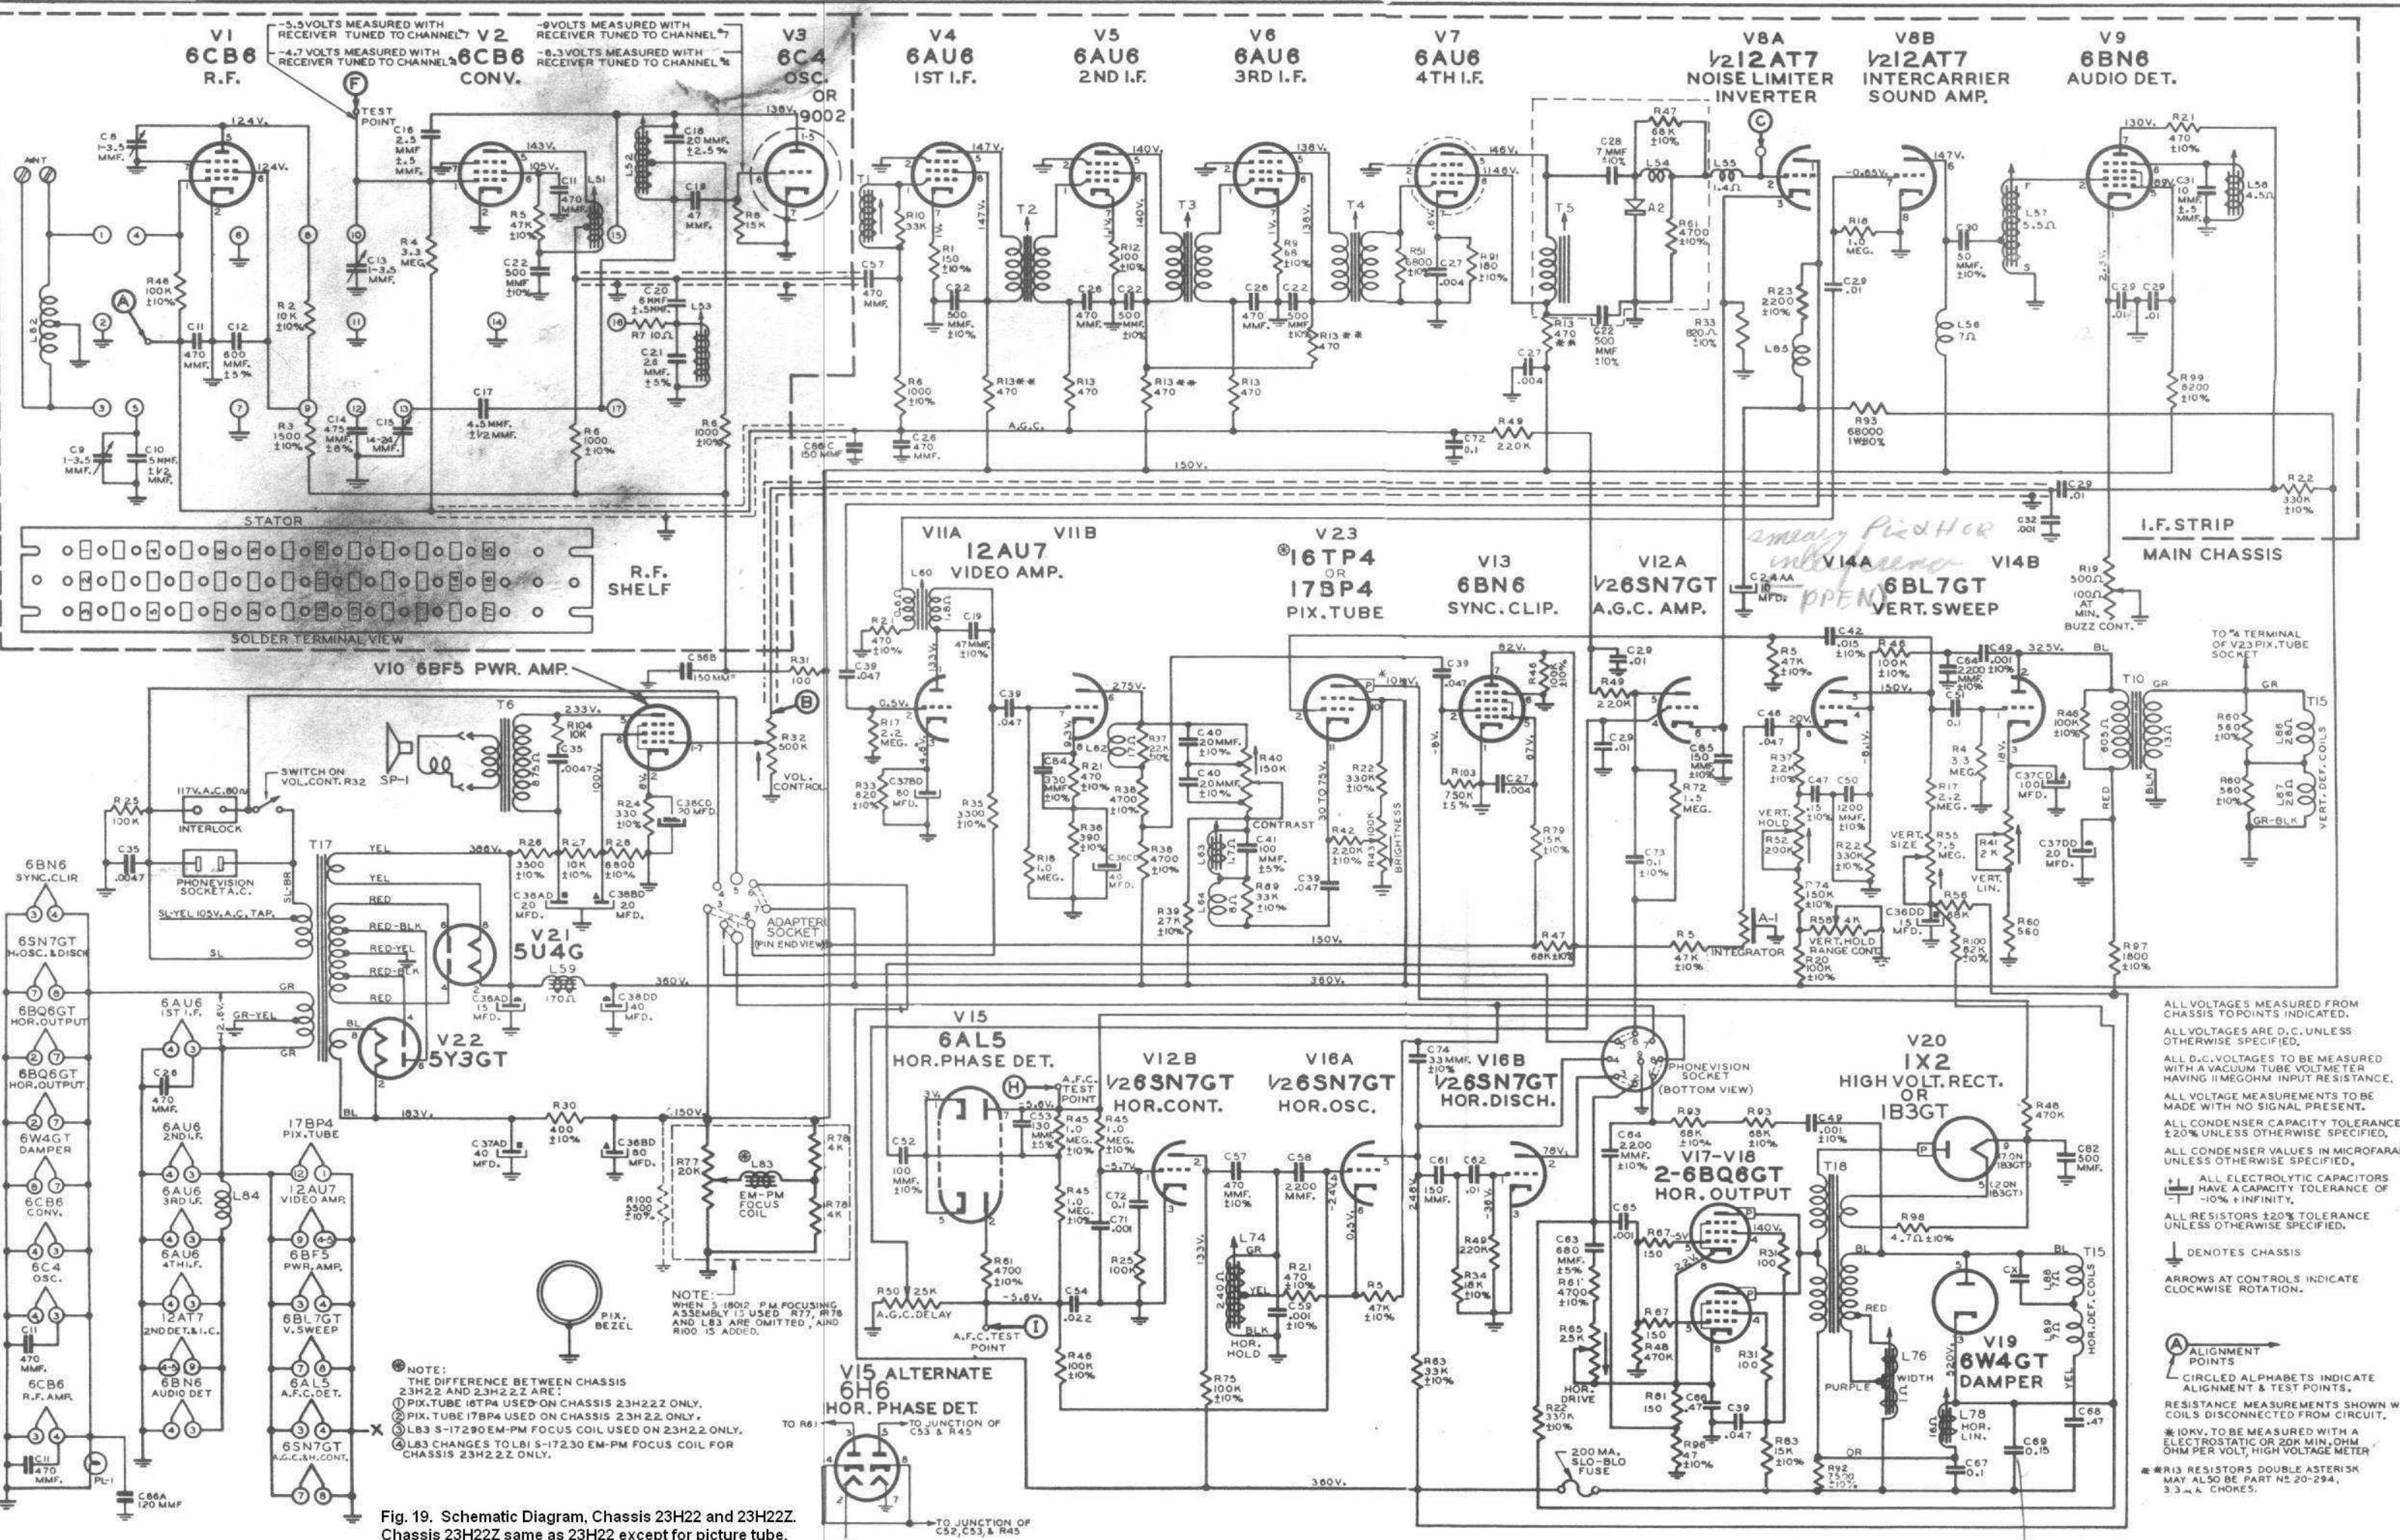


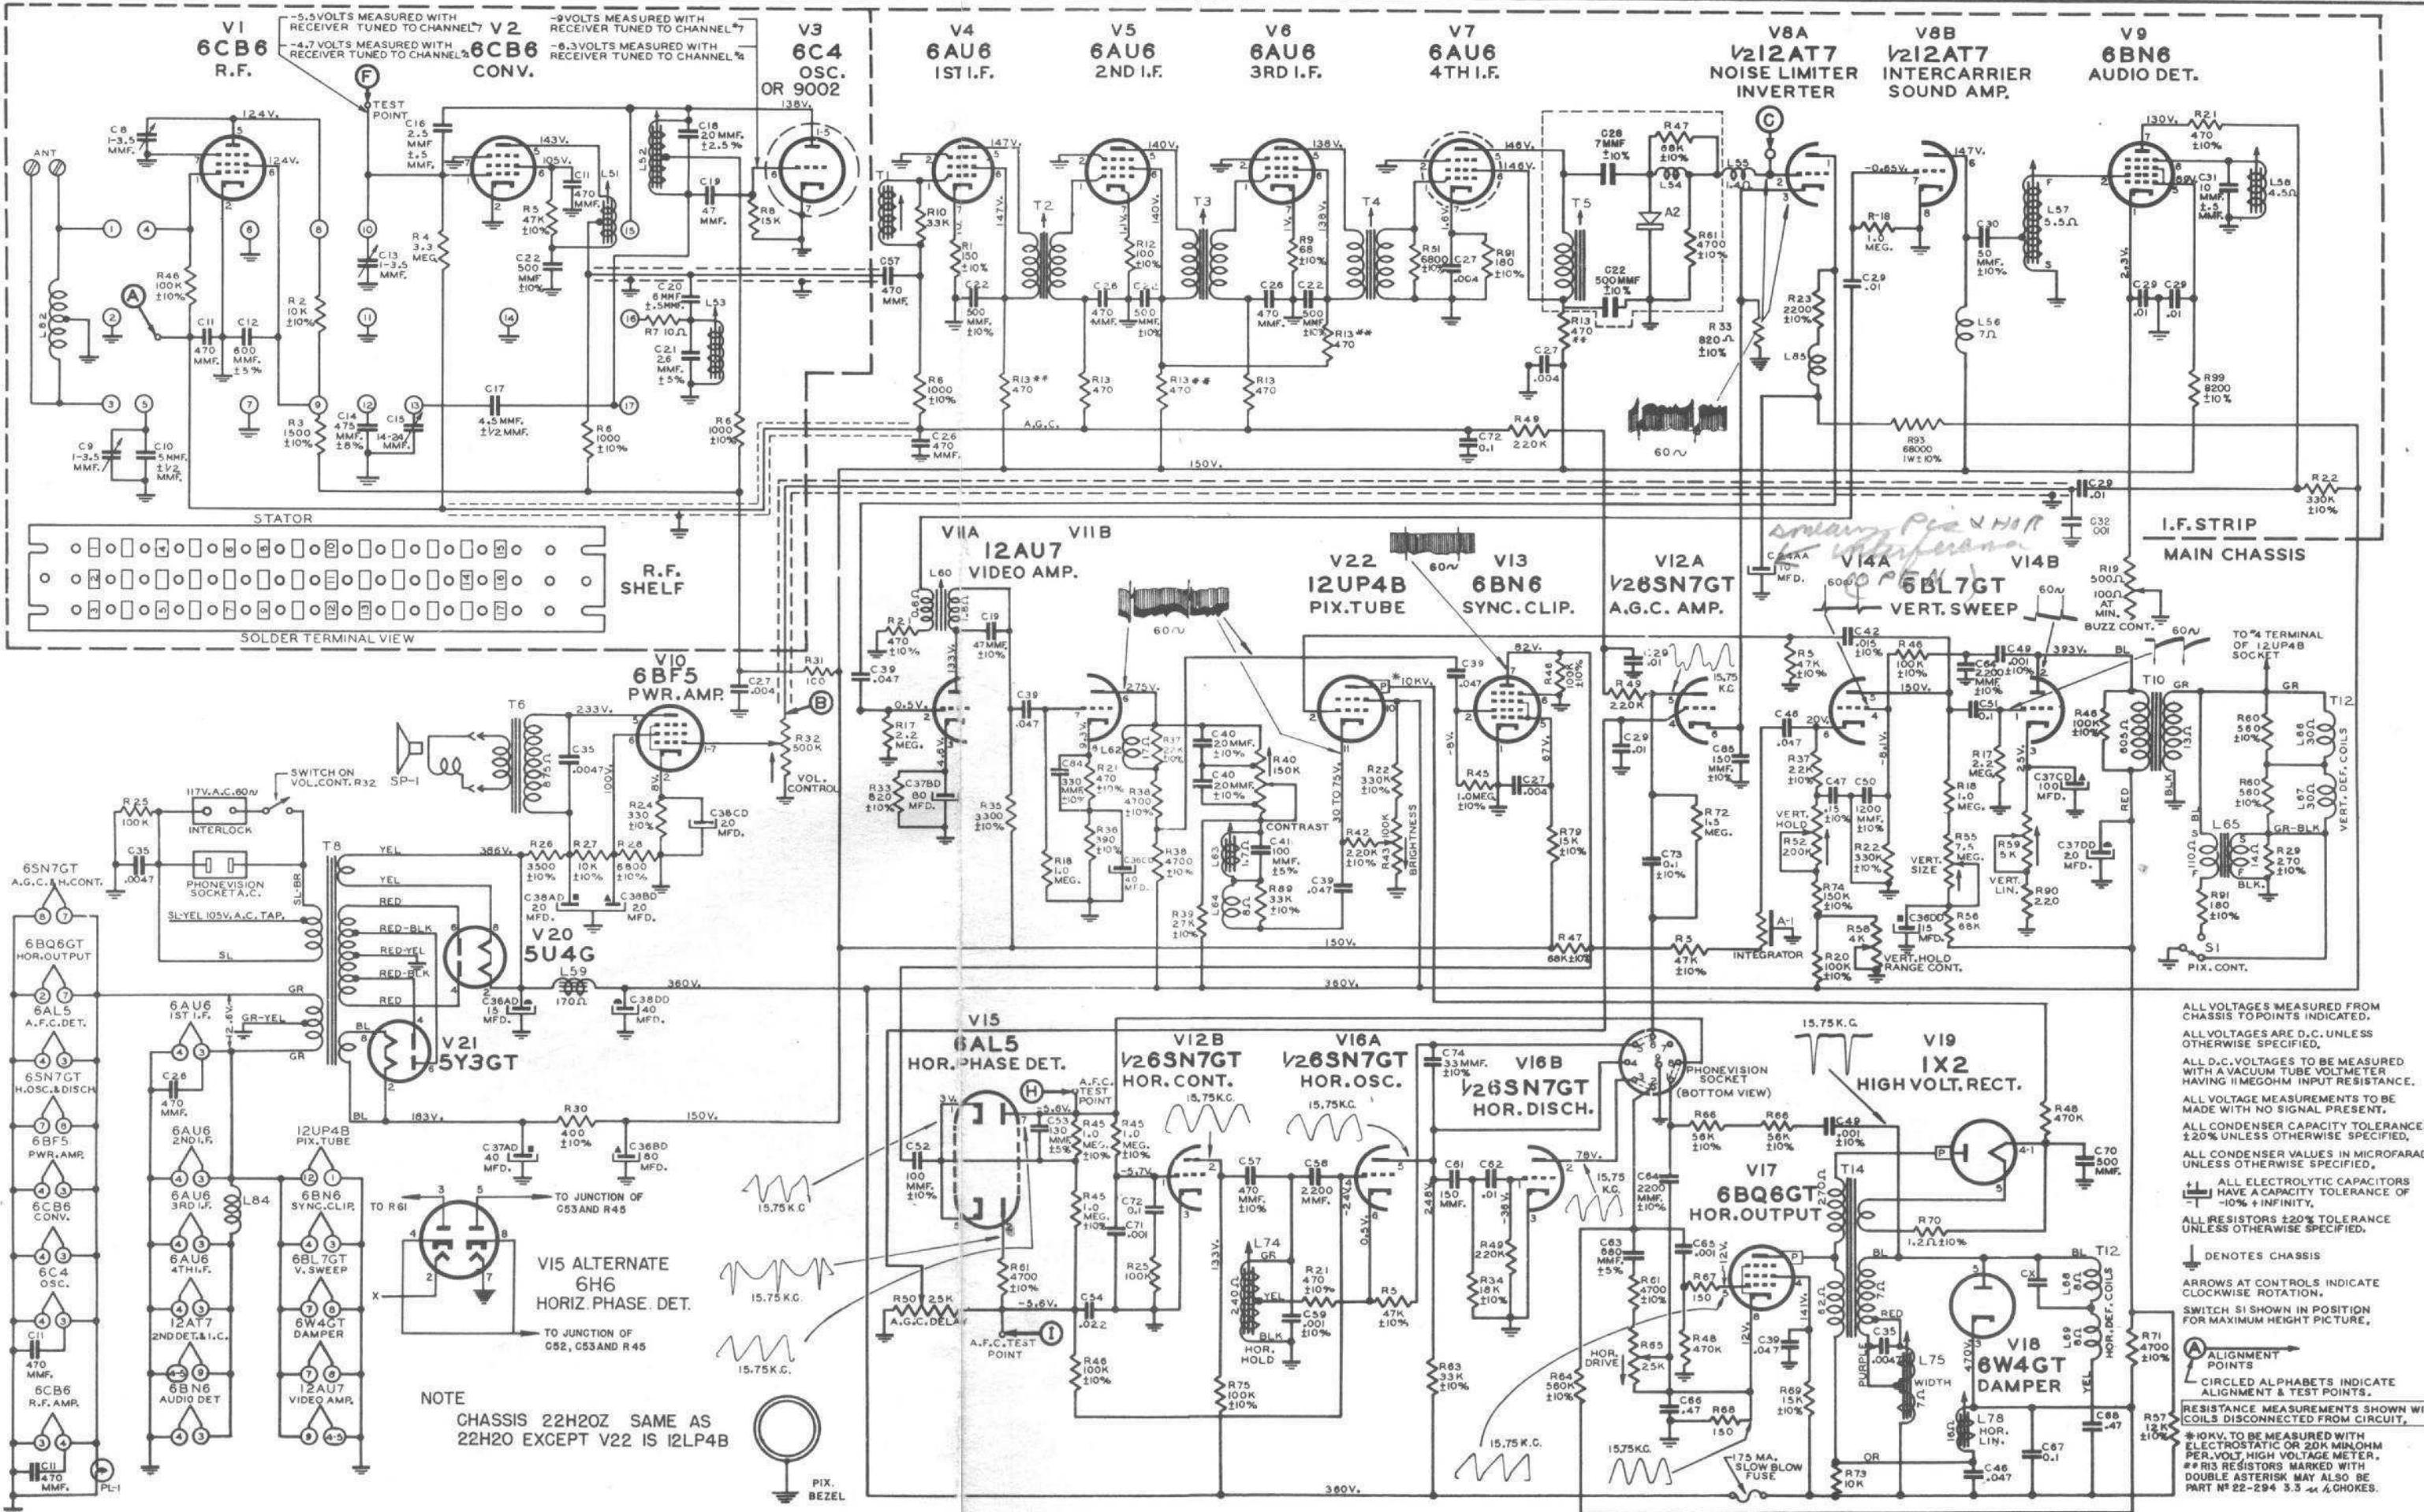


Fig. 20 Schematic Diagram 22H20 Chassis (Wave Forms Shown Also Representative For 23H22, 24H20 and 24H21)

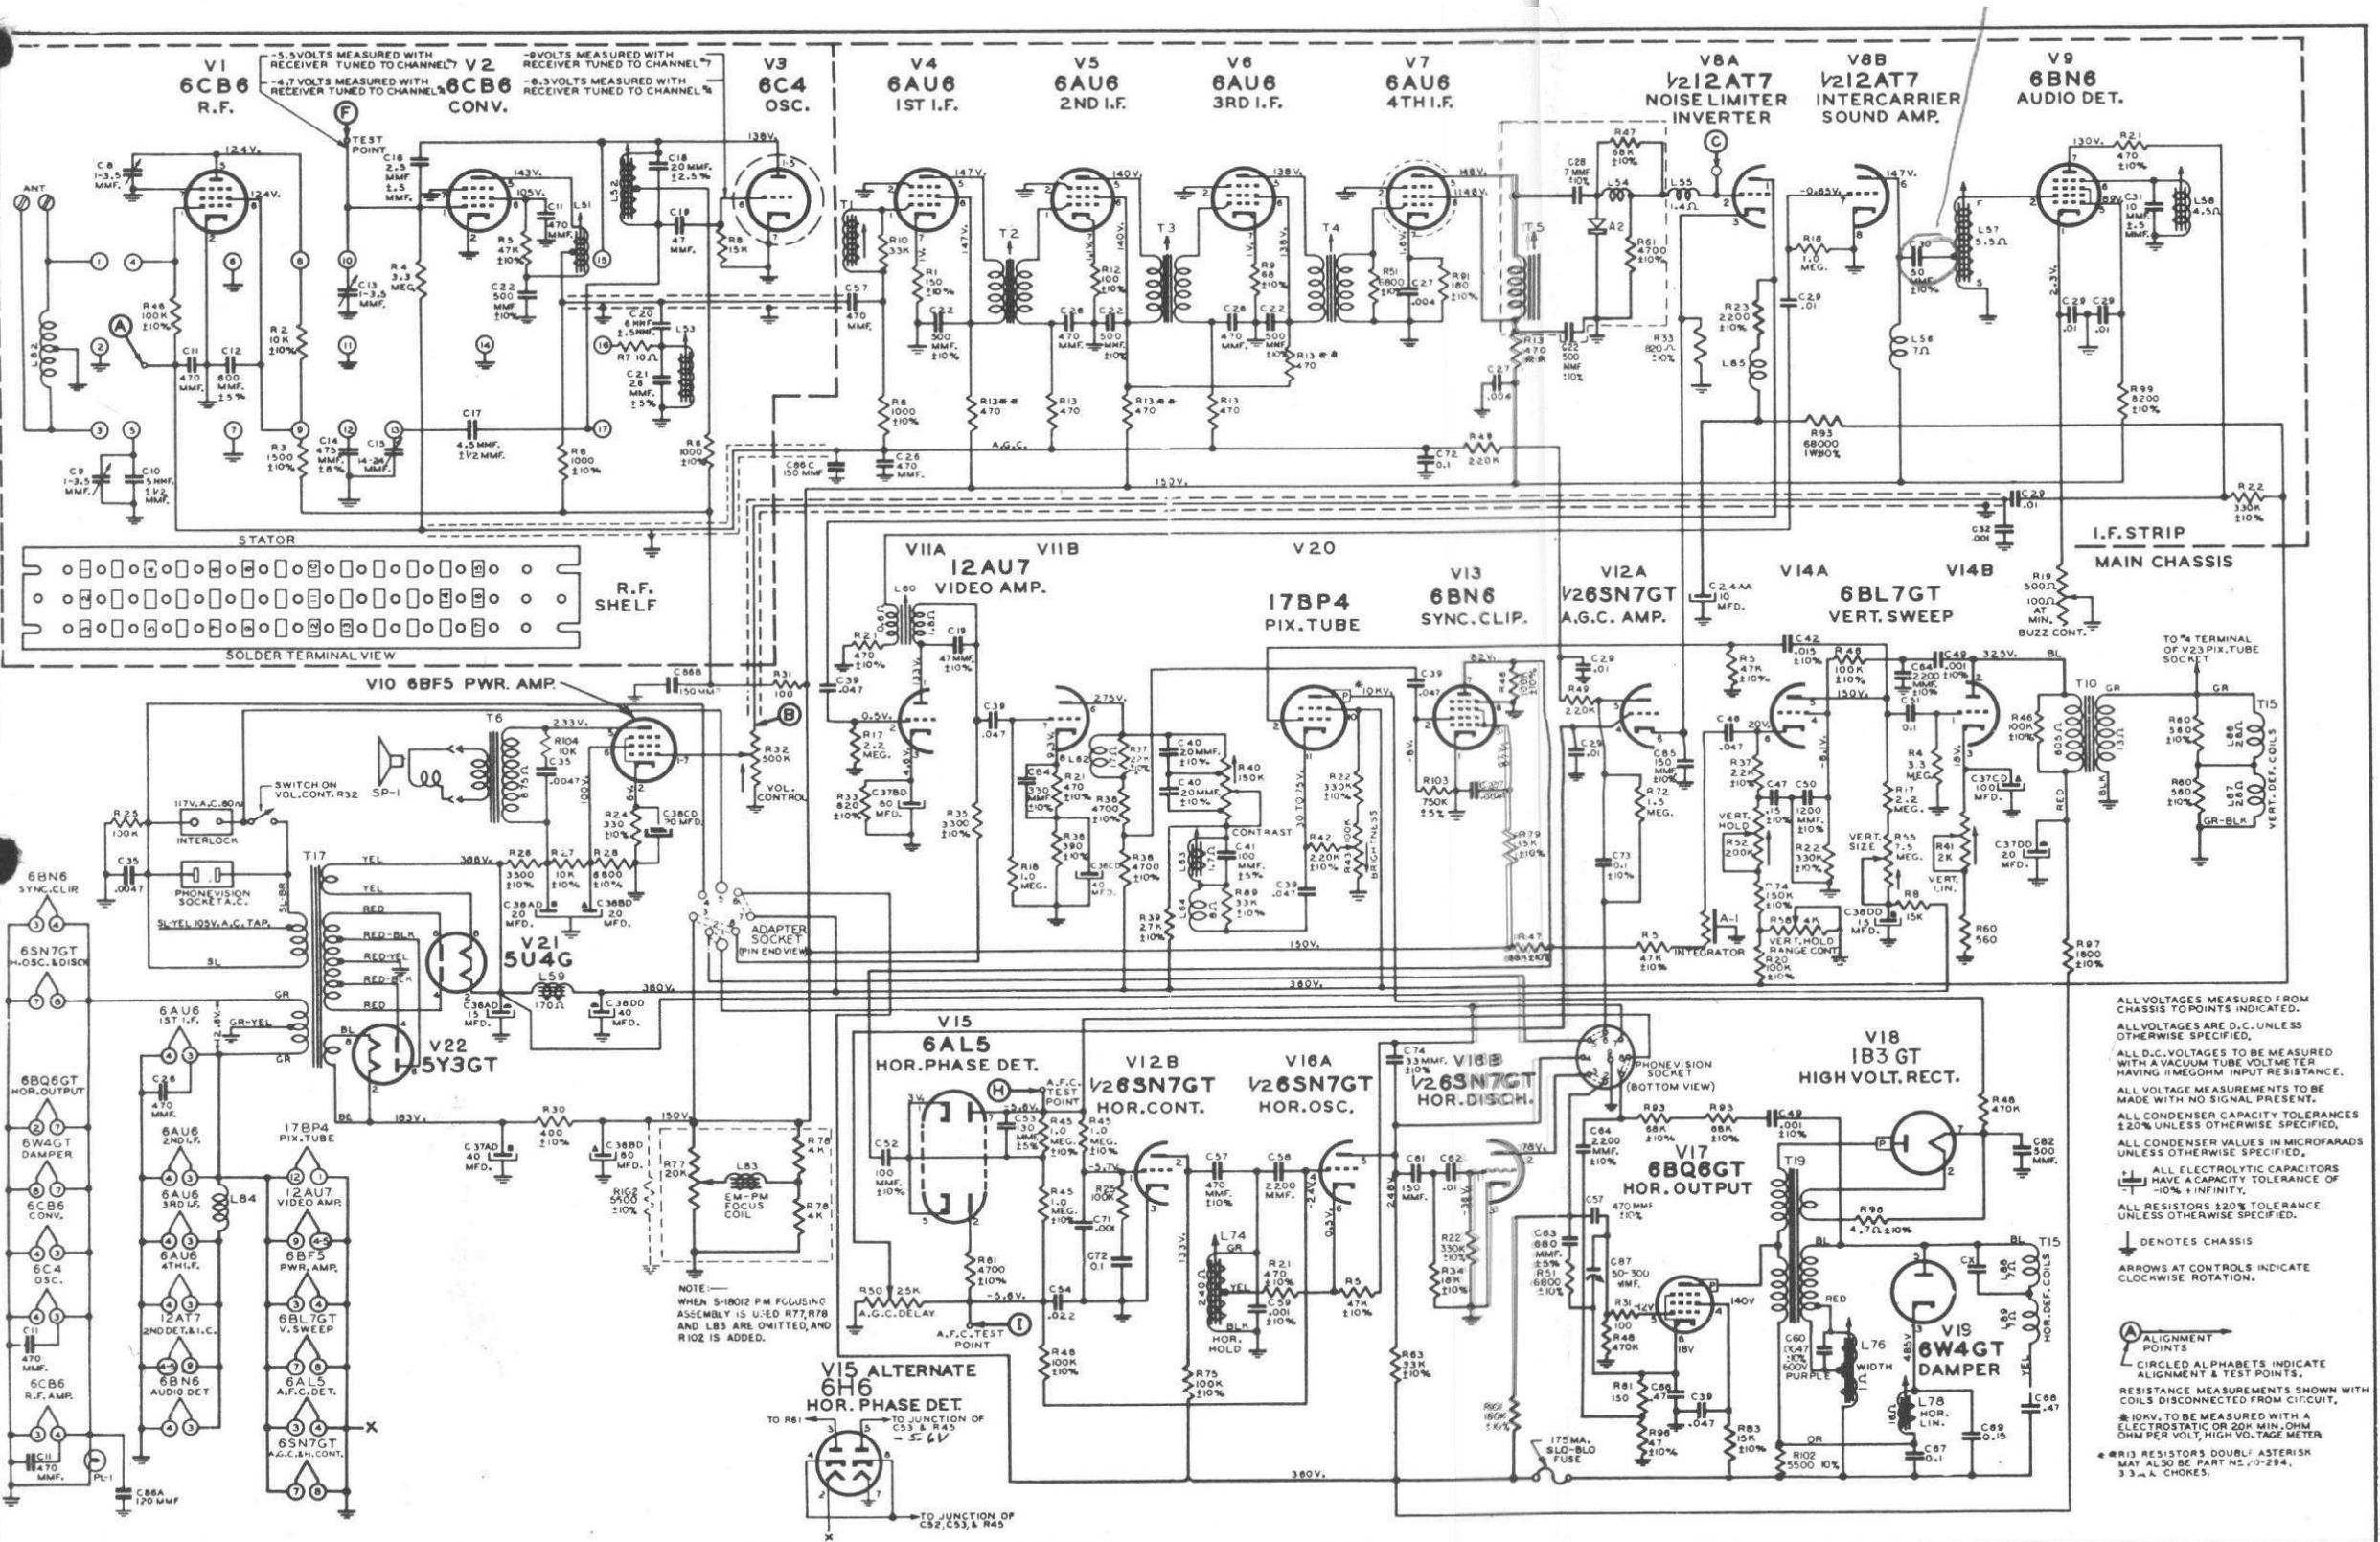

22H21 CHASSIS

MODELS

H2229R	H2241R	H3068R
H2230R	H2252R	H3273E
H2230E	H2253E	H3274R

The 22H21 chassis is similar to the 23H22 chassis described in Service Manual TV-7A except for the use of a single 6BQ6GT in the horizontal sweep output circuit and the addition of a new PM focus and centering assembly. This assembly is quite similar and operates on the same principle as the unit originally used in the 22H20 chassis.

Component parts used in the 22H21 chassis are the same as for the 23H22 chassis with the following exceptions:

OMIT:		
22-1851	.001 Mfd. (Molded)	1000V
54-139	3/8-32x9/16 Hex Palnut (used on 63-1675)	
63-1675	Horizontal Drive Control	
63-1744	100 ohm 1/2W 20% Ins. Res.	
63-1751	150 ohm 1/2W 20% (2 used)	" "
63-1813	4700 ohm 1/2W 10%	" "
63-1883	220K ohm 1/2W 10%	" "
63-2017	4000 ohm 5W 10% WW	" "
63-2333 or 3065	(or 63-2333 or 3065)	
63-2099	Focus Control	
63-2343	7500 ohm 10W 10% WW	" "
78-755	(Replaced 63-2145 or 2022 or 3066)	
80-824	Octal Tube Socket	
136-20	Tube Plate Connector Spring	
S-17435	Fuse	
S-17861	Horizontal Sweep Trans. Assembly	
	Mechanical Centering & Focus Assem. (or alt. S-17230)	

6BQ6GT Tube

ADD:			
C57	470 Mmfd. (Molded) Mica	500V	.20
22-1138	.0047 Mfd. (Molded)	600V	.26
C60	Single Section Trimmer (or 22-2312)		
C87	22-2291		
R51	63-1820	1800 ohm 1/2W 10% Ins. Res.	.21
R101	63-1880	180K ohm 1/2W 10%	.21
R102	63-3136	5500 ohm WW 10W 10%	
	(or 63-2358)		
80-744	Focus Mtg. Spring (used with S-17290)	.02	
80-869	Focus Mtg. Spring (used with S-18012)	.25	
136-21	Fuse		
S-17290	Mechanical Centering & Focus Assy. (or alt. S-18012)		
T19	S-17927	Horiz. Sweep Trans. Assem.	6.00

Cabinet Parts

H2229R is the same as H2329R
 H2230R is the same as H2330R
 H2230E is the same as H2330E
 H2241R is the same as H2341R
 H2252R is the same as H2352R
 H2253E is the same as H2353E
 H3068R is the same as H3168R
 H3273E is the same as H3373E
 H3274R is the same as H3374R

Schematic Diagram 22H21 Chassis. 22H22 Chassis Same as 22H21 Except for 20CP4 or 20DP4 Picture Tube and Mounting

SERVICE DATA "H" SERIES TV RECEIVERS

CHASSIS 22H20Z

The 22H20Z chassis is identical in all respects to the 22H20 with the exception that a 12LP4B glass picture tube is used in place of the 12UP4B metal tube, resulting in the small differences in mounting outlined below.

Part

No.

Description

Price

OMIT:

19-207	C.R. Tube Mtg. Clip	
80-838	C.R. Tube Retaining Spring	
S-17409	Insulator Strip & Terminal	
S-17428	Anode Lead & Eyelet Assembly	
12UP4B	Picture Tube	

ADD:

19-177	Anode Clip	.15
22-4	.004 Mfd. Ceramic Disc. (or 22-1706) 500V	.26
57-1692	Strap Clamping Plate (2 used)	.02
80-841	Ground Spring	.10
82-27	C.R. Tube Retaining Strap	.50
83-1879	Rubber Strip (C.R.T.)	.60
114-201	#8 x 5/16 Hex Hd. S.T. (2 used on ea. 57-1692)	.75C
S-17447	Anode Clip & Wire Assembly	.30
S-17773	Strip & Gasket Assembly	2.50
12LP4B	Picture Tube	

DEFLECTION YOKE REPLACEMENT

All deflection yoke replacements can be affected on "H" series receivers with 95-1241 and 95-1246 yokes. The 95-1241 is to be used on the 22H20 and 22H20Z chassis; the 95-1246 on the 22H21, 23H22, 23H22Z, 24H20 and 24H21 chassis.

VERTICAL INSTABILITY

Vertical instability may be caused by one or more of the following:

1. Poor grounds caused by loosely riveted tube socket saddles and terminal strips. This difficulty may be corrected by soldering these returns to chassis.

2. Leakage between heater and grid of 6CB6 or 6AU6 tube. When this occurs, the composite video signal as viewed on an oscilloscope screen, shows presence of hum.

3. Intermittent or open electrolytic capacitors which introduce hum in the detector output.

4. Breakdown in deflection yoke.

5. Defective integrating network.

6. Intermittent or noisy vertical linearity or vertical size control or other components in the vertical multivibrator circuit, particularly C47.

7. AGC advanced too high causing sync pulse compression.

In noisy areas, replace the 1 megohm 6BN6 sync clipper grid resistor with a 63-1906 750K ohm 1/2W 5%.

For improvement of vertical synchronization in fringe areas, see page 12 of Service Manual TV-7A.

REPLACING HORIZONTAL SWEEP TRANSFORMERS

When replacing horizontal sweep transformers, it cannot be over emphasized that great care must be exercised in dressing the leads to avoid arcing and consequent repeat failure. It is recommended that note be made of original factory installation and lead dressing be patterned accordingly.

When adjusting picture width on the receiver, after the transformer replacement has been made, the horizontal drive control setting is not to be advanced any more than absolutely necessary to affect proper width and focus.

Prices shown are suggested list prices and are subject to change without notice.

ZENITH RADIO CORPORATION
Service Division
6001 Dickens Avenue
Chicago 39, Illinois, U.S.A.



Form TV-7B
2½M 3/10/52

Printed in U.S.A. r.r.