



COMMUTATORE  
POS. ASST. SINCR.

1	I	I
2	I	E
3	I	F
4	F	
5	E	

A - AMPL V  
B - AMPL O  
C - SINCR. ASS. T  
D - FREQ. Hz  
E - FREQ  
F - SINCR.  
F - FUOCO  
H - INTENSTÀ  
I - CENTR. V  
L - CENTR. O