The FISK RADIOLA MODEL 160

Five Valve, Medium Wave, A.C. Operated

Superheterodyne

TECHNICAL INFORMATION AND SERVICE DATA



THE FISK RADIOLA, MODEL 160

Five Valve, Medium Wave, A.C. Operated, Superheterodyne TECHNICAL INFORMATION

Electrical Specifications

TUNING RANGE	Alignment Frequencies						
"Standard Medium Wave"1500-550 K.C.	"Standard Medium Wave"1400 K.C.						
Intermediate Frequency	460 K.C.						
Power Supply Rating	200-260V., 50-60 C.						
(Special instruments made for oth	(Special instruments made for other voltage and frequency ratings)						
Power Consumption	50 watts						
VALVE COMPLEMENT	(3) 6B7I.F. Amp. 2nd Det. A.V.C. and A.F. Amp.						
(1) 6D6	(4) 42output pentode						
(2) 6A7Detector-Oscillator	(5) 80Rectifier						
Dial Lamps	6.3 volts, .25 amps.						
Loudspeaker	Loudspeaker TransformerTA3200Y						
Loudspeaker Field Coil Resistance	2000 ohms						

General Circuit Description

The Radiola 160 is a five valve medium wave A.C. operated superheterodyne. A feature of this model is the use of magnetite cores in the I.F. transformers, providing greater selectivity, sensitivity, and insuring practically permanent alignment under extreme conditions.

This model employs an R.F. amplifier stage for high signal-to-noise ratio and high sensitivity. A 6D6 R.F. amplifier is used, the control grid of which is coupled to the aerial by the aerial coil T1, which is tuned by the rear section of the variable condenser C2. The amplified signal is coupled to the control grid of the 6A7 Detector — Oscillator by the tuned R.F. coil T2.

DETECTOR-OSCILLATOR.

The functions of detector and oscillator are combined within the same valve - the 6A7. In this valve the incoming signal is combined with a local oscillator signal, 460 K.C. different in frequency, and as a result of the beating of the two signals, the I.F. or beat frequency is present in the plate circuit of the valve. The frequency difference of 460 K.C. remains constant throughout the tuning range of the Radiola due to the design of the oscillator coil in conjunction with the variable and padding condensers. No padding adjustment is provided since the padding condenser C10 is of the correct capacity, predetermined at the factory. The alignment adjustments for the R.F., Detector and Oscillator circuits are located on the variable condenser — see fig. 3.

I.F. AMPLIFIER.

One stage of I.F. amplification is used with the pentode section of the 6B7 employed as an I.F. amplifier. Two I.F. transformers are used, both tuned by magnetic cores within the primary and secondary windings. The adjustments are shown in figs. 2 and 3, the primary adjustments being beneath and the secondary adjustments above the chassis. The output from the I.F. amplifier is fed to a diode of the 6B7 for rectification, which takes place across resistors R13 & R14.

A signal is also fed from the primary of the second I.F. transformer to the other diode of the 6B7 via C20 and a D.C. potential is produced across R11 proportional to the incoming signal. This is fed to the control grid circuits of the 6A7 and 6D6 valves to provide automatic volume control.

AUDIO AMPLIFIER.

The desired magnitude of the audio component in the diode circuit of the 6B7 is selected by the volume control, R13, and is fed to the control grid circuit of the 6B7, via C18, for amplification. The amplified signal is resistance capacity coupled to the 42 output pentode to be amplified to a suitable level for reproduction by the loudspeaker. Transformer TA3200Y provides the necessary matching between the 42 and the loudspeaker.

POWER UNIT SUPPLY.

The power unit circuit comprises a transformer T6, an 80 full-wave rectifier and an efficient filter circuit comprising two high capacity condensers C30 and C31 with the 2000 ohms loudspeaker field employed as a filter reactor.

Sensitivity of the Radiola is controlled by the

3000 ohms variable rotary resistance, R3, connected in the cathode circuits of the 6D6 and 6A7 valves to raise or lower the cathode bias voltage on these valves as desired.

The tone control circuit consists of a 100,000 ohm variable resistance connected in series with a .035 mfd. paper dielectric condenser between the plate of the 42 output pentode and earth.

Alignment Procedure

Unless it is felt that the alignment of the Radiola is incorrect, it is not desirable to alter the adjustments from the factory setting. However, when repairs have been made to I.F. or R.F. circuits, or tampering is suspected, alignment becomes necessary.

In aligning the tuned circuits, it is important to apply a definite procedure, as tabulated below, and to use adequate and reliable test equipment. An A.W.A. Modulated Oscillator type C.1070 is ideal for the purpose. Visual indication of the output from the Radiola is also necessary, any output meter of conventional design being suitable.

Connect the ground connection of the Modulated Oscillator to the Radiola chassis, and for I.F. alignment remove the grid clip from the 6A7 before connecting the oscillator. See that a 250,000 ohms resistor is connected between the output terminals of the modulated oscillator.

When aligning, set the volume control and sensitivity control in the maximum clockwise position and regulate the output of the modulated oscillator so that a minimum signal is applied to the Radiola to obtain an observable indication. This will avoid A.V.C. action and overloading.

"Approx. 550 K.C. No Signal" means that the Radiola should be tuned to a point at or near 550 kilocycles, where no signal or interference is received from a station or local (heterodyne) oscillator.

To check the calibration of the Radiola, connect an aerial and an earth wire and tune a broadcasting station of wavelength between 450 and 550 metres. If there is an error in the calibration, reset the pointer by loosening the mounting screws. Then, repeat instructions 3, 4 and 5 of the chart.

It is important that a non-metallic screwdriver be used to make all adjustments.

RESISTANCE MEASUREMENTS.

The resistance values shown in fig. 4 have been carefully prepared so as to facilitate a rapid check of the circuit for irregularities. To obtain the full benefit from this diagram it is advisable to consult the circuit and layout diagrams when conducting the check. Each value should hold within \pm 20%. Variations greater than this limit will usually be a pointer to trouble in the circuit.


TUNING COILS.

Each coil is secured in its shield by a circular retaining spring which can be seen seated in a recess between the shield and the coil base. To remove a coil, disconnect the leads from the lugs and insert a small screwdriver between the spring and the shield, then ease the spring from the recess.

OSCILLATOR COIL (T3).

When removing the Oscillator Coil, do not detach the padding condenser C10, as each coil is adjusted during production for use with the particular condenser supplied.

Alignment Order	Oscillator Connection to Radiola	Oscillator Setting	Radiola Dial Satting	Circuit to Adjust	Adjustment Symbols	Adjust to Obtain
1-2	6A7 DetOsc. Grid Cap	460 K.C.	Approx. 550 K.C. No signal	2nd I.F. Trans. (T5)	Secondary and Primary (T5)	Max. (peak)
3–4	6A7 DetOsc. Grid Cap	460 K.C.	Approx. 550 K.C. No signal	1st 1.F. Trans. (T4)	Secondary and Primary (T4)	Max. (peak)
5	Aerial Term.	1400 K.C.	1400 K.C.	Oscillator	CI2	Max. (peak)
6	Aerial Term.	1400 K.C.	1400 K.C.	Detector	C7	Max. (peak)
7	Aerial Term.	1400 K.C.	1400 K.C.	R.F.	C2	Max. (peak)

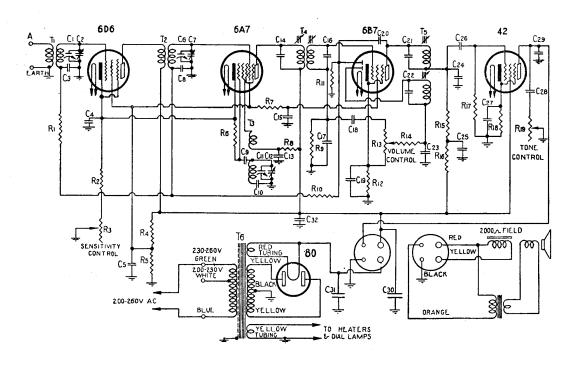

Code	Part No.	COILS	Code	Part No.	RESISTORS	Code	Part No.	CONDENSERS
TI T2 T3 T4 T5 T6	3247 3246 3243 3244 1520A	Aerial Coil R.F. Coil Dsc. Coil First I.F. Transformer Second I.F. Transformer Power Transformer, 50~ Power Transformer, 40~	R15 R16 R17 R17 R18 R19 R19 R19 R19 R19 R19 R19 R19 R19 R19		25,000 ohms, 1 watt 300,000 ohms, 3 watt	C18 C19 C20 C21 C22 C23 C24		.05 mfd. Paper 25 mfd. 25 Volt Electrolytic 200 mmfd. Mica (J) 115 mmfd. Mica (A) 115 mmfd. Mica (A) 200 mmfd. Mica (J) 700 mmfd. Mica
T6		Power Transformer, 110 Volts			CONDENSERS	C25 C26 C27		.5 mfd. Paper .05 mfd. Paper .25 mfd. 25 Volt Electrolytic
		RESISTORS	CI C2	3241	10-50 mmfd. Mica Trimmer Variable Condenser	C28 C29 C30		.035 mfd. Paper .005 mfd. Paper 8 mfd. '500 Volt Electrolytic
R1 R2 R3 R4 R5 R6 R7 R8 R9 R10 R11 R12 R13	3266	100,000 ohms, \$\frac{1}{3}\$ watt 400 ohms, \$\frac{1}{3}\$ watt 3,000 ohms, \$Sensitivity Cont. 40,000 ohms, \$I\$ watt 20,000 ohms, \$I\$ watt 50,000 ohms, \$I\$ watt 50,000 ohms, \$I\$ watt 20,000 ohms, \$I\$ watt 20,000 ohms, \$I\$ watt 1\$\frac{1}{4}\$ Megohms, \$I\$ watt 1\$\frac{1}{4}\$ Megohms, \$I\$ watt 2,000 ohms, \$I\$ watt 2,000 ohms, \$I\$ watt 3,00,000 ohms, \$I\$ watt 2,000 ohms, \$I\$ watt 3,00,000 ohms, \$I\$ watt 3,00,000 ohms, \$I\$ watt	C3 C4 C5 C6 C7 C8 C9 C10 C11 C12 C13 C14 C15 C16	324I 324I	.05 mfd. Paper I. mfd. Paper I. mfd. Paper I. mfd. Paper I. of mmfd. Mica Trimmer Variable Condenser .05 mfd. Paper 50 mmfd. Mica (D) 380 mmfd. Mica Padding I0-50 mmfd. Mica Trimmer Variable Condenser .05 mfd. Paper I15 mmfd. Mica (A) I. mfd. Paper I15 mmfd. Mica (A) 200 mmfd. Mica (J)	C31 C32		8 mfd. '500 Volt Electrolytic .5 mfd. Paper

Fig. I.—Circuit Diagram and Code.

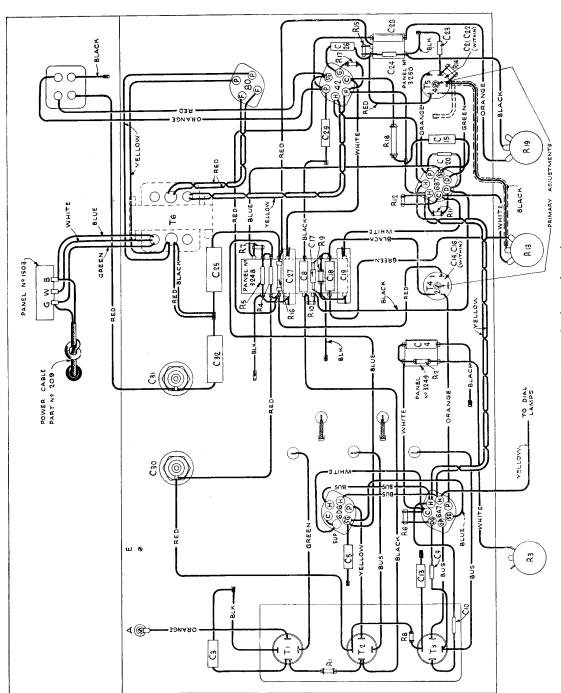


Fig. 2.—Lay-out Diagram (underneath view).

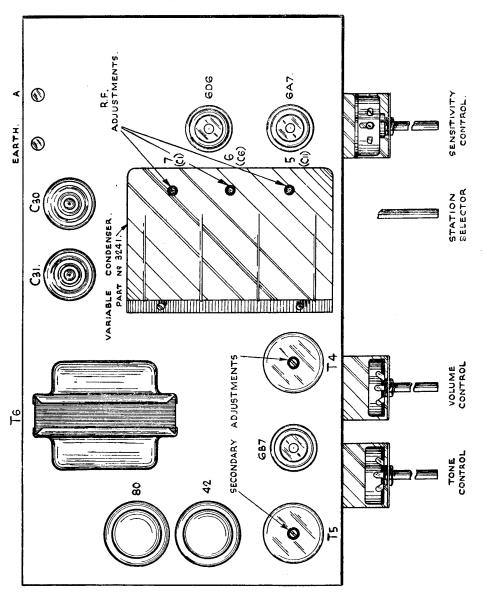


Fig. 3.—Lay-out Diagram (top view).

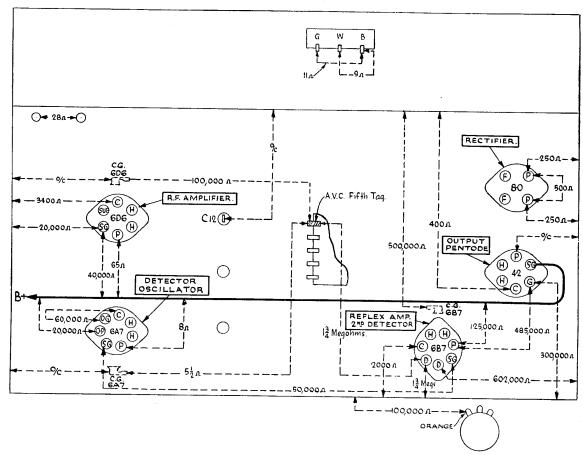


Fig. 4.—Resistance Diagram.

Resistance values were taken with the valves removed from sockets, power supply disconnected, variable condenser in full mesh, sensitivity control in anti-clockwise position and volume control in maximum clockwise position.

SOCKET VOLTAGES.

	VALVE	Chassis to Cathode Volts	Chassis to Screen- Grid Volts	Chassis to Plate Volts	Plate Current m/a.	Heater Vo lts
6D6	R.F. Amplifier	6.0	50	250	2.0	6.3
6A7	Detector	6.0	50	250	.75	6.3
	Oscillator	-		180	2.25	
6B7	Reflex					
	Amplifier	2.0	30	*100	1.0	6.3
42	Pentode	14.0	250	235	30.0	6.3
80	Rectifier	630/3	15 volts	45 m/	a. total	5.0
		current				

Voltage across loudspeaker field—90 volts.

Measured at 240 volts A.C. supply. No signal input. Controls in maximum clockwise position.

^{*} Cannot be measured with an ordinary volt meter.

