TECHNICAL INFORMATION

AND

SERVICE DATA

Models 805-G & 805-GZ


NINE VALVE, SEVEN BAND

A.C. OPERATED SUPERHETERODYNES

ISSUED BY

AMALGAMATED WIRELESS (A/SIA) LTD.

.....13.5-16.9M.

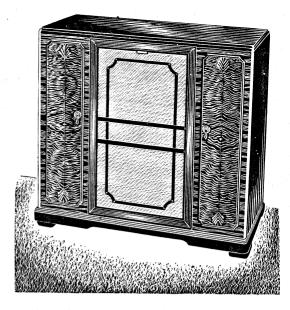


ELECTRICAL SPECIFICATIONS.

FREQUENCY RANGES. 1. 540-1600 Kc/s.555-187.5M. 2. 4.0-1.5 Mc/s.75-200M. 3. 9.7-3.6 Mc/s.31-83.4M. 4. 12.0-9.4 Mc/s.25-31.9M. 5. 15.0-11.7 Mc/s ______20-25.7M.

7. 22.3-17.7 Mc/s.

Controls 805-G and 805GZ

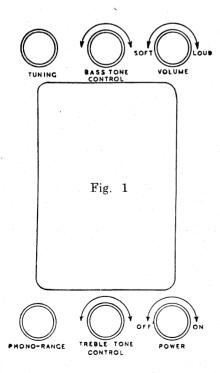

INTERMEDIATE FREQUENCY	455 Kc/s.
Power Supply Rating	
	40-60 C.P.S
(Models are produced with other volt-	
age and frequency ratings.)	
Power Consumption	100 watts
Valve Complement	

A.C.,

MODEL 805-G.

1. 6U7G. R.F. Amplifier.

2. 6J8GA. Converter.

I.F. Amplifier, Detector, A.V.C. 3. 6G8G.

4. 6SJ7. 1st A.F. Amplifier. 2nd A.F. Amplifier.

5. 6SJ7GT

6. 6J5GT. Phase Splitter.

7. 6V6GT. Push-pull Outpu's.

8. 6V6GT. Push-pull Output.

9. 5Y3GT. Rectifier.

Y61 or Y63. Visual Tuning Indicator.

MODEL 805-GZ.

R.F. Amplifier. I. 6U7G.

Converter. 2. 6J8GA.

3. 6G8G. I.F. Amplifier, Detector, A.V.C.

4. 6AU6.

1st A.F. Amplifier. 2nd A.F. Amplifier. 5. 6AU6.

6. 6J5GT. Phase Splitter.

7. 6V6GT. Push-pull Output.

Push-pull Output. 8. 6V6GT.

Rectifier. 9. 5Y3GT.

Y61 or Y63. Visual Tuning Indicator.

LOUDSPEAKER:

Model 805-G.

12 inch permanent Magnet—Code No. AU54. Transformer—TX4.

V.C. Impedance—12.5 ohms at 400 C.P.S.

Model 805-G.Z.

12 inch permanent Magnet-Code No. AU58. Transformer—TX4.

V.C. Impedance—12.5 ohms at 400 C.P.S.

Undistorted Power Output-8 watts. Dial Lamps (4)—6.3 volts, 0.25 Amp. M.E.S.

MECHANICAL SPECIFICATIONS.

Cabinet Dimension's (inches)	37	40	17
Chassis Base Dimensions (inches)	Height	Width	Depth
Weight (nett lbs.)	156	10	74
Cabinet Finish	Walnut	Veneer.	

ALIGNMENT PROCEDURE.

The receiver is tested by the manufacturer with precision instruments and all adjusting screws are sealed. Re-alignment should be necessary only when adjustments have been altered from the factory setting or when repairs have been made to the tuned circuits. Climatic conditions should not seriously affect the receiver.

It is important to apply a definite procedure, as given in this booklet, and to use adequate and reliable test equipment. Instruments ideally suited to the requirements are either the A.W.A. Junior Signal Generator, type 2R3911, or the A.W.A. Modulated Oscillators, type J6726 and C1070.

An output meter is necessary with both these instruments, the recommended type having an output impedance of 10,000 ohms and a range of 5-6000 milliwatts. The recommended meter is the A.W.A. output meter, type 2M8832.

As the calibration of the band-spread bands require great accuracy, it is recommended that an A.W.A. Crystal Calibrator, type 6795, be used after setting the oscillator calibration, to check the accuracy of the signal generator. The crystal calibrator emits a modulated signal at intervals of either 100 or 1000 Kc/s., throughout the radio frequency spectrum, thus providing a series of fixed and equally spaced calibration points of known accuracy. When using this instrument, care should be taken to select the correct signal. With the crystal set at the 1000 Kc/s. position, a spurious image signal can generally be obtained by turning the tuning control of the receiver to a point approximately 100 Kc/s. higher in frequency. This is a useful check as to whether a harmonic or spurious image is being tuned. If a crystal calibrator is not available broadcasting stations of known frequency may be used as an alternative.

When using a signal generator or modulated oscillator, with the tuning of the receiver fixed, two frequencies can be tuned from the test instrument, one 0.92 Mc/s. higher in

frequency than the other. In all cases the desired frequency is the lower of the two.

For all alignment purposes, connect the "low" side of the signal generator to the receiver chassis.

Perform alignment in the proper order as shown in the chart, starting from No. 1 and following all operations across, then No. 2, etc.

Keep the volume control set in the maximum clockwise position and regulate the output of the test instrument so that a minimum signal is introduced to the receiver to give a standard indication on the output meter. This will avoid A.V.C. action and overloading.

When the receiver has been satisfactorily aligned, seal the adjusting screws with a small quantity of cellulose cement.

If a type J6726 or C1070 instrument is used, see that an 0.25 megahm resistor is connected between the output terminals, and for short wave alignment a 400 ohm non-inductive resistor in series with the active output lead.

SIMPLE SHORT WAVE CALIBRATION ADJUSTMENT.

The short wave calibration may be adjusted slightly, without removing the chassis from the cabinet for alignment, by adjusting four cores, L19, L21, L23 and L25, after a station of known frequency is received.

The correct procedure is as follows:—

- (1) Set the dial pointer so that calibration is correct on the medium wave band.
- (2) To adjust the calibration of the 22.3-17.7 Mc/s. band, tune-in the known station, and to shift the pointer position to the high frequency end of the dial, turn L19 clockwise, or vice-versa, until the station can be tuned-in at its assigned frequency.

The adjustments for the 19.0-15.0, 15.0-11.7 and 12.0-9.4 Mc/s. bands are similar, using L21, L23 and L25 respectively.


ALIGNMENT TABLE.

Alignment Order	Connect "high" side of generator to:	Tune Generator to:	Tune Receiver Dial to:	Circuit to adjust.	Adjustment Symbol	Adjust to obtain.
1 2 3 4	6J8GA Cap* 6J8GA Cap* 6J8GA Cap* 6J8GA Cap*	455 Kc/s. 455 Kc/s. 455 Kc/s. 455 Kc/s.	540 Kc/s. 540 Kc/s. 540 Kc/s. 540 Kc/s.	2nd I.F. Trans. 2nd I.F. Trans. 1st I.F. Trans. 1st I.F. Trans.	Core L36 Core L34 Core L35 Core L33	Max. Peak Max. Peak Max. Peak Max. Peak
		Re-c	heck I, 2, 3 and	4.		
5 6 7 8	Aerial Aerial Aerial Aerial	600 Kc/s. 1,500 Kc/s. 1,500 Kc/s. 1,500 Kc/s.	600 Kc/s. 1,500 Kc/s. 1,500 Kc/s. 1,500 Kc/s.	Oscillator** Oscillator Radio Frequency Aerial	Core L31 C12 C28 C7	Max. Peak Calibration Calibration Max. Peak
		Re-d	check 5, 6, 7 and	8.		
9 10 11 12 13 14 15 16 17 18 19 20 21	Aerial	17.8 Mc/s. 17.8 Mc/s. 17.8 Mc/s. 21.0 Mc/s. 15.2 Mc/s. 11.8 Mc/s. 11.8 Mc/s. 11.8 Mc/s. 9.5 Mc/s. 9.0 Mc/s. 9.0 Mc/s. 9.0 Mc/s.	17.8 Mc/s. 17.8 Mc/s. 17.8 Mc/s. 21.0 Mc/s. 15.2 Mc/s. 11.8 Mc/s. 11.8 Mc/s. 11.8 Mc/s. 9.5 Mc/s. 9.0 Mc/s. 9.0 Mc/s. 9.0 Mc/s.	Oscillator Radio Frequency** Aerial Oscillator Oscillator Radio Frequency** Aerial Oscillator Oscillator Oscillator Aerial Oscillator Radio Frequency** Aerial Oscillator	Core L19 C23 C6 C10 Core L21 Core L23 C24 C5 Core L25 C16 C22 C4 Core L27	Calibration Max. Peak Max. Peak Calibration Calibration Max. Peak Max. Peak Calibration Calibration Max. Peak Max. Peak Calibration Max. Peak Max. Peak Max. Peak Max. Peak Calibration
		Re-ch	eck 18, 19, 20 an	d 21.		
22 23	Aerial Aerial	1.6 Mc/s. 3.7 Mc/s.	1.6 Mc/s. 3.7 Mc/s.	Oscillator Oscillator	Core L29	Calibration Max. Peak
		Re	e-check 22 and 2	3.	•	

Finally, re-check broadcast band. This is necessary only if the setting of C10 has been altered.

^{*}With grid clip connected. An 0.001 uF capacitor should be connected in series with the "high" side of the test instrument.

^{**}Rock the tuning control back and forth through the signal.

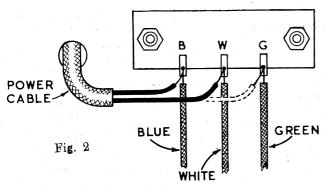


CHASSIS REMOVAL.

Chassis Removal.

1. Remove the six control knobs by pulling them straight off their spindles.

- 2. Remove the backs from the receiver and Record Changer compartments.
- 3. Disconnect the Phono-motor, cabinet pilot lamp and pick-up cables from the chassis, the power cable from the distribution panel situated under the Record Changer compartment, and the loudspeaker cable from the loudspeaker.
- 4. The chassis is held in the cabinet by four screws, two at each end of the chassis. Removal of these enables the chassis to be withdrawn from the cabinet.

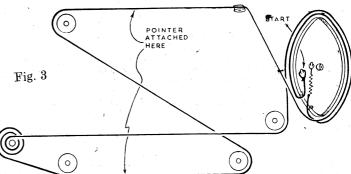


CONNECTION TO POWER SUPPLY.

Each instrument is supplied ready for use on voltages between 230 and 260 volts inclusive. Should the supply be consistently below 230 volts, it will be necessary to remove the chassis from the cabinet and re-wire the power supply connection panel. The panel has three tags, to which three leads from the power transformer—blue, white and green are connected. For 230-260 volts operation, the cables from the ON/OFF switch and the Phono-motor connection socket are connected to the blue and green leads. For voltages below 230, both should be connected to the blue and white leads. See accompanying diagram.

TUNING DRIVE CORD REPLACEMENT.

The accompanying diagram shows the route of the cord and the method of attachment. Whilst fitting the tuning drive cord, keep it taut, and adjust the length so that the tension spring measures approximately 2 inches long when fitted. The spring should be sheathed to prevent it from rattling against the drum.

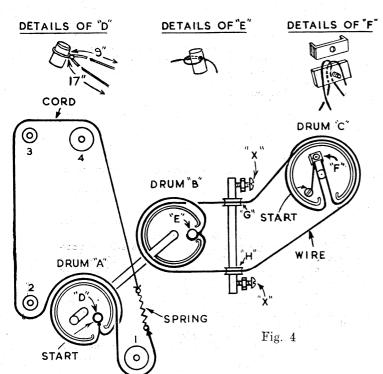

WAVE CHANGE SWITCH DRIVE REPLACEMENT.

Wave Change Switch Drive Replacement.

The following notes should be read whilst referring to Fig. 4, which shows the route and method of attachment of both the drive cord and drive wire.

When replacing either the cord or the wire, the recommended procedure is as follows:-

(1) Drive Wire.

Turn the switch to the extreme anti-clockwise position. Loosen screws "X" and anchor one end of the wire under

the self-tapper as shown on drum "C"

Feed the wire under and over bush "F", around drum "C" in an anti-clockwise direction, over pulley "G", around drum "B", through "E" on drum "B" twice, then, around drum "B" in an anti-clockwise direction, over pulley "H", around drum "C", and finally, fasten under and over bush "F" by the locking bracket.

Now adjust screws "X" for correct tension and lock.

(2) Drive Cord.

Tie the cord over "D" on drum "A" so that it measures approximately 17" to the left and 9" to the right of "D".

Feed the long section of the cord anti-clockwise around drum "A", under pulley "2", and over pulleys "3" and "4".

Now feed the short section clockwise around drum "A" and under pulley "I". Tie the 9" section to the tension spring, pass the 17" section through the other end of the spring, and tie after adjusting the tension.

AUDIO SYSTEM-MODEL 805-G.

1st A.F. Amplifier (V4) -6SJ7. 2nd A.F. Amplifier (V5) -6SJ7GT.

A 6SJ7 valve is used as the 1st A.F. Amplifier and Tone Control source.

The action of this arrangement is as follows:-

At middle frequencies the gain of the valve is determined by the plate load R23, and the negative feedback developed across R22. All values have been arranged so that the normal gain occurs at 400 C/s.

Treble Tone Control (R18).

At high frequencies, the negative feedback is reduced, due to the shunting of the cathode circuit by C48, the amount of shunting being controlled by the setting of R18.

Maximum treble lift occurs when the moving arm of the control is turned fully clockwise. Treble cut is obtained, when the arm of the control is in the extreme anti-clockwise position, due to the shunting effect of C56 across the grid circuit of V5.

Bass Tone Control (R25).

In series with the plate load resistor R23 is R24, which is shunted by C50.

This combination has a new impedance at 400 C/s. The impedance rises as the frequency decreases and the gain rises correspondingly with the impedance. R23 can be effectively short-circuited by the adjustment of the Bass Control (R25). An increase of gain at low frequencies is obtained with the moving arm of the control in the extreme clockwise position. With the moving arm in the extreme anti-clockwise position, C52 is inserted into the coupling circuit and "bass cut" is obtained.

The 6SJ7 employed in this position should have low heater-cathode leakage, otherwise, hum may arise.

The remaining portion of the audio end follows normal

practice of Phase Splitter (6J5GT) and Push-pull Amplifier (2–6V6GT) with 20 db of negative feedback applied betwee input and output via R37, R27.

MODIFICATIONS TO MODEL 805-G.

Hum Reduction.

Cause: Heater-Cathode leakage in the 6SJ7 or 6SJ7GT valves

This can occur in either valve after a period of service.

Three things should be done to deal with this:

(1) Wire heaters of V4 and V5 from the special centre tapped heater winding (already used for V4) and reduce the heater voltage by means of series resistance to 5.5 valts.

Two pieces of 32 SWG Eureka wire, 6 inches long, inserted through I mil tubing, in series with each side of the winding are very convenient for this purpose. The centre tap is earthed in the normal position. Refer to Fig. 6.

(2) By-pass the cathode of V4 with a 25/40 Electrolytic capacitor. This increases the averall gain of V4 and therefore, a voltage divider is incorporated in the grid circuit of V5. One-fifth of the available voltage is applied to this grid. See Fig. 7.

The cathode of V5 cannot be by-passed owing to the negative feedback arrangement.

(3) Improve the high tension filtering by adding to the filter unit a TX14 choke and a 16/525 electrolytic capacitor. These are inserted in the rectifier side of the filter as shown in Fig. 8.

As well as the modifications mentioned above, some other changes can be made with advantage. Two miniature valves (6AU6) can be used in place of the 6SJ7 and 6SJ7GT, and the Tone Control circuits can be altered in accordance with Fig. 9. The description of the modified audio system will then be the same as for model 805-GZ.

SOCKET VOLTAGES AND CURRENTS. MODEL 805-G.

	VALVES	Control Grid to Chassis Volts	Cathode to Chassis Volts	Screen to Chassis Volts	Anode to Chassis Volts	Anode Current mA	Heater Volts
6U7G	R.F. Amp., M.W.	-2.2*	0	85	265	6.0	6.3
	S.W	-2.2*	0 1 1	85	265	6.0	
6J8GA	Converter, M.W.	-2.2*	0	85	265	0.8	6.3
	S.W	-3.4*	0	85	265	0.6-1.3	
	Oscillator, M.W.		0		130	8.0	
	S.W		0		130	6.0-8.0	
6G8G	I.F. Amp., Det. A.V.C., M.W.	-2.2*	0	85	265	5.4	6.3
	S.W		0	85	265	5.4	
6SJ7	1st A.F. Amp.		1.8	18	35	0.2	6.3
6SJ7GT	2nd A.F. Amp.		3.5	58	88	0.8	6.3
6J5GT	Phase Splitter		58		95	0.7	6.3
6V6GT)	Push-pull		16	265	258	34.0	6.3
6V6GT	Output		16	265	258	34.0	6.3
5Y3GT	Rectifier				680/340	31.0	5.0
		· · · · · · · · · · · · · · · · · · ·			Volts A.C.		3.0

¹⁰⁰ mA Total Current Drain.

^{*}Cannot be measured with an ordinary voltmeter.
Voltage across loudspeaker field—78 volts.

Measured with receiver connected to 240 volts A.C. Supply. No signal input. Volume Control maximum clackwise.

DESCRIPTION OF TUNING CIRCUIT ADJUSTMENTS. Broadcast Band.

The broadcast band adjustments follows usual practice with three trimming capacitors—C7 aerial, C28 R.F., C12 oscillator, and a variable magnetite core for the L.F. adjustment of the oscillator coil L31, L32.

9.7-3.6 Mc/s. Band.
Adjustments are the same as those used on the broadcast band, that is, with three trimming capacitors—C4 aerial, C22 R.F., C16 oscillator, and a variable magnetite core for L.F. adjustment of the oscillator coil L27, L28.
4.0-1.5 Mc/s. Band.

All capacitors in the aerial and R.F. sections are common with those in the 9.7-3.6 Mc/s band, the change of band being accomplished by switching tapped coils. The oscillator section, however, is provided with a separate capacitor, C17, for tracking with the signal circuits at the H.F. end, and a variable magnetite core for L.F. adjustment of the oscillator coil L29, L30.

22.3-17.7 Mc/s Band.

At the L.F. end of this band there are three adjustments, a magnetite core in the oscillator coil L19, L20, and trimming capacitors C23 R.F. and C6 aerial. Small capacitors C1, C25 and C13 are used in series with the ganged tuning capacitors to accomplish band-spreading at the L.F. end of this band. The oscillator circuit is made to track with the signal circuit at the H.F. end by adjustment of capacitor

C10. The three series capacitors are chosen to give three' point tracking, between the signal and oscillator circuits. 19.0-15.0 Mc/s. Band.

The capacity system is the same as for the 22.3-17.7 Mc/s. band, the change of band being accomplished by switching coils, the oscillator coil L21, L22 being fitted with

a variable magnetite core for L.F. adjustment. 15.0-11.7 Mc/s. Band.

Adjustments are similar to those on the 22.3-17.7 Mc/s. band, excepting that no H.F. adjustment is provided for the oscillator. L.F. adjustments are trimming capacitors C24 R.F., C5 aerial, and a variable magnetite core in oscillator coil L23, L24.

12.0-9.4 Mc/s. Band.

One adjustment only is provided, a variable magnetite core in the oscillator coil L25, L26.

It will be noted that the ratio max. frequency is the same on the four bands, 12.0-9.4 Mc/s., 15.0-11.7 Mc/s., 19.0-15.0 Mc/s., 22.3-17.7 Mc/s., and the tracking is practically correct, using the same series capacitor for all bands. The ratio max. frequency is also the same on the 4.0-1.5 Mc/s. and 9.7-3.6 Mc/s. bands, but, due to the greatly different frequency spectrum of the oscillator, the series capacitors in the two oscillator circuits are different.

CIRCUIT ARRANGEMENT.

R.F. Amplifier—6U7G (VI).

The 6U7G is a triple grid, super control R.F. Amplifier. The output of the aerial coil, which is tuned to signal frequency by the aerial section of the tuning capacitor, is applied to the control grid for amplification. The cathode being earthed, a minimum negative bias voltage of 2.2 volts in the 805-G and 2.0 volts in the 805-GZ is obtained from the back-bias circuit, and applied to the control grid via the A.V.C. line.

Amplification is also controlled automatically, due functioning of the A.V.C. Circuit.

Converter—6J8GA (V2).

The 618GA is a triodeheptode converter and is employed as a frequency converter. Voltages at signal frequency are applied to the control grid from the R.F. Amplifier in the R.F. ceil and associate circuit. Local oscillations are provided by the triode portion of this valve operating as a tuned grid feedback circuit comprising oscillator coil, padding capacitor and oscillator section of ganged tuning capacitor. Electronic mixing gives a resultant heterodyne frequency of 455 Kc/s. The cathode of this valve being earthed, bias voltages are applied to the control grid via the A.V.C. line from the back-bias circuit. Minimum bias on medium wave is -2.2 volts and short wave -3.4 volts for model 805-G. For model 805-GZ, bias on medium wave is -2.0 volts and on short wave -3.1 volts. The 6J8GA is not A.V.C. controlled on short wave.

I.F. Amplifier, Detector, A.V.C.—6G8G (V3).

The output from the 618GA is coupled to the control grid of the 6G8G by the 1st I.F. transformer, which is permeability tuned to 455 Kc/s. Bias conditions are similar to those of the R.F. Amplifier (V1).

The 2nd I.F. transformer, permeability tuned to 455 Kc/s., couples the output of V3 to diode No. 2 for detection. Portion of the R.F. voltage from this diode is fed to the diode No. 1 by coupling capacitor (C37) and a voltage is developed across the diode load resistor (RII). This voltage is applied to the grids of VI, V2 and V3 via the A.V.C. line. This voltage, so developed, varies in proportion to the strength of the carrier being received.

AUDIO SYSTEM-MODEL 805-GZ.

1st A.F. Amplifier (V4)—6AU6. 2nd A.F. Amplifier (V5)—6AU6. The heater of V4 and V5 are supplied at a reduced voltage from a special centre-tapped winding to reduce hum to a minimum. The cathodes of both valves are also by-passed as an additional hum preventative.

Approximately 20 db of negative feedback is applied to the screen of V5 and the tone controls are also operated in a negative feedback arrangement. Under these conditions, a power output of 8 watts, with a negligible percentage of distortion, is obtainable.

OPERATION OF TONE CONTROLS.

Treble Tone Control (R27).

At middle frequencies, approximately 10 db of negative feedback is applied from the plate to the grid of V4.

At high frequencies, when the moving arm of the control is at the extreme anti-clockwise position, R25 is shunted by C55, which has low reactance at high frequencies. Feedback is, therefore, increased, giving "Treble Cut."

With the arm of the control in the extreme clockwise position, R26 is shunted by C56, giving less feedback, and consequently, "Treble Boost."

Bass Tone Control (R28).

Both C53 and C54 are of relatively high reactance at low frequencies.

With the moving arm of the control at the extreme anticlockwise position, C53 is short-circuited, making the negative feedback the same magnitude as at middle frequencies.

"Bass Cut" is obtained due to the voltage divider action

of C54 and the grid resistor of V5 (R29).

With tht moving arm of the control in the extreme clockwise position, C54 is short-circuited and the negative feedback at low frequencies is reduced owing to the high reactance of C53. This naturally results in "Bass Boost."

R19, in series with the grid of V4, is to prevent the action of the Volume Control (R17) from affecting the feedback arrangements. This resistor is shunted by C48 to increase the high frequency response on "Radio."

The remainder of the audio system follows normal practice of Phase Splitter (V6-6J5GT) and Push-pull Amplifier (V7, V8, 2-6V6GT), with 20 db of negative feedback applied between input and output via R24, R30.

SOCKET VOLTAGES AND CURRENTS. MODEL 805-GZ.

	VALVES	Control Grid to Chassis Volts	Cathode to Chassis Volts		Anode to Chassis Volts	Anode Current mA	Heater Volts
U7G R.F. Amp.,	M.W.	-2.0*	0	85	250	6.0	6.3
	S.W.	-2.0*	0	85	250	6.0	
J8GA Converter.	M.W.	-2.0*	0 27	85	250	0.8	6.3
	S.W.	-3.1*	· 0	85	250	0.6-1.3	
Oscillator.	M.W.		0	-	140	0.8	
	S.W		0	-	140	6.0-8.0	- <u>-</u> -
G8G I.F. Amp.	Det., A.V.C., M.W.		0	85	250	5.4	6.3
	S.W		0	85	250	5.4	
AU6 Ist A.F. A	mp		1.8	120*	140*	0.6	5.3
	\mp		3.0	145*	160*	0.4	5.3
	tter		62.0	· · · · · · · · · · · · · · · · · · ·	. 110	0.7	6.3
			16.0	250	245	34.0	6.3
			16.0	250	245	34.0	6.3
				- <u></u>		Volts A.C.	5.0
,, JOI Rectifier						otal Current Dr	

D.C. RESISTANCE OF WINDINGS.


12 * * * * 4.5 1.5 1.5 2 4 * *
* * 4.5 1.5 1.5 2 4 * *
* * 4.5 1.5 1.5 2 4 * *
1.5 1.5 2 4 * *
1.5 2 4 * * *
2 4 * * * * * * * *
2 4 * * *
4 * * *
* * * * * * * * * * * * * * * * * * *
• • • • • • • • • • • • • • • • • • •
*
* *
* E
1 E
_1.5
55
4
agenta de la Sala de Carlos de la Sala de Carlos d La carlos de Carlos
*
*
*
*
*
*
*
1.25
*
7.5
1.5
9
750
80
380
380
380
380 *

The above readings were taken on a standard chassis, but substitution of materials during manufacture may cause variations, and it should not be assumed that a component is faulty if a slightly different reading is obtained. *Less than I ohm.

^{*}Cannot be measured with an ordinary voltmeter.
Voltage across L37-80 volts.
Voltage across L38-15 volts.
Measured with receiver connected to 240 volts A.C. Supply. No signal input.


Volume Control Maximum clockwise.

FIG. 5. TUNING CIRCUIT.

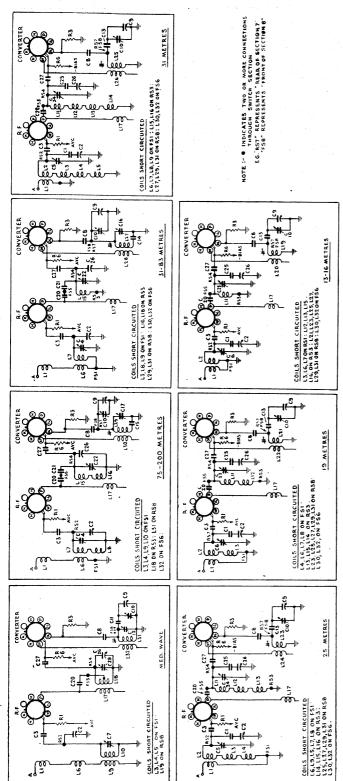

MECHANICAL REPLACEMENT PARTS

	7710	01.10	8148	1	74/5/	24447	4704		RT8	8317	8021	8022	24789	10236	24790	23853	5458
		יייייייייייייייייייייייייייייייייייייי	day	Socket, Valve, with Screen	(805-02 only)	Socket, Valve Cushion Assembly	Socket, Valve, 8 pin	Socket, Vaive, 8 pin,	Amphenol	Strip Tag I way	2 way	4 way	4 way	4 way	2 % 0 × 0	\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \	Terminal, Spring
Part No.	23543	23561	23539	23559	2350/	25913		23852	24650	75167	/0167	4263		17386	17387	10274	4733
Item .	Drum "A"	Drum "B"	Drum "C"	Flywheel Assembly	Knob Model 805.G	Model 805-GZ	Panel, Capacitor Assembly	805-G	303-0	20-c00	70-000	Panel, Power Cord Assembly	Panel, Pin-Jack Assembly	2 way	2 way	3 way	Register, Valve Screen
Part No.	C85 or C85Z	23851	23983	23984	23859	23855	23863	23857	23554	23527	23528	5793	23570	23536	23376A	0606	
		Cable, Loudspeaker	Cable, Pick-up	ver	wer Switch	Cable, Tone, Bass	ne, reple	olume	dase	End. Right-Hand	Left-Hand	Clip, Grid	ne, Assembly	ter Assembly	0	Drive	Wave Change (Fig. 4)

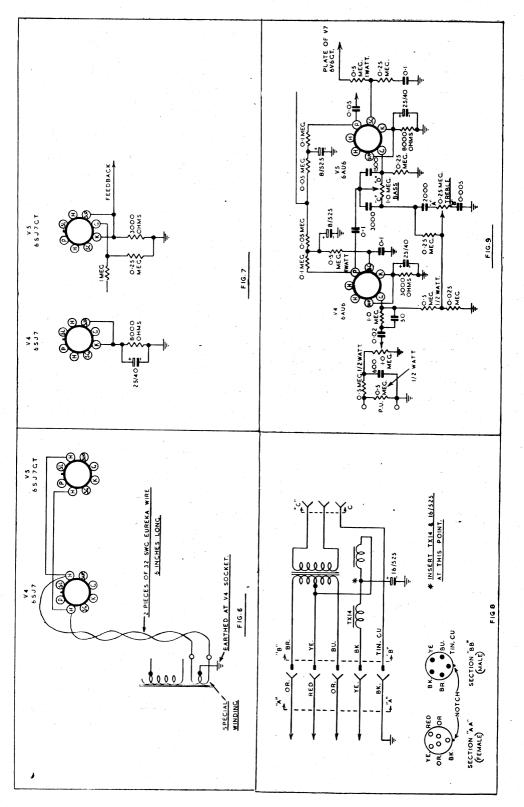

CIRCUIT CODE RADIOLA 805-GZ.

		•			
Code	Description Po	ırt No.	Code No.	Description Par	rt No.
No.		110.			16347
	INDUCTORS	9852	C10 C11	490 uuF Padder ± 2½%	
LI, 2 LI, 2, 3	Aerial Coil 13-16 Metres Aerial Coil 16-20 Metres	9852	CI2 CI3	2-21 uuf Air Trimmer 42 uuf N750 Temp.	19659
LI, 2, 3, 4 LI, 2, 3, 4, 5	Aerial Coil 20-25 Metres Aerial Coil 25-31 Metres	9852 9852		Comp.	
- 16 7	Aerial Coll 31-83 Metres	9854	C14 C15	1350 uuf Mica ± 2½%	10150
L6, 7, 8 L9, 10	Aerial Coil 75-200 Metres Aerial Coil 540-1600 Kc/s	9854 9748A	C16 C17	2-21 uuF Air Trimmer 2-21 uuF Air Trimmer	19659 19659
LII	R.F. Coil 13-16 Metres R.F. Coil 16-20 Metres	9853 9853	ČÍ8	0.1 uF Paper 400 v.	
L11, 12 L11, 12, 13	R.F. Coil 20-25 Metres	9853 9853	C19	Working O.I uF Paper 400 v.	
LII, 12, 13, 14 LI5	R.F. Coil 31-83 Metres	9855	C20	Working 200 uuF Mica	
L15, 16	R.F. Coil 75-200 Metres R.F. Coil 540-1600 Kc/s	9855 9749∧	C21	50 uuF Mica	19659
L17, 18 L19, 20	Oscillator Coil 13-16		C22 C23	2-21 uuf Air Trimmer 2-21 uuf Air Trimmer	19659
L21, 22	Metres Oscillator Coil 16-20	9747	C23 C24 C25	2-21 uuF Air Trimmer 52 uuF Silvered Mica ±	19659
	Metres Oscillator Coil 20-25	9746		2 uuF	10300
L23, 24	Metres	9745	C26 C27	12-430 uuF Tuning 200 uuF Mica	18380
L25, 26,	Oscillator Coil 25-31 Metres	9744	C28	2-21 uuF Air Trimmer 8 uF 525 P.V. Electrolytic	19659
L27, 28	Oscillator Coil 31-83	9743	C29 C30	0.05 uF Paper 400 v.	
L29, 30	Metres Oscillator Coil 75-200		C31	Working 0.05 uF Paper 400 v.	
L31, 32	Metres Oscillator Coil 540-1600	9742		Working	
	Kc/s	9741A 8286Z	C32 C33	24 uF 600 P.V. Electrolytic 70 uuF Silvered Mica	
L33, 34 L35, 36	1st 1.F. Transformer 2nd 1.F. Transformer	8287Z	C34	70 uuF Silvered Mica 0.01 uF Paper 600 v.	
L37	Smoothing Choke 750 ohms	5879	C35	Working	
L38	Smoo'thing Choke	TX14	C36 C37	4 uuF Mica 50 uuF Mica	
	RESISTORS		C38	70 uuF Silvered Mica 70 uuF Silvered Mica	
R1 R2	I megohm ½ watt 20,000 ohms I watt		C39 C40	100 uuF Mica	
R3	32,000 ohms ½ watt		C41 C42	100 uuF Mica 0.02 uF Paper 600 v.	
R4 R5	16,000 ohms 2 watts 16,000 ohms 2 watts		C43	Working 600 uuF Mica	
R6 R7	I megohm 1 watt I megohm 1 watt		C44	8 uF 525 P.V. Electrolytic 16 uF 525 P.V. Electrolytic	
R8	20 ohms I watt (wire		C45 C46	0.1 uF Paper 400 v.	
R9	wound) 11 ohms I watt (wire		C47	Working 0.02 uF Paper 600 v.	
RIO	wound) 0.5 megohms ½ watt			Working	
RII	2.5 megohms ½ watt		C48 C49	50 uuF Mica 25 uF 40 P.V. Electrolytic	Trob Fa.
RI2 RI3	0.5 megohm ½ wa'tt 1.6 megohms ½ watt		C50	0.1 uF Paper 400 v. Working	
R14 R15	0.1 megohm ½ watt 50,000 ohms ½ watt 0.25 megohm ½ watt		C51	8 uF 525 P.V. Electrolytic	
R16	0.25 megohm ½ watt I megohm Volume Con-		C52	0.1 uF Paper 400 v. Working	
R17	trol	23599	C53 C54	3,000 uuF Mica 1,500 uuF Mica	
R18 R19	2.5 megohms ½ watt I megohm ½ watt		C55	2,000 uuF Mica	
R20	0.5 megohm ½ watt 3,000 ohms ½ watt		C56	0.005 uF Paper 600 v. Working	
R21 R22	0.1 megohm 1 watt		C57	0.05 uF Paper 400 v. Working	
R23 R24	0.5 megohm I watt 50,000 ohms I watt		C58	25 uF 40 P.V. Electrolytic	
R25 R26	50,000 ohms I watt 0.25 megohm ½ watt 25,000 ohms ½ watt		C59	Working	
R27	0.25 megohm Tone Con-	35340	C60	0.05 uF Paper 400 v. Working	
R28	trol I megohm Tone Control	25360 23598	C61 C62	500 uuF Mica 0.1 uF Paper 400 v.	
R29 R30	0.25 megohm ½ watt 8,000 ohms ½ watt			Working	
R31	I megohm I watt		C63 C64	8 uF 525 P.V. Electrolytic 0.1 uF Paper 400 v.	
R32 R33	0.25 megohm ½ watt		C65	Working	
R34 R35	0.1 megohm 1 watt 1 megohm ½ watt		Cee	25 uF 40 P.V. Electrolytic 0.0025 uF Paper 600 v.	
R36	50,000 ohms I watt 10,000 ohms ½ watt		C67	Working 0.5 uF Paper 400 v	
R37 R38	0.1 megohm 1 watt ± 5%		C68	Working 0.5 uF Paper 400 v.	
R39 R40	0.5 megohm watt ± 5% 5,000 ohms wa'tt			Working	
R41 R42	0.1 megohm watt ± 5% 0.5 megohm watt ± 5%		C69	0.0025 uF Paper 600 v. Working	
R43	10,000 ohms ½ watt		C70	16 uF 525 P.V. Electrolytic	
R44 R45	0.5 megohm I watt ± 5% 200 ohms 3 watts (wire			TRANSFORMERS	
R46	wound) 20,000 ohms I watt		T T2	Loudspeaker Transformer Power Transformer 40	TX4
N-TO	CAPACITORS			C.P.S.	17886A
CI	52 uuF Silvered Mica ±			LOUDSPEAKER	
	2 uuF 12-430 uuF Tuning	18380		12 in. Permanent Magne't	AU58
Č	200 uuF Mica			SWITCHES	
C4 C5	14-33 uuF Air Trimmer 14-33 uuF Air Trimmer	19659 19659	SI .	Phono/Range Switch, 8	
C6	14-33 uuF Air Trimmer 2-21 uuF Air Trimmer	19659		Wafer 8 Position Rotary	19008
C2 C3 C4 C5 C6 C7 C8 C9	70 uuF Mica		S2	Power Switch D.P.S.T.	
. C9	12-430 uuF Tuning	18380		Rotary	20007

