


VALUES	
1 50,000 Ω	2 0.00025mf
3 180 Ω	4 0.2 mf
5 0.1 MF	6 0.1 mf
7 0.5 meg	8 0.00025mf
9 50,000 Ω	10 0.00025mf
11 0.5 mf	12 0.25 meg
13 0.01 mf	14 1.0 meg
15 250 Ω	16 0.05 mf
17 0.0001 mf	18 0.0004 mf
19 0.1 mf	20 0.5 meg
21 25,000 Ω	22 8 mf
23 50 Ω C.T.	24 15000 Ω

THOM & SMITH LTD.
55-57 DOWLING ST.
SYDNEY NSW

Tosma MODEL 360 — 5 VALVE
A.C OPERATED SUPERHET.

DR'N BY *J. Bergquist*
3.3.36
CH'D BY *C. Tanzer*
4.2.36
AP'D BY *Thom*

DRAWING N°167

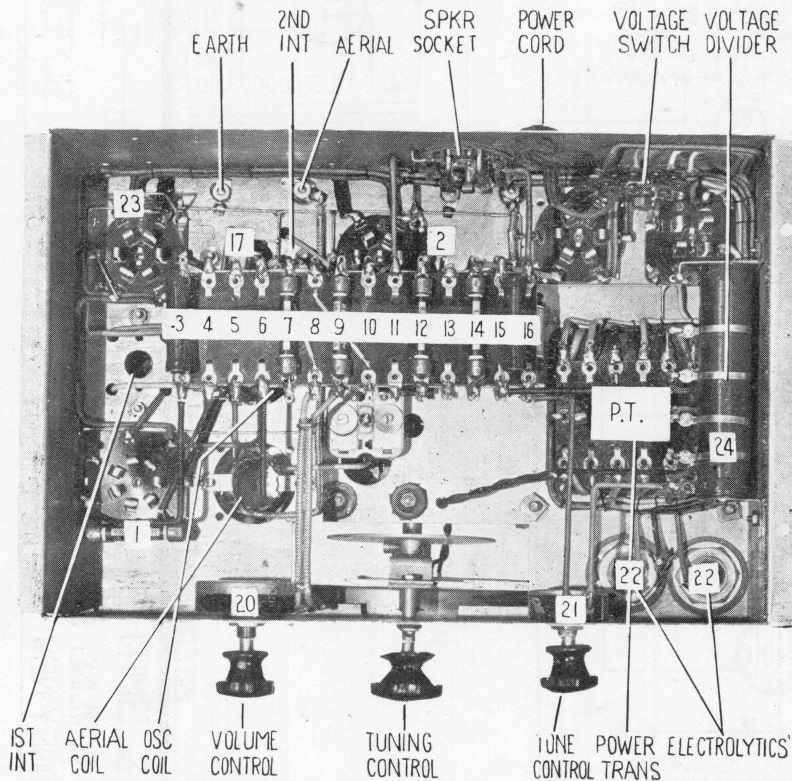

SUB-CHASSIS VIEW

LOCATION OF COMPONENTS:

The key on circuit diagram is numbered to correspond to the number on photograph of sub-chassis view.

Tasma

SERVICE DATA


for

MODEL 360 SUPERHETERODYNE

FOR A.C. OPERATION

TABLE OF VOLTAGES AND CURRENTS

Valve	Function of Valve	Ef	Ep	Ip	Esq	Isg	Eg	Eag.	Iag
6A7	Freq. Changer	6.0	225	2.5	90	2.7	2.5	150	2.5
6D6	I.F.	6.0	225	4.5	90	1.3	2.5	—	—
75	2nd Det. A.V.C.	6.0	75	0.5	—	—	—	—	—
42	1st Audio Power Audio	6.0	215	24	225	5.0	16.	—	—
80	Rectifier	5.0	350/350	—	—	—	—	—	—

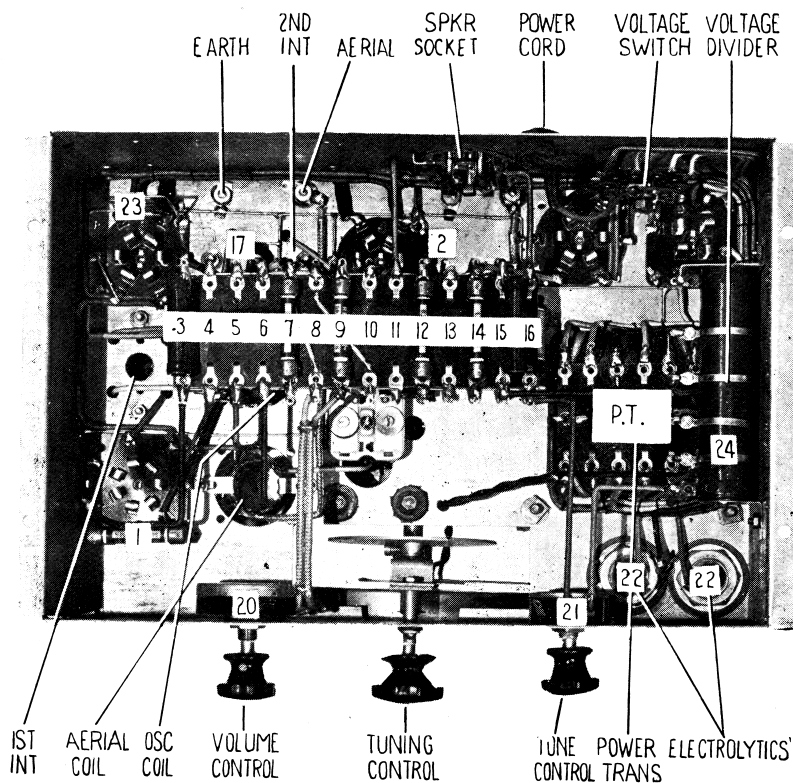

SUB-CHASSIS VIEW

LOCATION OF COMPONENTS:

The key on circuit diagram is numbered to correspond to the number on photograph of sub-chassis view.