

Tasma

SERVICE DATA

for


MODEL 365

SUPERHETERODYNE DUAL-WAVE

(for A.C. Operation)

TABLE OF VOLTAGES AND CURRENTS


Valve	Function of Valve	Wave Switch	Ef	Ep	Ip	Esg	Isg	Eg	Eag	Iag
6A7	Frequency Changer	Dist. B/c. Local B/c. S.W.	6.0	250	4	125	4	6	150	4.5
					2		5	9		5.5
					4		4	6		4.5
6D6	I.F.	Dist. B/c. Local B/c. S.W.	6.0	250	6	125	1.7	6	—	—
					3		0.7	9	—	—
					6		1.7	6	—	—
75	2nd Det. A.V.C. 1st Audio	Dist. B/c.	6.0	100	0.3	—	—	1.0	—	—
42	Power Audio	Dist. B/c.	6.0	240	34	250	5.0	—	—	—
80	Rectifier	Dist. B/c.	5.0	350/350	30/30	—	—	—	—	—

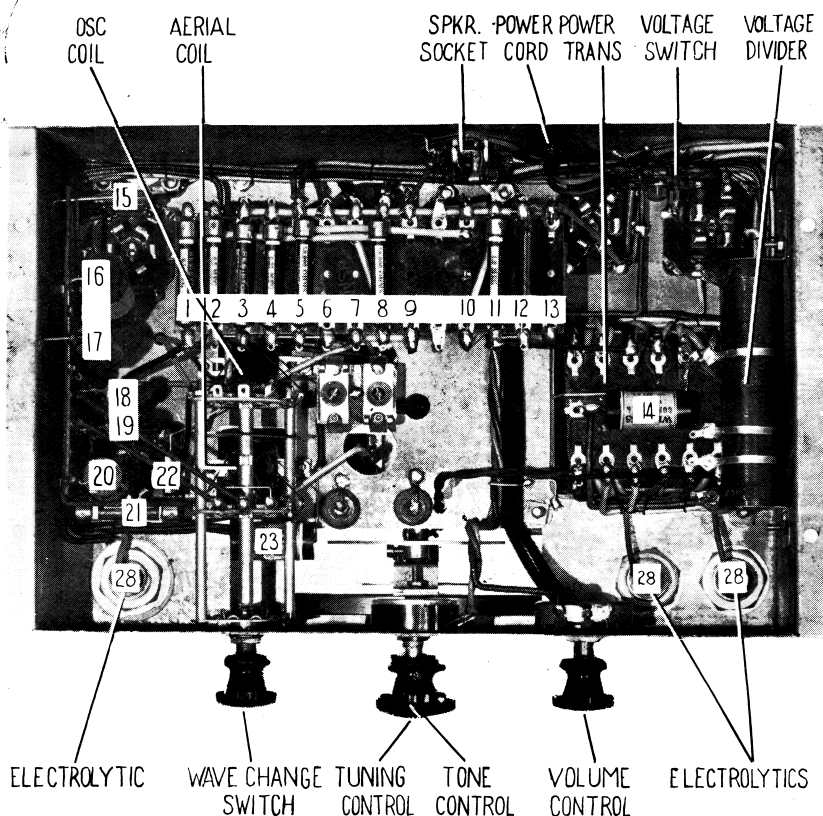

SUB-CHASSIS VIEW

LOCATION OF COMPONENTS.

The key on circuit diagram is numbered to correspond to the numbers on photograph of sub-chassis view.

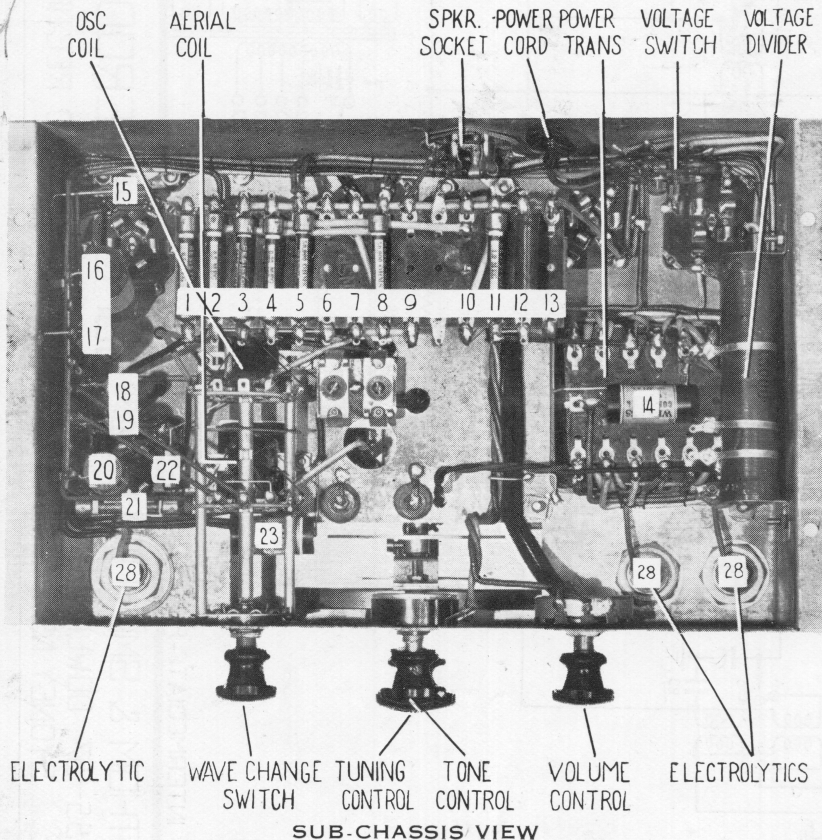

SUB-CHASSIS VIEW

LOCATION OF COMPONENTS.

The key on circuit diagram is numbered to correspond to the numbers on photograph of sub-chassis view.