



QNT	PKT	DESCRIPTION	QNT	PKT	DESCRIPTION
C1	22-593	THO GANG VARIABLE	R1	63-632	560 OHM 1/4 W ± 10
C2	22-467	.05 MFD.	R2	63-593	47M OHM 1/4 W ± 20
C3	22-269	50 MMFD.	R3	63-589	10 M OHM 1/4 W ± 20
C4	22-356	.002 MFD.	R4	63-150	10 M OHM 1/2 W ± 20
C5	22-563	FIXED PADDER	R5	63-601	36 M OHM 1/2 W ± 10
C6	22-250	.25 MFD.	R6	63-271	1 MEG OHM 1/4 W ± 20
C7	22-243	.01 MFD.	R7	63-634	850 OHM 1/4 W ± 10
C8	22-182	.00025 MFD.	R8	63-160	100 M OHM 1/2 W ± 10
C9	22-147	.0005 MFD.	R9	63-597	470 M OHM 1/4 W ± 20
C10	22-212	.05 MFD.	R10	63-689	400 M OHM VOLUME CONTROL
C11	22-492	.002 MFD.	R11	63-533	13 OHM WIRE WOUND
C12	22-350	.25 MFD.	R12	63-918	1500 OHM 1/2 W ± 10
C13	22-435	.05 MFD.	R13	63-577	100 OHM 1/4 W ± 20
C14	22-574	.02 MFD.			
C15	22-199	.5 MFD.			
C16		8 MFD ELECTROLYTIC 250 V.			
C17		5 MFD " 250 V.			
C18	22-577	10 MFD "			
VARIABLE TRIMMERS					
A		1st I.F. TRANSFORMER PRIMARY	1	5-5303	ANT. COIL & SHIELD ASSEMBLY
B		1st I.F. TRANSFORMER SECONDARY	2	5-4909	OSCILLATOR COIL ASSEMBLY
C		2nd I.F. TRANSFORMER PRIMARY	3	95-443	1st I.F. TRANSFORMER
D		2nd I.F. TRANSFORMER SECONDARY	4	95-444	2nd I.F. TRANSFORMER
E		BROADCAST OSCILLATOR (SEE NOTE)	5	85-104	BAND SELECTOR SWITCH
H		ANTENNA BROADCAST (5W OHM)	6	85-425	POWER SUPPLY SWITCH
J		*22-519 BROADCAST PADDER	7	85-298	POWER CHOKES
K		SHORT WAVE OSCILLATOR (SEE NOTE)	8	95-425	POWER TRANSFORMER
L		SHORT WAVE DETECTOR (SEE NOTE)	9	180-11	VIBRATOR
			10	5-2778	R.F. CHOKES ASSEMBLY
			11	5-5040	R.F. CHOKES ASSEMBLY
			12	20-82	R.F. CHOKES
			13		SPEAKER TRANSFORMER

NOTE - TRIMMERS F, K, & L MOUNTED ON BAKELITE STRIP # ER-324

I.F. FREQUENCY 456 K.C.
 5 TUBE BATTERY SUPERHETERODYNE
 6VOLT D.C. + 115 VOLT A.C.
 CHASSIS NO 5524
ZENITH RADIO CORP.

Models 5-J-217, 5-J-247, 5-J-255 (5524 Chassis)