


HEATH PART NO.	MANUFACTURER AND TYPE NO.		BASING
417-118	G. E .	2N3393	BASE COLLECTOR EMITTER
417-121	AMPEREX	2N 2430	EMITTER BASE COLLECTOR
417-122	AMPEREX	2N 243 1	EMITTER BASE COLLECTOR
417-154	G.E.	2N 2369	EMITTER BASE COLLECTOR
417 - 190	R C A	40481	BASE COLLECTOR
417-201	G.E.	X 29 A 8 2 9	BASE COLLECTOR EMITTER

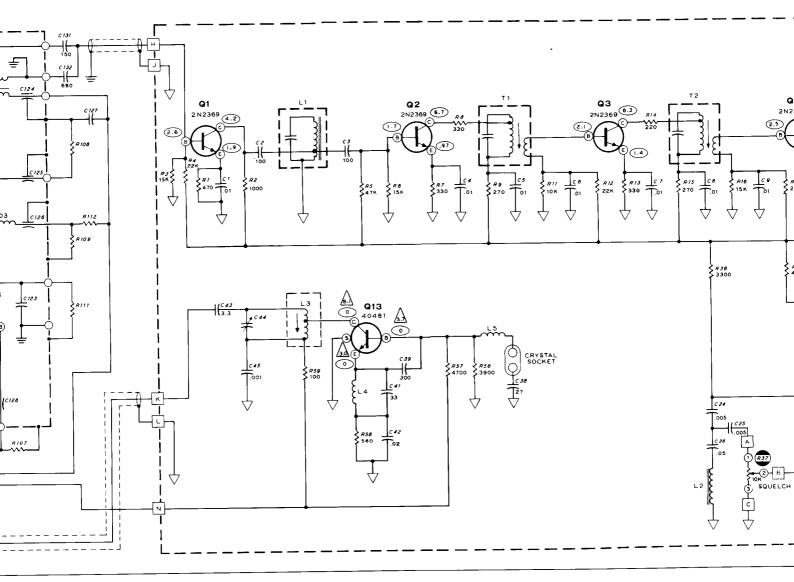

SCHEMATIC OF THE HEATHKIT® VHF-FM MONITOR RECEIVER MODEL GR-88

- 1. RESISTOR AND CAPACITOR NUMBERS ARE IN THE FOLLOWING GROUPS:
 - 0-99 PARTS ON THE CIRCUIT BOARD. 100-199 PARTS IN THE TUNER
- REFER TO THE CHASSIS PHOTOGRAPHS AND CIRCUIT BOARD X-RAY VIEW FOR THE PHYSICAL LOCATION OF PARTS.
- 3. ALL RESISTORS ON THE CIRCUIT BOARD ARE 1/2 WATT. RESISTOR VALUES ARE IN OHMS (K= 1000, M= 1,000,000).
- 4. ALL CAPACITOR VALUES LESS THAN 1 ARE $\mu F.$ VALUES OF 1 AND ABOVE ARE IN pF UNLESS MARKED OTHERWISE.

- 5. THIS
 TAKEN WI
 TO CHASS
 IS IN THE
 CLOCKWI
- 6. THIS
 TAKEN WI
 CONTROL
 - 7. A THIS
 TAKEL
 CONTROL
 RECEIVED
 - 8. TINDI
- 9. 📥 INDI
- THAT THE

