


MIX
X₁ 2T73

IF1
X₂ 2T76

IF2
X₃ 2T76

AF1
X₄ 2T65

AF2
X₅ X₆ 2T65 * 2

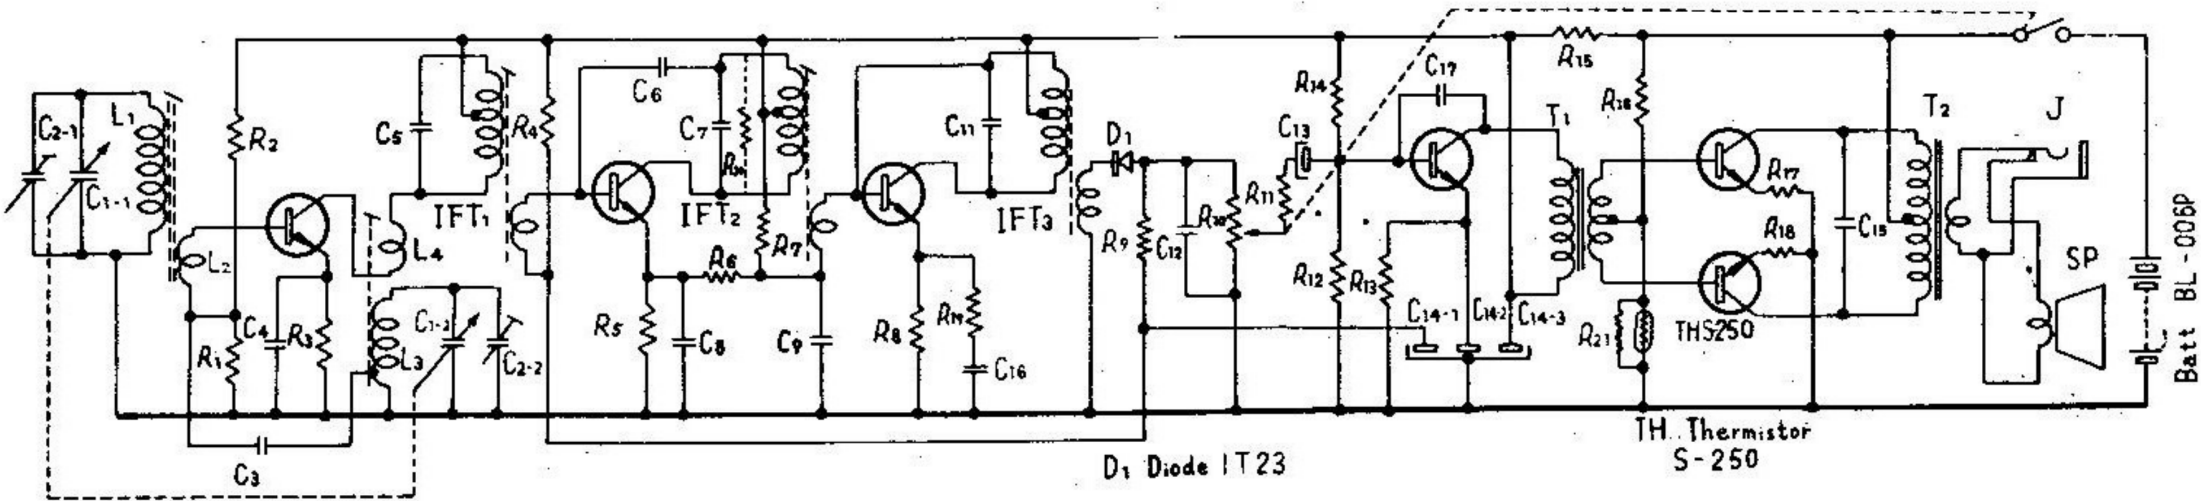

Note : * Adjusting Resistors
C₁₄₋₁₅ not in use

L ₁ L ₂	Antenna Coil	R ₁	8.2KΩ ± 5% 1/4W	R ₁₀	470Ω ± 20% 1/4W	R ₁₁	220Ω ± 20% 1/4W	C ₁₁	200pF (inside IFT)
L ₂ L ₃	Oscillator Coil	R ₂	*110KΩ ± 20%	R ₁₂	8.2KΩ ± 10%	C ₁	RVC-2 M. Tuning Cap. Trimmer	C ₁₂	0.02μF
IFT ₁	LF Trans.	R ₃	1.5KΩ ± 50%	R ₁₃	1.5KΩ ± 20%	C ₂		C ₁₃	10μF 3V
IFT ₂		R ₄	*130KΩ ± 20%	R ₁₄	27KΩ	C ₃	0.01μF	C ₁₄₋₁	20μF 10V Block
IFT ₃		R ₅	470Ω	R ₁₅	220Ω	C ₄	0.005μF	C ₁₄₋₂	
T ₁	Input Trans.	R ₆	1.5KΩ	R ₁₆	7.5KΩ ± 10%	C ₅	200pF (inside IFT)	C ₁₄₋₃	
T ₂	Output Trans.	R ₇	33KΩ ± 10%	R ₁₇	22Ω ± 20%	C ₆	2pF	C ₁₅	0.04μF
J	Earphone Jack	R ₈	470Ω ± 20%	R ₁₈	22Ω	C ₇	200pF (inside IFT)	C ₁₆	0.005μF
SP	2 1/4" P.D. Speaker 8Ω	R ₉	8.2KΩ ± 10%	R ₁₉	150Ω	C ₈	0.02μF	C ₁₇	100pF
		R ₁₀	5KΩ VR with Switch	R ₂₀	220KΩ	C ₉	0.005μF	B	BL-006P 9V