

MODIFICATION SHEET

FLEETWOOD RADIO

MODELS 1061A-B

NOTE: This sheet should be read in conjunction with the service data sheet for Model 1061A.

MODEL 1061A.

A change in respect of the back bias resistor was made to this version. Details are:—

R13 changed value from 75 ohms to 47 ohms
½W 10%.

R16 changed value from 200 ohms to 220 ohms
½W 10%.

Voltage drop across R13, -2 volts.

For circuit diagram refer Model 1061A service data.

MODEL 1061B.

Model 1061B is the same as Model 1061A except for a change in I.F. transformers. Details are:—


L5	8.0-9.0 ohms	{	1st I.F.T.	A3.126.84
L6	4.7-5.2 ohms			
L7	8.0-9.0 ohms	{	2nd I.F.T.	A3.126.84
L8	4.7-5.2 ohms			

I.F. channel alignment procedure is the usual procedure of peaking slugs in normal succession, i.e., 2nd I.F.T. sec., 2nd I.F.T. prim., 1st I.F.T. sec., 1st I.F.T. prim.

Circuit details are as shown overleaf.

FLEETWOOD

DIVISION OF PHILIPS ELECTRICAL INDUSTRIES PTY. LIMITED

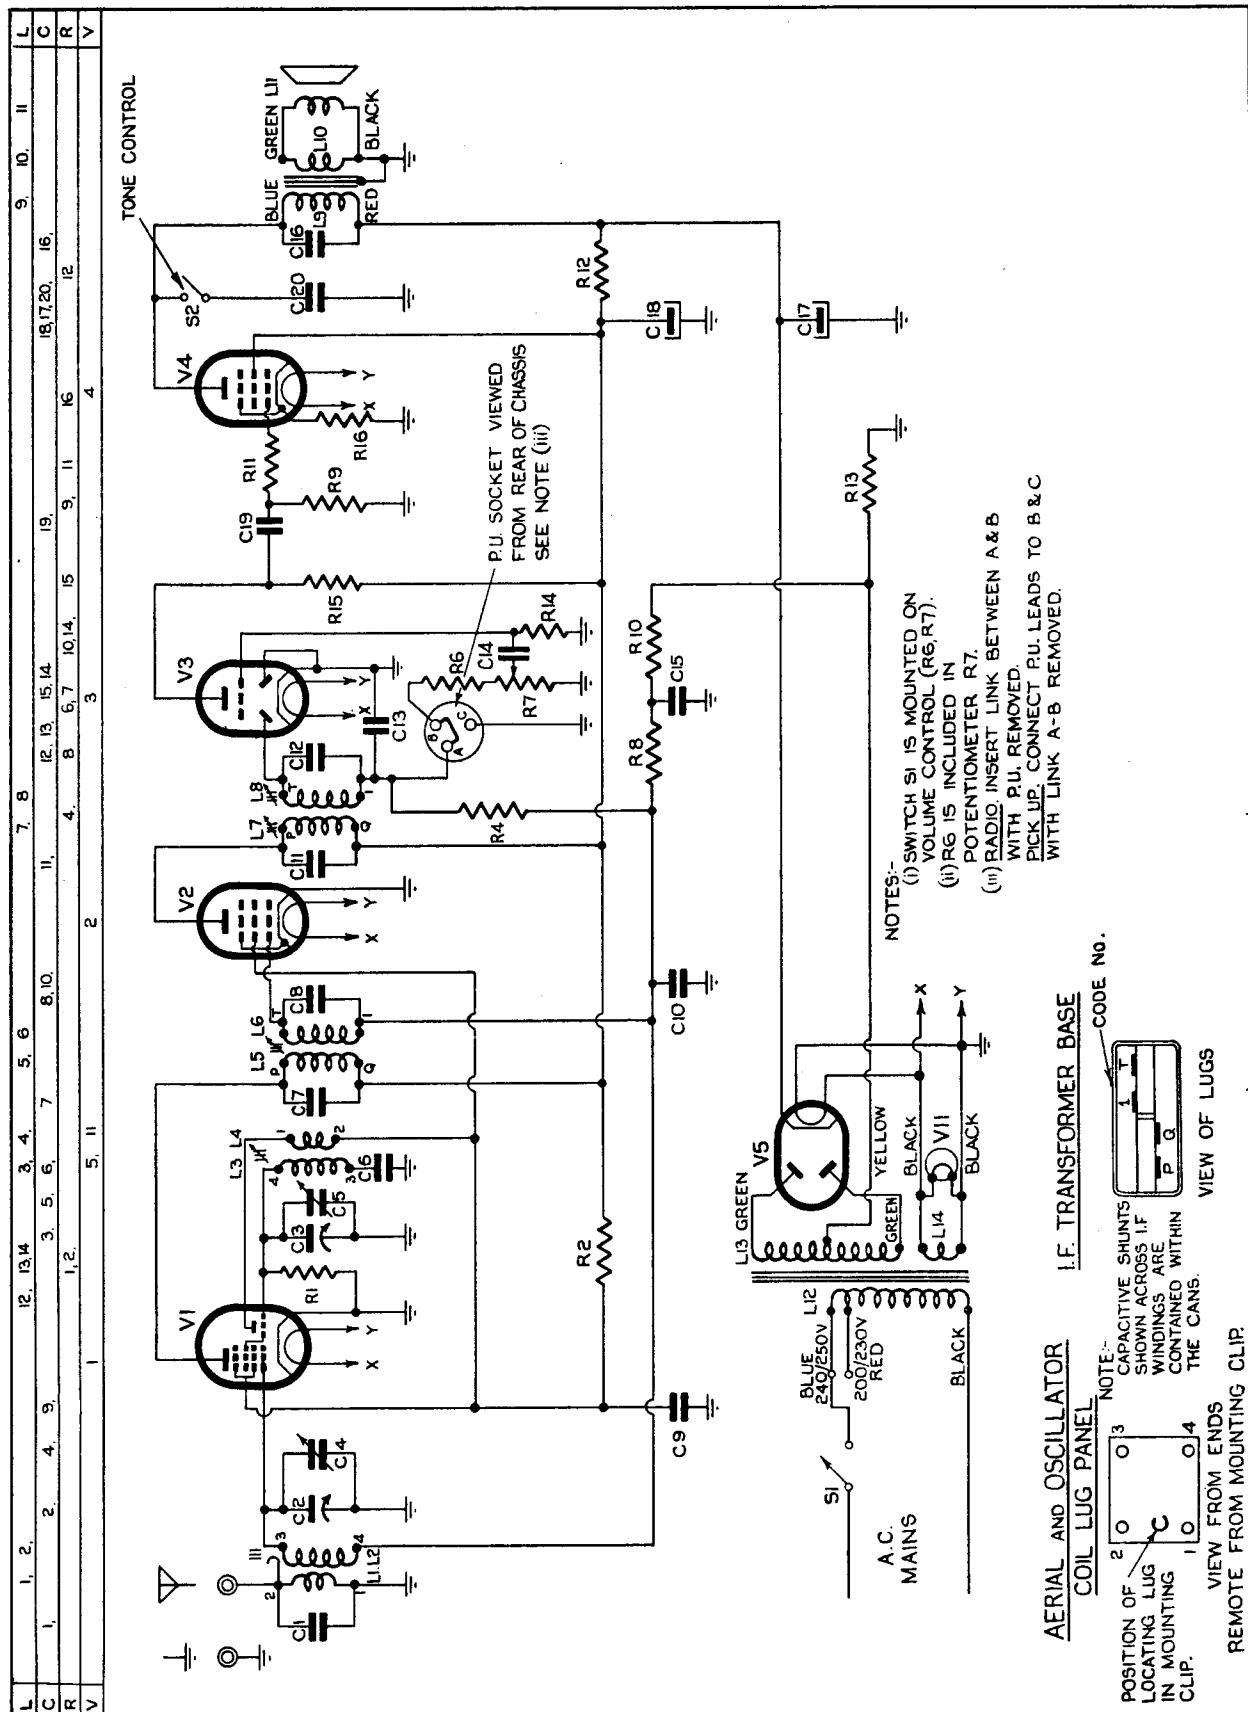


FLEETWOOD RADIO

MODEL 1061A

SPECIFICATIONS

(Subject to alteration without notice)

Power Supply	200-250V, 40-50 c/s.
Tuning Range	530-1620 kc/s.
Intermediate Frequency	455 kc/s.
Cabinet	Bakelite mantel

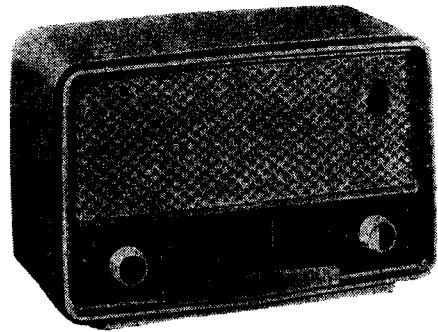

VALVE EQUIPMENT AND VOLTAGE ANALYSIS

Valve Function	Valve No.	Valve Type	Plate Volts	Screen Volts	Osc. P. Volts	Bias Volts				
Frequency Converter	V1	6AN7	223	40	40	—				
I.F. Amplifier	V2	6BH5	223	40	—	—				
Audio Amplifier, A.V.C. and Demodulator	V3	6BD7	55	—	—	—				
Power Amplifier	V4	6M5	221	223	—	6.5				
Rectifier	V5	6V4	Cathode — L13 C.T., -239V.							
Dial Lamp	V11	6.3V, 0.32A tubular screw								
Voltage across R13, -2.7V.										

NOTE: These voltages are measured with an "1,000 ohms per volt" meter and may vary \pm 10% from the figures quoted. They are measured from the socket points indicated to chassis, or across the resistor listed. The receiver should be in a "no signal" condition.

TO REMOVE CHASSIS FROM CABINET.

Remove the power plug from the wall outlet socket. Pull the control knobs from their spindles. Remove the combined back and bottom cover. Unsolder the speaker voice coil connections from the lug strip alongside the output transformer. Unwind the dial cursor from the dial drive cord.

The chassis is held to the cabinet by two screws at the rear. Removal of the two screws and the associated mounting brackets and packing pieces allows the chassis to be withdrawn from the cabinet leaving the speaker and dial scale in the cabinet.

The chassis may be replaced by a reversal of the above procedure.

DIAL SCALE REMOVAL.

The dial scale is removed from the front of the cabinet. The control knobs must first be removed. In removing the dial scale securing screws, care must be taken to ensure that damage is not caused to the scale by tools. The best tool to use is a 9/32" spintite blinded off so that its face does not touch the scale.

ALIGNMENT.

By making use of short length tools, alignment can be undertaken with the chassis in the cabinet.

I.F. transformer adjustments are:—

2nd I.F.T.—

Secondary — front screw

Primary — rear screw

1st I.F.T.—

Secondary — screw nearer 6N8

Primary — screw nearer 6AN7

Before commencing R.F. alignment, fully close the tuning capacitor and set the dial cursor to the stop mark which will be found at the bottom of the dial scale at the low frequency end. Use an 100 pF capacitor as dummy aerial for R.F. alignment. Trimming adjustments are: oscillator trimmer (1,420 kc/s, 3XY) front of tuning capacitor, aerial trimmer (1,420 kc/s) rear of tuning capacitor, padding (600 kc/s, 7ZL) iron core in oscillator coil.

In the event of replacement of the oscillator coil, it is advisable to make a preliminary peaking of the iron core at 600 kc/s before commencing alignment.

No attempt should be made to adjust the aerial coil iron core.

MAINS VOLTAGE ADJUSTMENT.

The power transformer is provided with two primary winding tappings—200/230 volts and 240/250 volts—for adjustment of the receiver to the supply voltage at the point of installation. The receiver is adjusted at the factory to the 240/250 volts tapping.


DIAL CALIBRATION ADJUSTMENT.

If dial calibrations are incorrect over the dial scale by an equal amount, the error can be corrected by sliding the cursor on the dial cord to the correct position.

MISCELLANEOUS COMPONENTS



No. on Dial Cord Layout Drawing	Description	Code No.	No. on Dial Cord Layout Drawing	Description	Code No.
7	Assembly, cursor	CR.480.662	—	Clip, spring (I.F.T. mtg.), 2x	A3.652.58
—	Assembly, lampholder	CZ.367.920	4	Cord, dial drive	37" of cord required
—	Badge, Fleetwood	CR.531.420	1	Drum, dial	CS.359.806
—	Bracket, cabinet back mtg., 3x	CS.244.602	—	Knob, control, 2x	CR.523.715
—	Cabinet— Blue	CR.573.403	—	Prism, dial scale	23.678.74
—	Burgundy	CR.573.402	5	Pulley, dial	CS.359.602
—	Green	CR.573.404	6	Ring, dial cord	CS.281.807
—	Ivory	CR.573.401	—	Scale, dial	CS.412.393
—	Walnut	CR.573.400	—	Screw, dial scale mtg., 2x	CS.258.852
			3	Spindle, tuning	CS.351.358
			2	Spring, dial drum	CS.210.029
			—	Spring, knob retaining, 2x	CS.281.832
			—	Switch, T/C	CZ.222.007

*DIAL CORD LAYOUT
VIEW FROM FRONT OF CHASSIS.*

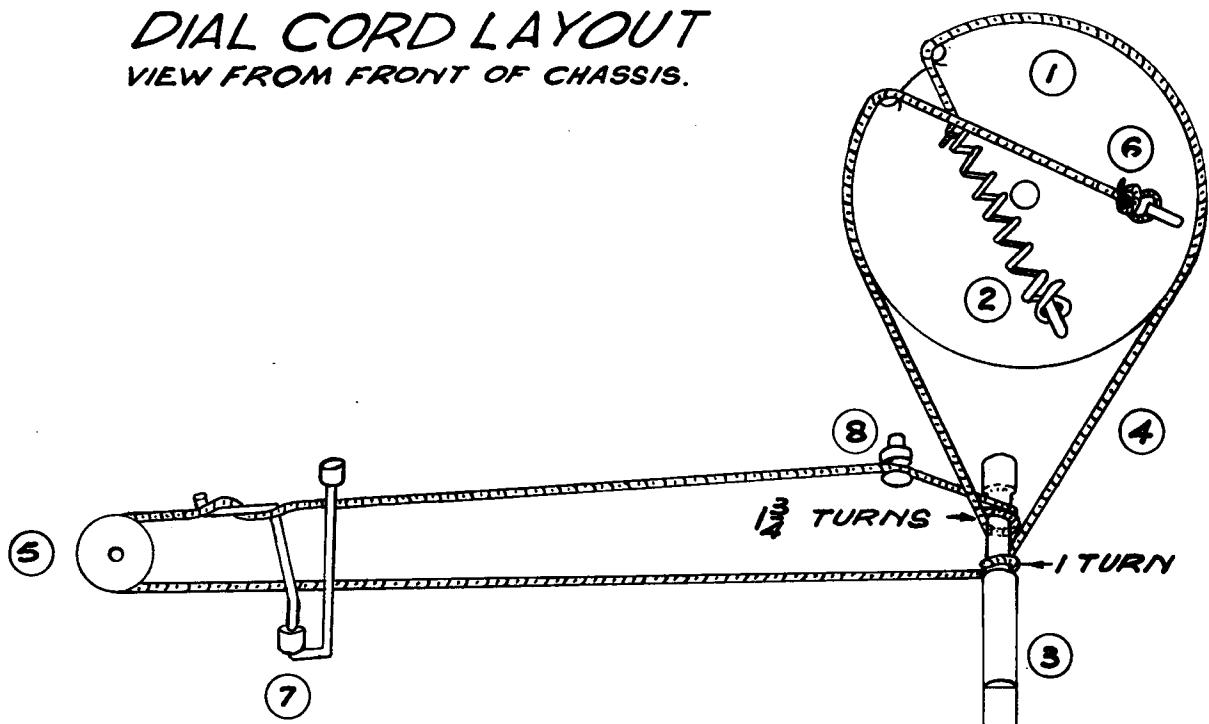

L	1.	2.	3.	4.	5.	6.	7.	8.	9.	10.	11.	12.	13.	14.	15.	16.	17.	18.	19.	20.	21.
C	1.	2.	3.	4.	5.	6.	7.	8.	9.	10.	11.	12.	13.	14.	15.	16.	17.	18.	19.	20.	21.
R	1.	2.	3.	4.	5.	6.	7.	8.	9.	10.	11.	12.	13.	14.	15.	16.	17.	18.	19.	20.	21.
V	1.	2.	3.	4.	5.	6.	7.	8.	9.	10.	11.	12.	13.	14.	15.	16.	17.	18.	19.	20.	21.

TONE CONTROL

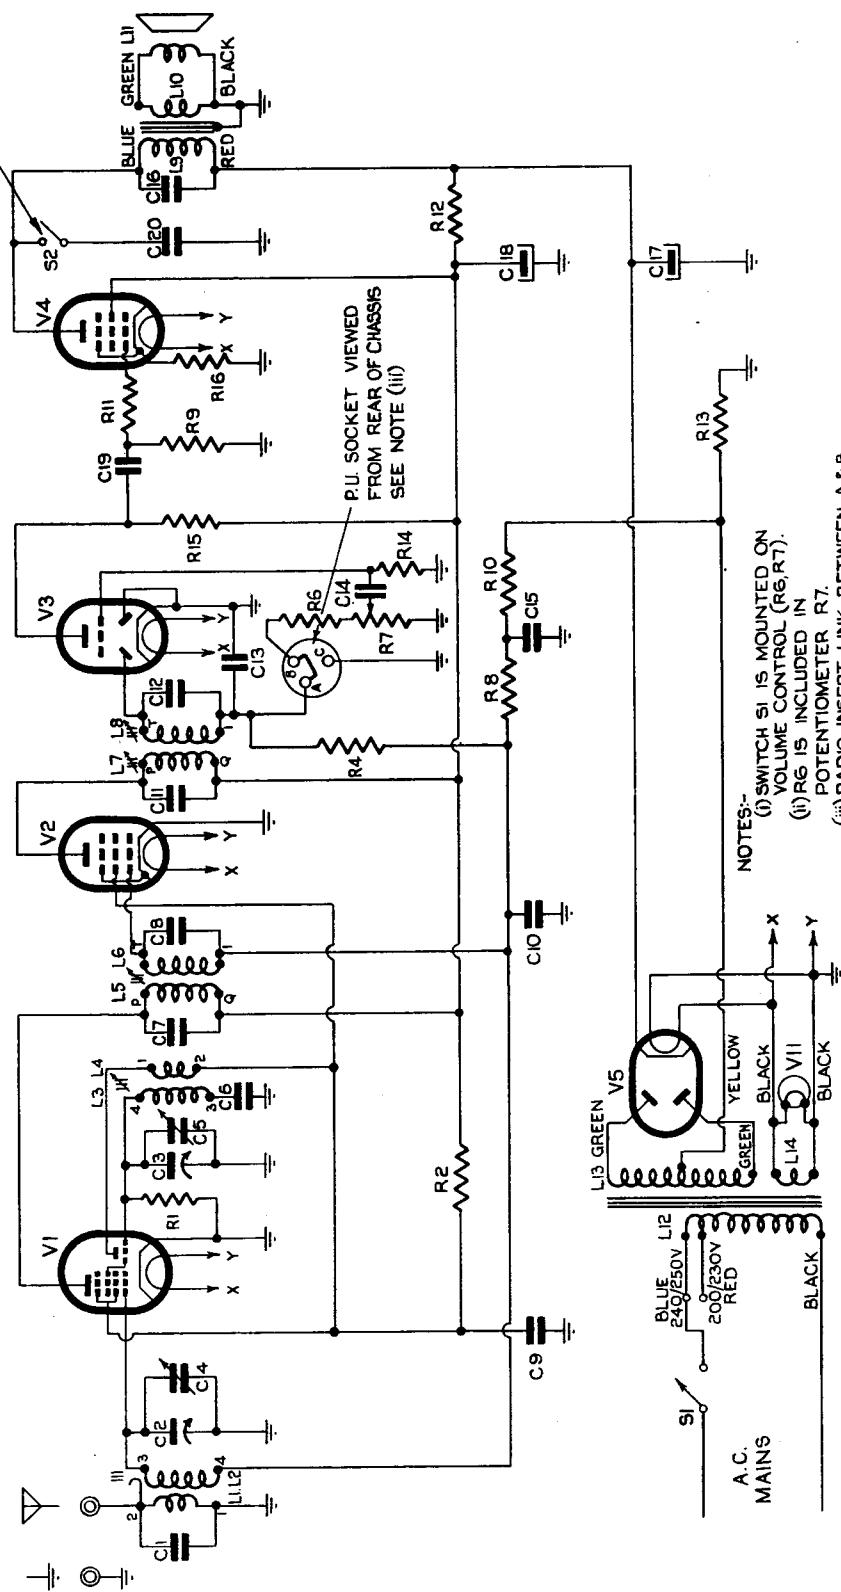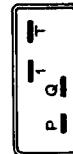AERIAL AND OSCILLATOR COIL LUG PANELI.F. TRANSFORMER BASE

NOTE:-
CAPACITIVE SHUNTS
SHOWN ACROSS I.F.
WINDINGS ARE
CONTAINED WITHIN
THE CANS.

POSITION OF LOCATING LUG IN MOUNTING CLIP.
VIEW FROM ENDS
REMOTE FROM MOUNTING CLIP.

PARTS LISTS

SERVICE DATA

1061A

CAPACITORS

No.	Description	Code No.	No.	Description	Code No.	No.	Description	Code No.
C1	100 pF mica,	R1	22,000 ohms $\frac{1}{2}$ W carbon	L1	24.0-32.5	L2	2.0-3.0	CZ.323.019
C2, 3, 4, 5	2 gang tuning with trimmers	R2	47,000 ohms 1W carbon	L3	1.0-2.0	L4	3.5-5.0	CZ.330.606
C6	330 pF mica 2%	CZ.066.124	R4, 10	3.3 megohms $\frac{1}{2}$ W carbon	L5	11.5-15.5	L6	11.5-15.5
C7, 8, 11, 12	Part of I.F. transformers	R6, 7	0.5 megohm carbon potentiometer with stop at 0.1 megohm and S.P.S.T. switch	CZ.032.013	L7	11.5-15.5	L8	11.5-15.5
C9	0.05 mF 400V paper	R8	2.2 megohms $\frac{1}{2}$ W carbon	L9	{ Output transformer	L10	{ 7,000 ohms	Type EBG96
C10, 15	0.05 mF 200V paper	R9	1 megohm $\frac{1}{2}$ W carbon	L11	Speaker			Type SC, F87
C13	250 pF mica	R11	47,000 ohms $\frac{1}{2}$ W carbon	L12	55-75			
C14	0.02 mF 400V paper	R12	1,000 ohms 1W carbon	L13	630-850	L14	<1	CZ.344.084
C16	0.01 mF 600V paper	R13	75 ohms $\frac{1}{2}$ W W/W 10%					
C17, 18	24 mF 350V electrolytic	R14	10 megohms $\frac{1}{2}$ W carbon					
C19	0.005 mF 600V paper	R15	220,000 ohms $\frac{1}{2}$ W carbon					
C20	0.02 mF 600V paper	R16	200 ohms $\frac{1}{2}$ W W/W 10%					

All tolerances are 20% unless otherwise specified.

RESISTORS

COILS		
No.	Ohms	Description
L1	24.0-32.5	Aerial coil
L2	2.0-3.0	
L3	1.0-2.0	Oscillator coil
L4	3.5-5.0	
L5	11.5-15.5	1st I.F. transformer
L6	11.5-15.5	
L7	11.5-15.5	2nd I.F. transformer
L8	11.5-15.5	
L9	{ Output transformer	
L10		
L11		
L12	55-75	
L13	630-850	Power transformer
L14	<1	

IMPORTANT ! In ordering spare parts, quote CODE NUMBER of part and MODEL NUMBER of Receiver. In claiming free replacement under GUARANTEE, return defective part PROMPTLY and quote MODEL and SERIAL NUMBER of Receiver and DATE OF PURCHASE.

All tolerances are 20% unless otherwise specified.