


## FLEETWOOD RADIO

## MODEL FL5002A

## SPECIFICATIONS

(Subject to alteration without notice)

Power Supply .....	.....	.....	200/250V, 40-50 c/s
Tuning Ranges .....	.....	.....	530-1620 Kc/s
			4.7-9.2 Mc/s
			9.1-18.4 Mc/s
Intermediate Frequency .....	.....		455 Kc/s
Cabinet .....	.....	.....	Radiogram
Record Changer .....	.....	.....	Philips type AG1014

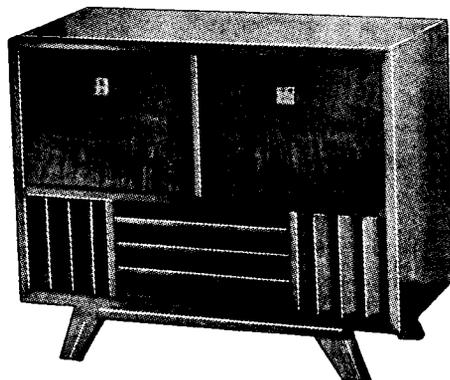

## VALVE EQUIPMENT AND VOLTAGE ANALYSIS

Valve Function	Valve No.	Valve Type	Plate Volts	Screen Volts	Osc. P. Volts	Bias	
Frequency Converter	V1	6AN7	205	57	48		
I.F. Amplifier	V2	6BH5	205	57			
Demodulator, A.V.C. and Audio Amplifier	V3	6BD7	62	—			
Push Pull Power Amplifier	V4	6M5	260	205		-6.4	
Push Pull Power Amplifier	V5	6M5	260	205		-6.4	
Rectifier	V6	6V4	252/252V A.C.				
Dial Lamps	V11, V12	6.3V, 0.32A tubular screw					
Unfiltered B+ 265V.							
Filtered B+ 205V.			Filaments 6.35V.				

NOTE: These voltages are measured with an "1,000 ohms per volt" meter and may vary  $\pm 10\%$  from the figures quoted. They are measured from the socket points indicated to chassis or across the resistor listed. The receiver should be in a "no signal" condition.

## TO REMOVE CHASSIS FROM CABINET

Remove the power plug from the mains outlet socket. Remove the four control knobs (a firm pull is all that is necessary). Unscrew the cabinet back and release aerial/earth terminal panel, also unclip the leads from inside the cabinet. Withdraw the pick-up, speaker and grammo. unit plugs from their respective sockets. Removal of the two securing bolts at rear of chassis and also the two dial back plate support screws (upper) will now allow withdrawal of chassis complete with dial scale. When refitting, care should be taken to see that the front edge of the side chassis flange engages under the lip of the front mounting bracket.

## MAINS VOLTAGE ADJUSTMENT

The power transformer is provided with two mains voltage tappings on the primary winding—200/230 volts and 240/250 volts—for adjustment to the supply voltage at the point of installation. The receiver is adjusted at the factory to the 240/250 volts tapping.

## DIAL CALIBRATION

In the event of an equal calibration error over the entire dial scale, the dial cursor can easily be moved on the dial drive cord to correct the error.

## ALIGNMENT

Set volume control to maximum and tone control to central position. With the tuning capacitor fully closed, set the dial cursor on the 120 mark of the relocation scale.

## I.F. Alignment

Alignment procedure of the I.F. channel is as under:—  
Screw out iron core of 2nd I.F.T. primary (nearer

6BH5) as far as possible. Adjust iron cores at 455 Kc/s for maximum output in the following sequence—

- Peak secondary of 2nd I.F.T. (nearer 6BD7).
- Peak secondary of 1st I.F.T. (nearer 6BH5).
- Peak primary of 1st I.F.T. (nearer 6AN7).
- Peak primary of 2nd I.F.T. (nearer 6BH5).

Do not repeat any adjustments.

## R.F. Alignment

The trimmer layout drawing is shown as an inset on the circuit diagram drawing.

B/C band alignment frequencies are: 1,420 Kc/s, 3XY (oscillator and aerial trimmers), and 600 Kc/s, 7ZL (slug padding with gang rocking). In short wave alignment SW2 band (4.7-9.2 Mc/s) should be completed before attempting alignment of SW1 band. The oscillator operates on a frequency above signal frequency so that of the two signals tunable on the receiver the higher frequency one is correct.


On SW2 band (4.7-9.2 Mc/s) alignment frequencies are: 4.825 Mc/s (114 on relocation scale), (oscillator coil slug) and 8.9 Mc/s (16 on relocation scale), (oscillator and aerial trimmers). Rock the tuning gang while adjusting the aerial trimmer.

SW1 band (9.1-18.4 Mc/s) alignment frequency is 17.8 Mc/s (small green triangle), (oscillator and aerial trimmers, rock gang while adjust aerial trimmers). Calibration should be checked at 9.65 Mc/s (small green triangle).

Do not attempt to adjust the iron cores of the aerial coils.

### MISCELLANEOUS COMPONENTS

No. on Dial Cord Layout Drawing	Description	Code No.	No. on Dial Cord Layout Drawing	Description	Code No.
6	Assembly, cursor	CR.480.664	—	Plug, male (gramo. unit power)	CZ.365.115
—	Assembly, lampholder, x2	C/F 733-5-4	—	Plug, 2 pin polarised (speaker and pick-up)	C/F 691-5-1
3	Assembly, tuning spindle	CR.371.223	5	Pulley, dial (large)	CS.359.618
—	Badge	CR.531.421	2	Pulley, dial (small), x2	CS.359.617
—	Bank, W/C switch (aerial)	CZ.200.060	—	Scale, dial	CS.412.395
—	Bank, W/C switch (osc.)	CZ.200.061	—	Socket, female (gramo. unit power)	CZ.365.116
—	Clip, spring (knob), x4	CS.281.832	—	Socket, 2 pin polarised (speaker and pick-up)	C/F 733-16-1
—	Clip, spring (I.F.T. mtg.), x2	A3.652.58	—	Socket, valve (noval), x6	C/F 733-2-14
4	Cord, dial drive	69" of cord required	7	Spring, cursor	CS.212.016
1	Drum, dial	CS.360.006	—	Spring, dial cord	CS.210.043
—	Knob, control, x4	CR.523.714			

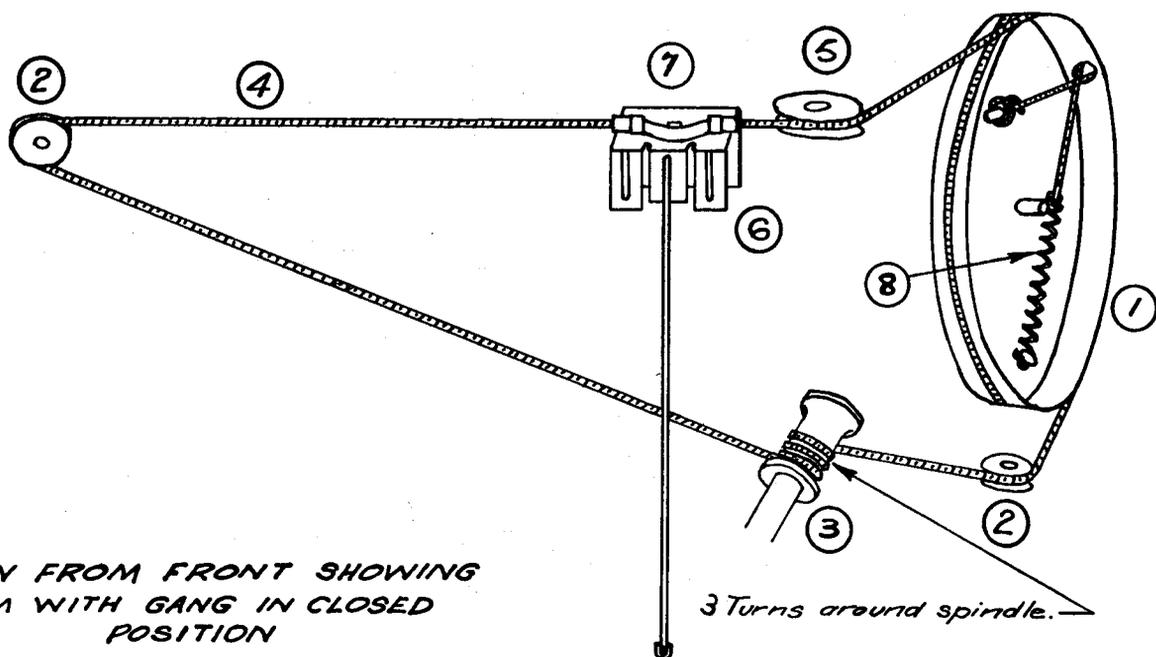

*VIEW FROM FRONT SHOWING DRUM WITH GANG IN CLOSED POSITION*


*3 Turns around spindle.*

Published by

**FLEETWOOD**

DIVISION OF PHILIPS ELECTRICAL INDUSTRIES PTY. LIMITED

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50

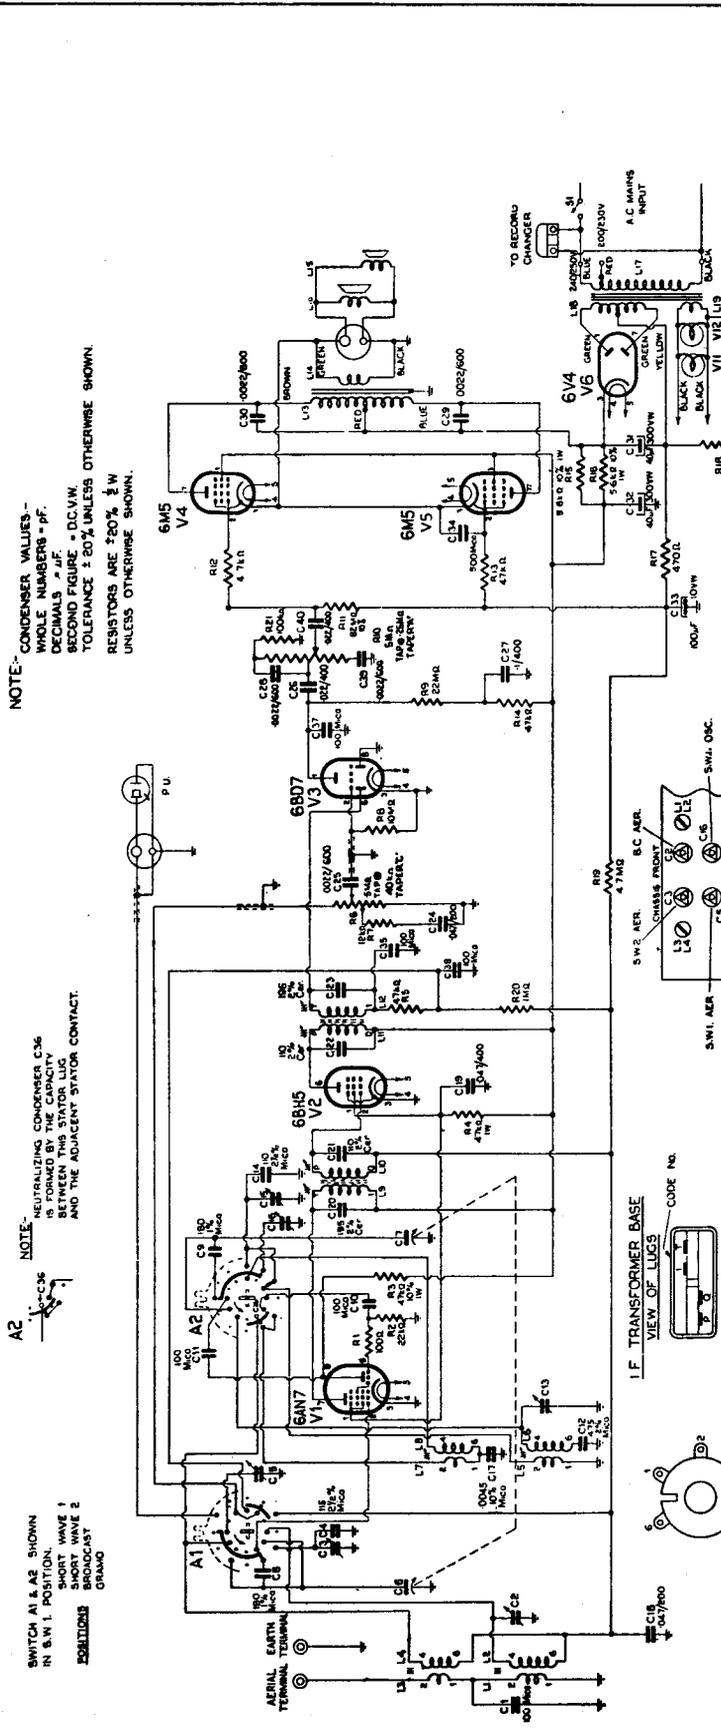

**NOTE:** CONDENSER VALUES—  
 WHOLE NUMBERS = PF.  
 DECIMALS = μF.  
 SECOND FIGURE = DC.V.V.  
 TOLERANCE ± 20% UNLESS OTHERWISE SHOWN.  
 RESISTORS ARE ±20% ±W  
 UNLESS OTHERWISE SHOWN.

**NOTE:**  
 NEUTRALIZING CONDENSER C16  
 IS FORMED BY THE CAPACITY  
 BETWEEN THE GRID OF V3  
 AND THE ADJACENT STATION CONTACT.


**NOTE:**  
 SWITCH A1 & A2 SHOWN  
 IN S.W.T. POSITION.  
 SHORT WAVE 1  
 BROADCAST 2  
 GRAMO

**NOTE:** SWITCH S1 MOUNTED ON  
 VOLUME CONTROL (R4)


### VOLTAGE ANALYSIS

VALVE	PLATE	SCREEN	OSC. PL.	BIAS
No.	VOLTS	VOLTS	VOLTS	VOLTS
V1	205	57	45	UNFIL. B+
V2	205	57		
V3	62			FIL. 0+
V4	250	205		-6.4 W
V5	250	205		FIL. 6.3E
V6	250	205		FIL. 6.3E
				Refer to 300V B000V Indicator BY DCME

All voltages measured from chassis.

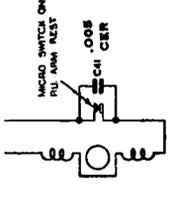


RECORD CHANGER

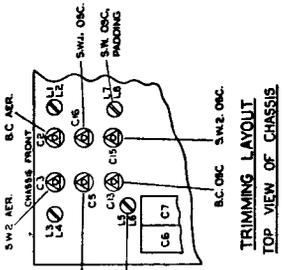


TRIMMING LAYOUT  
 TOP VIEW OF CHASSIS

**NOTE:**  
 PRIMARY AND SECONDARY WINDINGS  
 ARE NOT SYMMETRICAL. CORRECT  
 CONNECTION AS SHOWN IS ESSENTIAL.

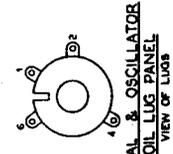

AERIAL & OSCILLATOR  
 COIL LUG PANEL  
 VIEW OF LUGS



IF TRANSFORMER BASE  
 VIEW OF LUGS

CODE NO.

# PARTS LIST

## CAPACITORS

No.	Description	Code No.
C1, 10, 11, 35, 37, 38	100 pF mica	
C2, 3, 5, 15, 16	30 pF air trimmer	CZ.113.700
C4	115 pF mica 2½%	CZ.066.138
C6, 7	2 gang tuning	CZ.107.755
C8, 9	180 pF mica 1%	CZ.065.722
C12	475 pF mica 2%	CZ.066.119
C13	60 pF air trimmer	49.055.58
C14	110 pF mica 2½%	CZ.066.140
C17	0.0045 mF mica 10%	
C18, 24	0.047 mF 200V paper	
C19	0.047 mF 400V paper	
C20, 21, 22, 23	Part of I.F. transformers	
C25, 28, 29, 30, 39	0.0022 mF 600V paper	
C26, 40	0.022 mF 400V paper	
C27	0.1 mF 400V paper	
C31, 32	40 mF 350V electrolytic	
C33	100 mF 10V electrolytic	
C34	500 pF mica	
C36	In-built neutralising capacitor—refer circuit diagram drawing	
C41	0.005 mF ceramic (anti-click capacitor)	

All tolerances are ± 20% unless otherwise specified.

## RESISTORS

No.	Description	Code No.
R1	100 ohms ½W W/W	
R2	22,000 ohms ½W carbon	
R3	47,000 ohms 1W carbon 10%	
R4	47,000 ohms 1W carbon	
R5, 13, 14	47,000 ohms ½W carbon	
R6	0.5 megohm carbon potentiometer tapped at 40,000 ohms with S.P.S.T. switch	CZ.032.016 (volume)
R7	12,000 ohms ½W carbon 10%	
R8	10 megohms ½W carbon	
R9	0.22 megohm ½W carbon	
R10	0.5 megohm carbon potentiometer tapped at 0.25 megohm (tone)	CZ.029.150
R11	0.82 megohms ½W carbon 10%	
R12	4,700 ohms ½W carbon	
R15, 16	5,600 ohms 1W carbon 10%	
R17	470 ohms ½W carbon	
R18	100 ohms 1W W/W 10%	
R19	4.7 megohm ½W carbon	
R20	1 megohm ½W carbon	
R21	100,000 ohms ½W carbon	

All tolerances are ± 20% unless otherwise specified.

## COILS

No.	Ohms	Description	Code No.
L1	19.6-26.4	B/C aerial coil	CZ.323.026
L2	1.5-2.0		
L3	1.2-1.7	S/W aerial coil	CZ.323.027
L4	<0.5		
L5	0.8-1.2	B/C oscillator coil	CZ.330.613
L6	2.7-3.7		
L7	<0.5	S/W oscillator coil	CZ.330.614
L8	<0.5		
L9	4.7-5.2	1st I.F. transformer	A3.126.84
L10	8-9		
L11	8.3-9.2	2nd I.F. transformer	CZ.320.444
L12	4.7-5.2		
L13		Output transformer 15,000 ohms P-P	Type KOL40 CZ.345.040
L14			
L15		Speaker	Type 8H F76
L16		Speaker	Type 8H F76
L17	26-36	Power transformer	CZ.344.089
L18	315-425		
L19	<0.5		

**IMPORTANT! When ordering spare parts, quote CODE NUMBER of part and MODEL NUMBER of Receiver. In claiming free replacement under GUARANTEE, return defective part PROMPTLY and quote MODEL and SERIAL NUMBER of Receiver and DATE OF PURCHASE.**